

Heater

User Manual



 
 
**Model No. :
SHAG-G39F**

- **READ AND SAVE THESE INSTRUCTIONS.**
- **THIS HEATER IS INTENDED FOR USE IN HOUSEHOLD OR SIMILAR LOCATIONS ONLY.**

IMPORTANT INSTRUCTIONS

⚠ WARNING : When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, injury to persons and hyperthermia, including the following:

1. Before using the heater, read all instructions carefully and use it correctly.
2. Before use, check the heater's power cord and plug connection. A loose outlet can cause the plug to overheat or even result in a fire. Make sure the plug fits securely into the outlet.




3. This heater is not intended for use in bathrooms, laundry areas, or similar moist indoor locations. Never place the heater where it may fall into a bathtub or other water container.
4. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as electrical outlets, furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
5. **WARNING: DO NOT** use the heater if the glass surface is cracked.
6. **WARNING: DO NOT** cover the heater or cup warmer to prevent overheating.
7. **DO NOT** touch the front grille or cup warmer during use. Avoid touching while surface is still hot after use.
8. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust openings.
9. **DO NOT** block air intakes or exhaust in any manner.
10. **DO NOT** use on soft surface, like a bed, where openings may become blocked.
11. **DO NOT** run the cord under carpeting. **DO NOT** cover the cord with throw rugs, runners, or similar items. Arrange the cord away from traffic areas where it may cause tripping.
12. **DO NOT** place objects on the top to avoid accidentally triggering the buttons and causing hazards.
13. **DO NOT** use in environments with flammable or explosive materials or liquids.
14. **DO NOT** place metal items (knives, forks, spoons, lids) on the cup warmer's glass surface.

15. **DO NOT** heat unopened cans, food bottles, or carbonated beverages, as the pressure buildup may cause an explosion.
16. **DO NOT** heat food directly on the cup warmer to prevent oil ignition.
17. **DO NOT** move this heater while cups are placed on the cup warmer to prevent burns or spills.
18. **DO NOT** use the warmer with an empty or nearly empty cup to avoid dry burning.
19. **DO NOT** use plastic or paper containers on the cup warmer, as these materials may melt at high temperatures and cause a fire.
20. **DO NOT** operate the heater if the cord or plug is damaged, or if the unit malfunctions, has been dropped, or is otherwise damaged.
21. **DO NOT** allow children to use this heater unattended. Keep it out of reach of children.
22. **DO NOT** use the heater outdoors.
23. **DO NOT** disassemble, repair, or modify this heater if you are not a professional.
24. **CAUTION:** This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.
25. **WARNING:** Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
26. This heater is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the heater by a person responsible for their safety.
27. Children shall not play with the heater. Cleaning and user maintenance shall not be made by children without supervision.
28. Always unplug this heater when moving, cleaning, maintaining or not in use and wait until the heater is completely cool before doing these operations.
29. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

SAVE THESE INSTRUCTIONS.

 PARTS DESCRIPTION

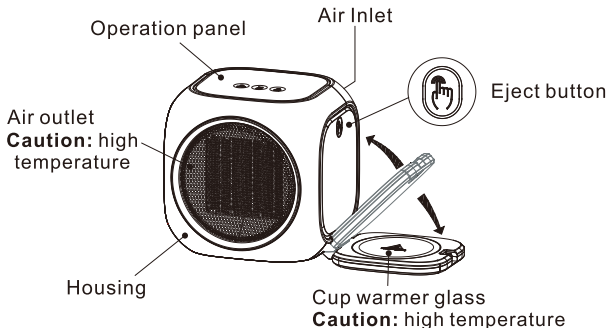

NOTE : In case of slight differences between the product image and the actual item, the actual item shall prevail

SPECIFICATIONS

Model NO.	SHAG-G39F	Voltage	120V~
Frequency	60Hz	Input Power	800W

FIRST-TIME USE

1. Before use, check that all parts are complete and intact. DO NOT use the heater if any part is damaged.
2. A slight odor during initial use is normal and will disappear after several uses. For those sensitive to odors, use the heater for the first time in a well-ventilated area.
3. Place the heater on a stable surface, away from power outlets and water sources.
4. When powered on, the heater enters standby mode. The "ON/OFF/SPEED" button flashes yellow, and all other buttons remain off.

OPERATION INSTRUCTIONS

Button	Function Description
 ON/OFF/ SPEED Button	SHORT PRESS : Low speed → High speed → Cycles continuously (yellow light on) (blue light on)
	LONG PRESS 1.5s : Power off All functions enter standby mode.
 HEATER Button	1. Warm air can only be turned on after the fan starts.
	SHORT PRESS : Warm air on → Warm air off → Cycles continuously (yellow light on) (light off)
 WARMER Button	1. Before warming, press the right button to eject the cup warmer. 2. Cup warming function can be independently operated.
	CUP PLACED : Low warming on → High warming on (yellow light on) (red light on) → Stop warming → Cycles continuously (light off)
	NO CUP : Low warming off → High warming off (yellow light flashing) (red light flashing) → Stop warming → Cycles continuously (light off)

NOTES :

- a) A “beep” sound will be heard when a button is operated.
- b) When the warm air function enters standby mode, the fan will continue to run at high speed for 10 seconds to dissipate residual heat.

OTHER FUNCTION DESCRIPTIONS

Applicable Cups	• Ceramic cups, heat-resistant glass cups, and stainless steel cups commonly used in daily life. • Cups with uneven bottoms, excessively thick bases, built-in insulation, or double-layer vacuum are not recommended as they may affect the warming performance.
Cup Diameter	• It is recommended to choose a flat-bottomed cup with a diameter similar to that of the cup warmer heating area (80mm) and place it within the glass plate to achieve the best warming effect.
Two Settings for Cup Warming	• This product is only suitable for keeping warm tea, coffee, milk and other liquid drinks. • If the cup contains boiling water, the temperature will gradually drop to 45-55°C. • If it contains cold water, it will gradually heat up to 45-55°C. • The final temperature may vary depending on the cup material, water volume, and whether the cup is covered. Low room temperature can also affect the water temperature. • If the drink is too hot on the high warming setting, switch to the low setting for the optimal drinking temperature.
12h Automatic Standby without Operation	• After powering on, the heater will automatically enter standby mode after 12 hours of inactivity by default. • The heater must be restarted to use again after automatic shutdown. • Any operation during this period will reset the 12-hour timer.
Overheat Protection	• This heater is equipped with an internal High Limit Switch which causes the unit to stop operating in the event the internal temperature exceeds normal operating temperatures. • Reset Instructions: Unplug the power cord, remove all obstructions, allow the product to cool for 30 minutes, then plug the power back in.

DISPOSAL

1. We encourage you to participate in electronics recycling program, so please observe local regulations for proper disposal of discarded electronic products.
2. Recycle raw material instead of disposing of as waste. The machine, accessories and packaging should be sorted for environmental-friendly recycling.

TROUBLE SHOOTING

NO.	Problem	Possible Cause	Solution
1	Heater not working	Power supply unplugged or poor contact.	Plug in properly and ensure firm contact.
		The heater has been tipped over or placed on an inclined surface.	Use on a flat, stable surface.
2	Blowing air but no heat	Overheat protection triggered.	Unplug the heater, remove all obstacles and allow the heater to cool for 30 minutes.
3	Cup warmer housing is hot	Prolonged or frequent use may cause the cup warmer housing to become hot.	This is normal and does not indicate a fault.
4	Suddenly stopped working	Operating over 12 hours.	Auto standby mode, this is normal.
5	Cup warmer won't auto-start after cup placed	Cup warmer indicator is off.	Restart the warming function.
		Some cups scatter infrared signals, preventing detection by the sensor.	Try rotating the cup slightly or replacing it.

1. The troubleshooting guide addresses the most common issues.
2. Please contact our company's service center or dealer if the issue cannot be solved still. Do not attempt to disassemble, repair, or modify this heater except by professionals.

CLEANING AND MAINTENANCE

1. Before moving, cleaning, maintaining, or storing the heater, always unplug the power cord and ensure the heater is completely cool.
2. Caution: Do not wash this heater directly with water or immerse it in water.
3. Clean the product surface dirt with a dry cloth. DO NOT use steel brushes, hard objects, or corrosive cleaners to avoid damaging the product surface or glass.
4. Regularly inspect the plugs, wires, and heater for any damage. Regularly clean the inlet and outlet grille to avoid blockage. Regularly clean the glass plate to prevent the dirt from affecting the effectiveness of the warming function.
5. When not used for a long time, clean the product thoroughly, place it back into the original packaging, and store it in a dry place.

1-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from manufacturing defects in the material and workmanship under normal use for a period of one year after the date of purchase by the original purchaser.

This warranty does not cover transit damages. This warranty does not apply to damages from accident, misuse, alteration of any kind to the heater or where the connected voltage is more than above the nameplate voltage. This warranty does not apply to the finish on any portion of the product. Servicing performed by unauthorized persons shall render the warranty invalid. The warranty is not responsible for damages of any kind, including accident and consequential damages. Some states do not allow the exclusion or limitation of the incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Questions, problems, missing parts? Before returning the product, please e-mail our customer service by

inquiry@hicfm.com

Made in China