



BIZEWO



DEHUMIDIFIER USER MANUAL

Customer Service

Thank you for choosing BIZEWO Dehumidifier and becoming our valued customer. We offer 24/7 after-sale service and lifetime support.

30-Day Return/Exchange Policy for Any Reason

You may return your undamaged product and packaging within 30 days of purchase to get a full refund for any reason. Please note that the customer must pay for the return shipping if the reason for the return is not quality-related.

24-Month Warranty for Quality-Related Issues

BIZEWO's products are Warranted to be free from material and workmanship defects under normal use for 24 months from the date of purchase. If there have any quality issues, BIZEWO will provide a replacement product within 24 months and will cover any return shipping costs for non-working products.


CONTENTS

PACKING LIST	01
SAFETY WARNINGS	02
PRODUCT OVERVIEW	05
SPECIFICATION	06
PANEL OVERVIEW	07
OPERATION INSTRUCTION	08
HOW TO EMPTY THE WATER TANK	11
HOW TO INSTALL THE WATER TANK COVER	13
CLEANING AND MAINTENANCE	14
TROUBLESHOOTING	15
WARRANTY	17


PACKING LIST 1



Dehumidifier x 1

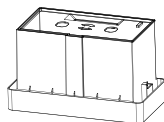

Water Tank x1

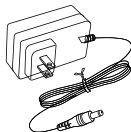

Adapter x1



Use Manual x1

2 SAFETY WARNINGS

1. Read all instructions before using this dehumidifier.
2. Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
3. To avoid the risk of electrical shock, fire or injury to people, always turn the appliance OFF, unplug the power cord from the electrical outlet and empty the water tank before handling, cleaning or servicing the appliance.
4. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
5. Children must be supervised not to play with the appliance. Children of less than 3 years should be kept away unless continuously supervised.
6. Always place the appliance in an upright position on a flat, stable surface.
7. The appliance must have a minimum 50cm clearance around all sides.
8. Do not cover or obstruct in any way the air inlets and outlets of the appliance.



SAFETY WARNINGS 3

9. Dispose of water collected from the dehumidifier. This water is not drinkable.
10. Do not use this appliance near water or in the immediate surroundings of a bath, a shower or a swimming pool.
11. Do not allow water or other liquids to run into the appliance, as this could create a fire and/or electrical hazard.
12. Do not use outdoors. This appliance is intended for indoor household use and similar applications.
13. Never insert fingers or metal objects into the vents and openings of the appliance.
14. Do not push any objects in the air inlet and outlet grills as this may cause an electric shock, fire or damage the appliance.
15. Do not use this appliance with an external programmer, timer switch or any other device which would switch the device on automatically unless this has already been pre-built into the appliance by the manufacturer.

4 SAFETY WARNINGS

16. Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.

17. Do not remove the water tank when the appliance is in use, this may cause water to leak.

18. Do not operate the appliance with the water tank removed.

19. Do not operate the appliance if there are signs of damage to the appliance, power cord, or any of the accessories.


20. The appliance should only be used with the adapter supplied.

21. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.

22. Do not attempt to repair or adjust any electrical or mechanical elements in the appliance. Doing so may be unsafe and will void your warranty.

23. Ensure that the mains supply (including voltage, frequency, and power) complies with the rating label of the appliance.


PRODUCT OVERVIEW 5

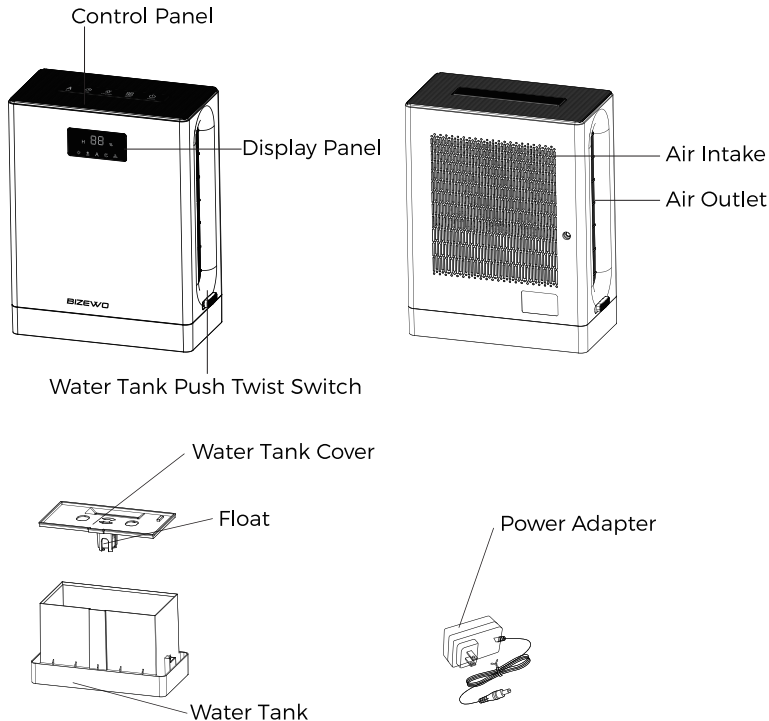

6 SPECIFICATION

Product Name	Dehumidifier
Model	DH-CS09
Tank Capacity	3L
Rated Power	47W
Rated Voltage	18V
Item Dimensions	248*130*323mm
Power Cord Length	1.63m/5.34ft
Net Weight	2258g

PANEL OVERVIEW 7

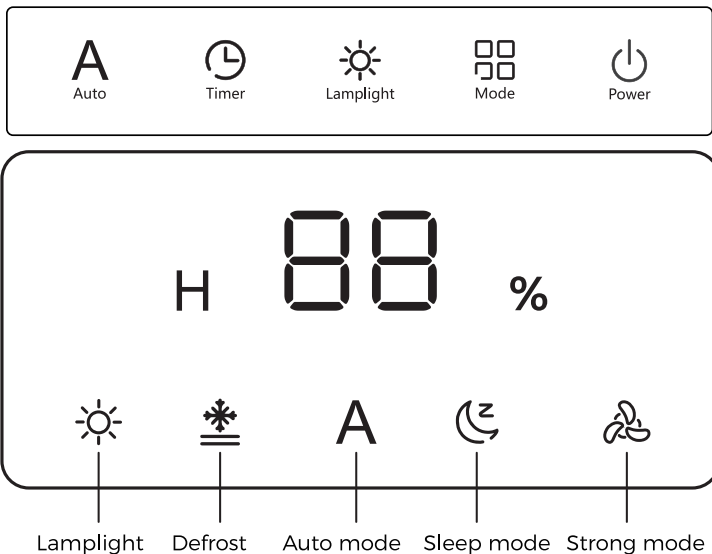

8 OPERATION INSTRUCTION

Before use, please ensure all parts are completed and undamaged prior to use.

The product is powered on with one short "BEEP", the product display value lights up "---", and continues to flash, the product is in standby mode.

1.Power Button

When the dehumidifier is plugged in, Tap "  " to turn on the device. The appliance will start working with one short "BEEP". Tap "  " again to turn OFF the device.

2.Timer Button

Touch the "  " button , When the product starts 8H timing, the indicator of 8H lights up. Touch the button again to switch to 12H timing, the indicator of 12H lights up, and the timing interval(0H-8H-12H-24H-36H-48H) continues to cycle. When the device is on, tap the "  " button to select 0, 8, 12, 24, 36 or 48 hours timer off.

OPERATION INSTRUCTION 9

3.Light Button

When the dehumidifier starts working, the ambient light will come on and gradually change to 7 colours. Press "  " again to lock in the desired colour and finally press to switch off the light.

4.Mode Button

When the dehumidifier starts to work, the default mode is the strong mode and at the same time the water tank lights up with colorful gradient LED light and the product starts to operate. After operation, touch the "  " button to switch to sleep mode, sleep mode to turn off the water tank atmosphere lamp; Touch switches to powerful mode again, In this cycle.

Tap this button to choose Turbo Mode or Sleep Mode

Turbo Mode, the fan will work in the high speed

Sleep Mode, the fan will work in the low speed

5.Auto Button

Touch the "  " button;

Enable the automatic dehumidification mode: The initial humidity is 40%; Tuch the "  " button again, Setting humidity can be adjusted, humidity adjustment range: (40%-45%-50%-55%-60%-65%-70%)

10 OPERATION INSTRUCTION

Note:

- 1.In automatic mode, the machine will stop working when it reaches the set humidity and resume working when the humidity rises.
- 2.The comfortable humidity range for human body is between 45% and 55%.

6.Defrost Indicator

If the internal is frost , the defrost function will automatically trigger to protect the unit the icon " ❄ " will light up. After defrosting, the dehumidifier will work again, the icon " ❄ " disappears.

7.Memory Function

Once power on and start running, the dehumidifier can recover the mode setting, automatic constant humidity and lighting before shutdown.

8.Overflow Protection

When the bucket full of water, the machine will turn off automatically. The Atmosphere lamp will flash red light, After you empty the water from the bucket the Atmosphere lamp will turn off. After being put into the tank, the machine needs to be restarted to work.

HOW TO EMPTY THE WATER TANK 11

When the tank is full, the atmosphere lamp will flash red and the unit will turn off.

1. In the shutdown state, first fix the product and push the switch to the unlocking mark, as shown in Figure 1.
2. Pull the shell upward by hand as shown in Figure 2.
3. After opening the tank cover, drain the stored water, as shown in Figure 3.
4. Reinstall the housing and push the switch to the lock mark, as shown in Figure 4.

 


Figure 1

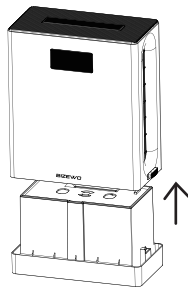


Figure 2

12 HOW TO EMPTY THE WATER TANK

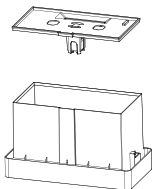


Figure 3

 


Figure 4

Note:

1. Do not remove the floater from the water tank. If the floater in the water tank is removed. The sensor may not be able to determine the water level stored in the tank properly that may lead to water overflow leak from the water tank.
2. After cleaning the water tank, insert it seamlessly with the body and keep two sides of the dehumidifier locked to rein in water spill.

HOW TO INSTALL THE WATER TANK COVER 13

1. Open the package and take out the water tank cover, as shown in Figure 5.
2. Align with the bulge of the water tank, and install the water tank cover, as shown in Figure 6.
3. Install the water tank cover, as shown in Figure 7.

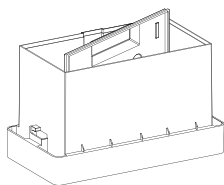


Figure 5

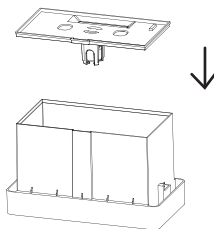


Figure 6

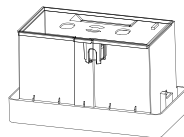


Figure 7

14 CLEANING AND MAINTENANCE

WARNING: Turn the dehumidifier OFF and remove the plug from the wall outlet before handling or cleaning it.

General Exterior Cleaning

Clean the exterior of the appliance, removing any dust or light debris by wiping it with a soft, dry cloth.

Water Tank Cleaning

WARNING: Never leave water in the water tank when the appliance is not in use. The water tank should be cleaned at least every week. If the water tank is dirty, just use cold water to clean it. Do not use detergent, steel wool chemically treated dust cloth, gasoline, benzene. Thinner or other solvents. Otherwise, it may damage the water tank and cause it to leak.

Storage

- 1.Ensure the appliance and water tank are clean and dry before storage.
- 2.To store your product out of season, we recommend using the original or similar size box.
- 3.Do not kink or wrap the power cord and plug around the appliance, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- 4.Store the appliance in a safe, clean and dry place when not in use.

TROUBLESHOOTING 15

If you encounter any of the following problems during the use of the dehumidifier, please do not worry and find the solution by category index.

Problem	Solution
Not Working	• Checking the power supply (plugs, wiring, etc.) • The water tank may be full or the tank may not be filled properly. Please empty the tank of recycled water. • Ambient humidity does not reach equipment operating levels. • The initial humidity setting of the dehumidifier is 40%. If the set humidity value is higher than the current humidity level detected by the appliance, the dehumidifier goes into standby mode. The current humidity level detected by the appliance is shown on the LED display. Press and hold the Auto button to set a value lower than the humidity level detected by the appliance. • It is possible that the dehumidifier has not been placed smoothly. Please place the dehumidifier smoothly.

16 TROUBLESHOOTING

Problem	Solution
Not Effective (Less water in the tank)	• The humidity may not be set properly. please set it properly. • The front and rear of the dehumidifier maybe obstructed, please remove the obstruction. • The dehumidification time may not be sufficient, please wait. • Doors and windows may be open, please close them. • The dehumidification capacity will be affected in a low temperature and low humidity environment. If the indoor temperature is lower than 8°C/46.4°F, the effect of dehumidification is not obvious). • Check that there are no other vapour release devices in the room.

WARRANTY 17

Product Name	BIZEWO Dehumidifier
Model	DH-CS09
Default Warranty Period	2 Years
For your own reference, we strongly recommend that you record your order ID and date of purchase.	
Date of Purchase:	
Order ID:	
If you would like to extend your warranty, please contact Customer Support (support@bizewohome.com)	

We appreciate your feedback and will do our best guarantee your satisfaction.

If you encounter any assistance during the warranty period, please contact Customer Support(**support@bizewohome.com**). Your inquiries will be taken care of as soon as possible.

This warranty does not cover normal wear of product and damage caused by misoperation of buyers.



Learn more about BIZWO, please visit us at:

www.bizwohome.com



Made in China



1-888-283-6836



support@bizwohome.com



www.bizwohome.com