 




# Betty Crocker™

## 4-SLICE Toaster Oven

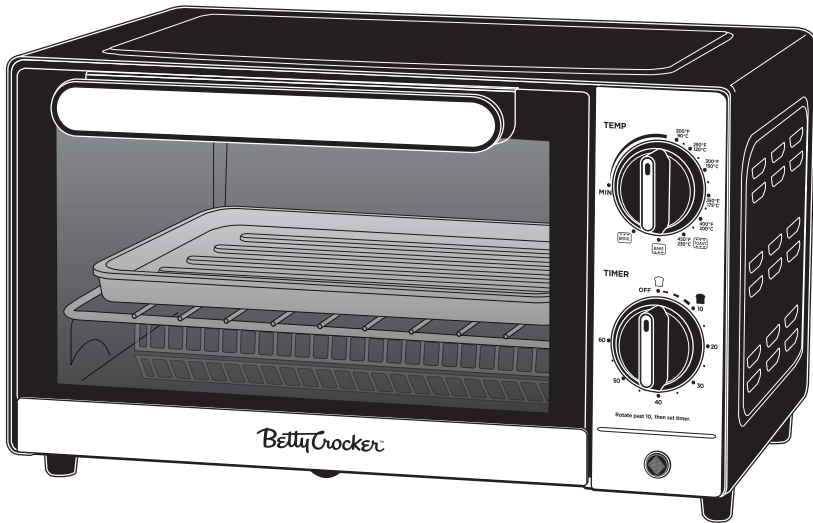

HOUSEHOLD USE ONLY

BC-5665B

# Table of Contents

Important Safeguards.....	3
Power Cord and Plug Information .....	4
Before Your First Use .....	5
Know the Parts of Your Toaster Oven .....	6
Using Your Toaster Oven .....	8
Tips for Using Your Toaster Oven .....	11
Choosing Bakeware for Use .....	12
Care and Cleaning .....	13
Limited Warranty One (1) Year .....	14
To Return for Service: .....	15
Replacement Parts .....	16

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

- 1. READ ALL INSTRUCTIONS CAREFULLY.**
2. Do not touch hot surfaces. Use handles or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse the cord, plug or any parts of the toaster oven in water or other liquid.
5. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service centre for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the toaster oven, keep at least 10 cm (4") of space on all sides of the toaster oven to allow for adequate air circulation.
10. Unplug the toaster oven from the electrical outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the Time Control to OFF, then remove the plug. Always hold the plug, but never pull the cord.
12. Do not cover the Crumb Tray or any part of the toaster oven with metal foil. This will cause overheating of the toaster oven.
13. Use extreme caution when removing the Baking Pan or disposing of hot grease or other hot liquids.
14. Do not clean the toaster oven with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Oversized foods or metal utensils must not be inserted into the toaster oven as they may cause electric shock or fire.
16. A fire may occur if the toaster oven is covered or is touching flammable material, including curtains, draperies or walls, when in operation. Do not store any item on the toaster oven during operation.
17. Extreme caution should be exercised when using containers constructed of materials other than metal or glass.

18. Do not place any of the following materials in the toaster oven: cardboard, plastic, paper, or anything similar.
19. Do not store any materials, other than manufacturers recommended accessories, in this toaster oven when not in use.
20. This appliance is off when Time Control Knob is in the OFF position.
21. Always wear protective, insulated oven mitts when opening and closing door, during use, and when inserting or removing items from the hot toaster oven.
22. This appliance has a tempered-glass safety door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching the door surface or nicking edges.
23. Do not operate the toaster oven with your face/eyes close to the safety tempered-glass door, in the event that the glass breaks.
24. Do not use outdoors.
25. Do not use the appliance for other than its intended use.
26. Never leave appliance unattended while it is plugged into an outlet.

---

## **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**

---

# **POWER CORD AND PLUG INFORMATION**

## **Power Cord Instructions**

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

## Polarized Plug

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

**WARNING:** Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

## BEFORE YOUR FIRST USE

Carefully unpack the 4-Slice Toaster Oven and remove all packaging materials. To remove any dust that may have accumulated during packaging, wash the rack and baking pan in warm, soapy water with a clean, soft cloth or sponge, or in the dishwasher. Ensure each piece is thoroughly dried before use. Wipe the exterior, interior and crumb tray of the 4-Slice Toaster Oven with a clean, damp cloth. Allow it to dry thoroughly. Do not use harsh detergents or abrasive cleansers on any part of the 4-Slice Toaster Oven.

 
**NOTE: Do not immerse the Toaster Oven, cord or plug in water or any other liquids.**

# KNOW THE PARTS OF YOUR TOASTER OVEN

Tempered Glass Door with Handle

Temperature Control Knob

Baking Pan

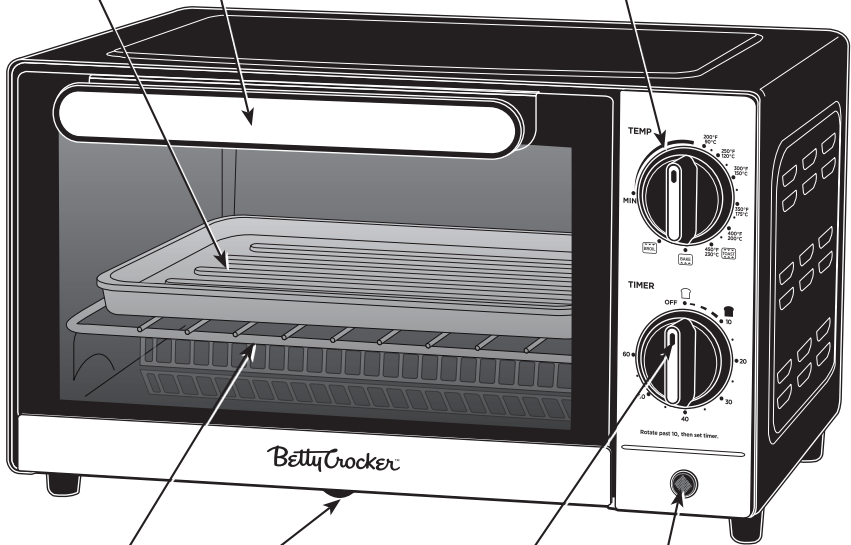

Chrome-Plated Rack

Time Control  
and Off Knob

Pull-Down Crumb Tray


 
 
Power-On Indicator Light

**RATING: 120V, 60Hz, 1000W, AC ONLY**

# TEMPERATURE CONTROL KNOB

Use this knob (see fig.1) to select the functions:

<b>BROIL</b>	
<b>BAKE/ROAST</b>	
<b>TOAST</b>	

Use this to set the desired temperature from 90°C (200°F) (keep warm) to 230°C (450°F) – Toast  as well as Bake  and Broil  functions.

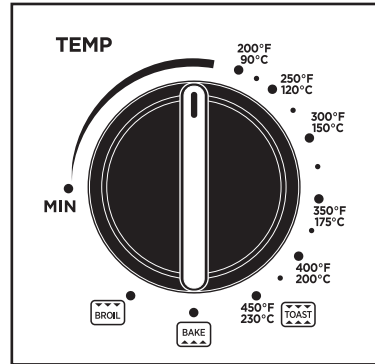 


fig.1

The temperature of the oven cavity may be controlled up to 230°C (450°F).

Rotate the Temperature Control Knob clockwise to the desired temperature setting.

Both heating elements function when a temperature is selected between 90°C (200°F) and 230°C (450°F).

# TIME CONTROL AND OFF KNOB

Turn the knob to the right (clockwise) to set the required time for toasting, broiling, or baking. When the time has elapsed or when the timer knob is manually turned to the OFF position, a bell will sound and the 4-Slice Toaster Oven will shut off automatically.

The 4-Slice Toaster Oven has a fully automatic 60-minute timer.

**When setting the timer for less than 10 minutes, turn the timer past 10 minutes and then back to the desired time as per figure 2.**

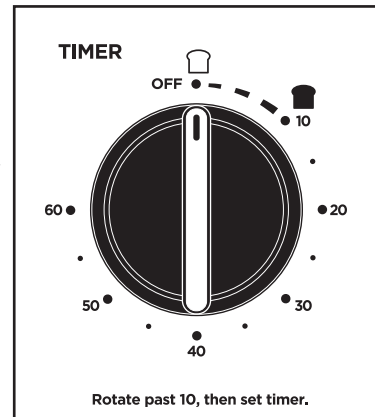 


fig.2


# USING YOUR TOASTER OVEN

 Place the oven on a flat, dry, heat-resistant surface, such as a countertop or table. Be sure the sides, back and top of the 4-Slice Toaster Oven are at least 10 cm (4") away from any walls, cabinets, or objects on the counter or table. Ensure the pull-down crumb tray is secure underneath the bottom element. See Cleaning Your 4-Slice Toaster Oven instructions on page 14 for proper crumb tray position. Plug the cord into a 120 V~60 Hz AC-only outlet. This appliance requires 1000 watts and should be the only appliance operating on the circuit. The 4-Slice Toaster Oven is now ready to use.

We recommend a trial run at a high temperature to familiarize yourself with your 4-Slice Toaster Oven and to eliminate any protective substance or oil that may have been used for packing and shipping. Remove the rack and baking pan from oven. Set the temperature control knob to 230°C (450°F) and the time control to 15 minutes. A small amount of smoke and odor may be detected. This is normal on first use.

**NOTE:** Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

**CAUTION:** Always wear protective oven mitts when opening and closing the toaster oven door.

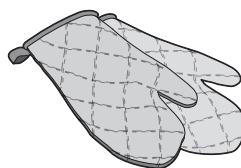

## BROILING/TOP BROWNING




**200°C (392°F)**

Only the top element will heat when this function is used.

 
1. Ensure the chrome-plated rack is inserted into the toaster oven.
2. Place food that is to be broiled or top browned onto the baking pan, place on top of the chrome-plated rack and close toaster oven door. NEVER, place food being broiled or top browned directly on the chrome-plated rack.

**NOTE:** When broiling, it is recommended to leave the oven door open a notch, about 12 cm (5"), to allow excess heat to escape.

3. Turn the temperature/function control knob to broil function (  ).
4. Turn the time control knob clockwise to the desired cooking time.

- When broiling food that needs to be cooked on both sides, set the timer for the time necessary to cook one side. When the set cooking time elapses and the bell rings, the toaster oven will automatically shut off. Using protective oven mitts or pot holders, open the door and pull the rack about halfway out of the toaster oven. Turn the food over, slide the rack back into the toaster oven and close the door. Turn the time control knob to the desired time.

**CAUTION: Toaster oven and contents are hot!  
Always use oven mitts or pot holders.**

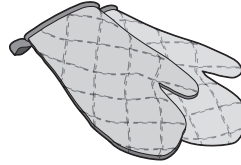



- When the time elapses, the bell will ring and the toaster oven will automatically shut off. **DO NOT leave the toaster oven unattended during broiling/top browning cycle. NEVER broil without the baking pan in place as fat drippings could cause smoke or flames.**

## BAKING AND ROASTING

**280°C (536°F)**

When this function is used, only the bottom element will heat.

 
- When baking or roasting, we recommend preheating the oven for 10 minutes before placing your food into the oven. Turn the temperature knob to the bake () setting. Turn the timer knob clockwise past 10 minutes and then back to the 10 minute mark. When the 10 minutes has elapsed, the timer bell will ring and the 4-Slice Toaster Oven will automatically shut off.
- Using protective oven mitts or pot holders, open the door and place the food to be baked/roasted onto the baking pan and place into the centre of the 4-Slice Toaster Oven. Close the door.
- Ensure that the temperature control knob is set to bake (). Turn the timer knob to the required cooking time as per package or recipe instructions.
- When the set time has elapsed, the timer bell will ring and the 4-Slice Toaster Oven will automatically shut off. Use protective oven mitts or pot holders to open and close the door.

# TOASTING

230°C (446°F)

When this function is used, both the top and bottom elements will heat continuously.

1. For best results, do not use baking pan when toasting. Put the bread to be toasted directly on the rack in the centre of the toaster oven. Close the door. You can toast up to four slices of bread in your toaster oven. When toasting only one or two slices of bread, make sure the slices are centered inside the toaster oven.

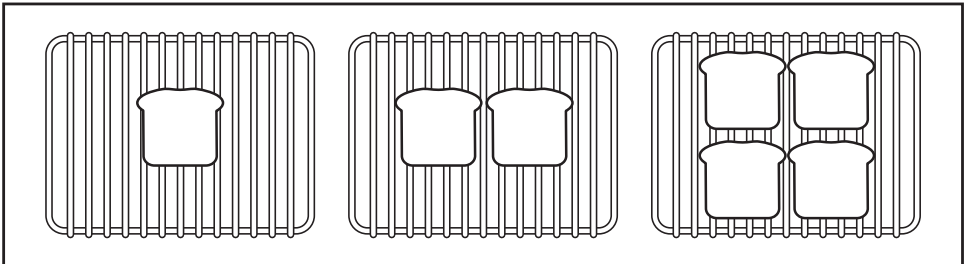




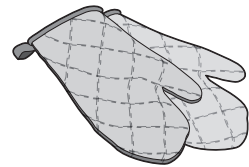 
2. Turn the temperature control clockwise to the toast () setting.
3. Turn the timer clockwise to your desired toasting shade, from LIGHT to DARK. For your first toasting, we recommend positioning the timer knob in the middle of the toasting shades. Adjust the shade to your preference in subsequent toasting.  
4. When the toast is done, the bell will ring and the toaster oven will automatically shut off. **When setting the timer for less than 10 minutes, turn the timer past 10 minutes and then back to the desired time.**
5. When toast is done, use protective oven mitts or pot holders to open the door and remove rack.

fig.3



**NOTE:** A preheated toaster oven will result in a faster toasting time.

**NOTE:** It is normal for condensation to form on the door when toasting moist or fresh breads.

**NOTE:** Experience will teach you how much time to use for toasting various kinds of bread. Frozen, dark, or whole grain breads require a longer toasting time, while fresh, soft, or white breads require a shorter toasting time.

# TIPS FOR USING YOUR TOASTER OVEN

**NOTE:** Choose bakeware made of metal, ovenproof glass, or ceramic.

- Caution should be observed when using glass bakeware, especially when your recipe calls for the food to be cooked close to the heating elements, or when high temperatures are used.
- Make sure when using deep, ovenproof glass or ceramic containers to allow at least 2.5 cm (1") airspace between the top of the container and the upper heating elements.
- Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with aluminum foil.
- Many convenience foods are packaged in non-metallic containers suitable for use in microwave ovens as well as regular ovens. Check package directions to determine if the container is suitable for use in a regular oven.
- You may use your own heat-proof pans, sheets and dishes in the oven, provided that approximately 2.5 cm (1") of space remains between the sidewalls of the oven and the heating elements to allow circulation of heat.

## Aluminum Foil

Do not allow for aluminum foil to touch the sides of the oven or heating elements. Foil can be used for covering foods, provided they are securely tucked around the food or edges of the pan or dish.

Do not cover the baking pan or crumb tray with aluminum foil, as this can cause accumulated grease or crumbs to catch fire.

## WARNING:

- **Use the tempered-glass window to check on your food. The less you open the door, the more energy-efficient your 4-Slice Toaster Oven will be.**
- **Be sure all foods and/or containers fit in the 4-Slice Toaster Oven without touching heating elements or keeping the door from closing.**
- **Remove all plastic and/or paper wrappers from foods before cooking.**
- **Use only loosely covered containers; airtight containers may cause food to boil over or explode.**
- **Follow package directions when preparing frozen or packaged foods; however, do not preheat the 4-Slice Toaster Oven.**

- **Metal surfaces will become hot during cooking. Always use protective oven mitts or pot holders to open and close the door.**
- **Do not place items on top of or near your 4-Slice Toaster Oven while in use.**
- **Replace cardboard, glass, or plastic lids with aluminum foil for use in the 4-Slice Toaster Oven.**

## **CHOOSING BAKEWARE FOR USE**

- The baking pan included with your 4-Slice Toaster Oven is suitable for items such as rolls, biscuits, nachos and pork chops.
- A variety of standard baking dishes, such as broil pans, muffin pans, round, square and rectangular casserole dishes may be used.
- Choose bakeware made of metal, ovenproof glass or ceramic.
- Make sure when using deep, ovenproof glass or ceramic containers to allow at least 2.5 cm (1") airspace between the top of the container and the upper heating elements.
- Never use glass lids on glass or metal bakeware. If a lid is necessary, cover tightly with aluminum foil.
- Many convenience foods are packaged in non-metallic containers suitable for use in microwave ovens as well as regular ovens. Check package directions to determine if the container is suitable for use in a 4-Slice Toaster Oven.

# CARE AND CLEANING

**IMPORTANT:** Always ensure the unit is unplugged and cool before cleaning.

**NOTE:** It is important to clean your 4-Slice Toaster Oven often to prevent smoke and odors from forming within the cavity of the oven. Do not allow grease or crumbs to accumulate in the appliance; it is advised to clean your toaster oven after cooking foods that spatter.

Ensure the timer knob is turned to the OFF position and the 4-Slice Toaster Oven is unplugged before cleaning. Allow the oven and accessories to cool completely before cleaning. Do not use harsh detergents, abrasive cleansers or metal scouring pads on any part of the oven or accessories, as they could scratch the surface.

Wipe the outside of the toaster oven with a clean, damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly.

Wash the rack and baking pan in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.

**NOTE:** A non-abrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly.

Wipe the glass door and the inside walls of the 4-Slice Toaster Oven with a soft cloth or sponge dampened with warm water. Blot dry with a paper towel or a soft, dry cloth.

**NOTE:** Never immerse the toaster oven, cord or plug in water or any other liquid.

**NOTE:** It is important to clean the crumb tray to remove excess crumbs and drippings.

To open the crumb tray, tilt the unit backwards slightly and push the knob of the tray towards the rear of the unit (see fig.4). The crumb tray will drop open and allow for cleaning. Use a damp sponge or cloth to wipe away crumbs or any food particles. After cleaning, close the crumb tray, making sure it is securely locked in place.

**CAUTION: TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE, SECURELY CLOSED AND CLEANED OF EXCESS FOOD.**

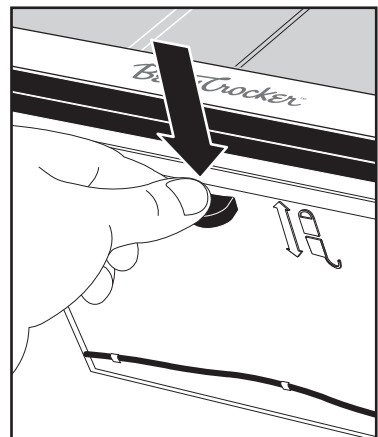 


fig.4

# LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or nonstick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

**BC-5665B**

06/25

# TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:  
**FORMULA BRANDS INC.**  
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

**NOTE:** We recommend you insure your parcel for your protection.

2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call  
1-877-244-1110  
between 9:00 am and 5:00 pm (EST) Monday to Friday  
or write

**FORMULA**  
BRANDS

FORMULA BRANDS INC.

45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

 
or email:

customerservice@formulabrands.com




© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

# REPLACEMENT PARTS

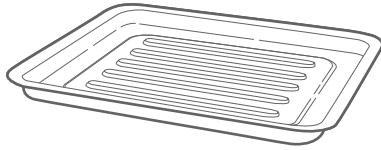

**Baking Pan**

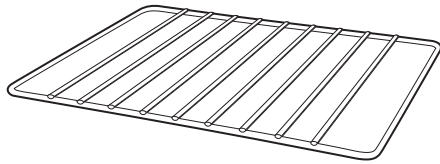 

**Chrome Rack**

**PLEASE WRITE MODEL NUMBER HERE:**

PART	QTY	PRICE	TOTAL
Baking Pan		\$8.99	
Chrome Rack		\$7.99	
<b>TOTAL</b>			
<b>SHIPPING AND HANDLING TO CANADA:</b>			\$9.00*
<b>SHIPPING AND HANDLING TO USA:</b>			\$15.00*
<b>SUBTOTAL</b>			
<b>TOTAL</b>			

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order\*\* made payable to:  
**FORMULA BRANDS INC.**

**FORMULA BRANDS INC.**  
Parts Department  
45 Mural Street, Unit #7,  
Richmond Hill, Ontario  
Canada L4B 1J4

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP CODE \_\_\_\_\_

CONTACT PHONE NUMBER \_\_\_\_\_

Prices are subject to change without notice.

**\*\*PLEASE NOTE:** AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

\* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email [customerservice@formulabrands.com](mailto:customerservice@formulabrands.com) to confirm shipping and handling charges.

**Allow 3 to 6 weeks  
for delivery.**

**BC-5665B  
07/25**