





Button Instruction

- | | | |
|---|--|--|
| ① | POWER&OK
 | Turn ON/OFF The Camera :Long-press power button for 2-3s.
stop/start Recording :short-press press once to start/stop video recording
short-press once to play/pause current video in playback status
short-press once to enter/save the setting in Menu setting short-press once to scrol DOWN in Menu setting |
| ② | DOWN BUTTON
 | short-press once to switch the display windows of the front camera , carbin cameral recording status.
short-press once to scroll to next video ile in playback status |
| ③ | UP BUTTON
 | short-press once to scro DOWN in Menu setting
short-press once to mute Audio Recordingi ideo Mode |
| ④ | M BUTTON
 | Enter the playback Modes:short-press once on M Button in NON-Recording status, it enters playback mode, press again to exit. You can playback the video recorded.
Enter the MENU: Long-press once on M Bu tton in NON-Recordi g status, it enters menu, press again, it exits.You can set the dash cam
Lock the video Files:short-press once on M Button inRecording status,it locks the current video ile |
| ⑤ | RESET HOLE | Reset the Dash cam |
| ⑥ | AV-IN HOLE | connectect with carbin camera |
| ⑦ | TF CARD SLOT | Turn on of the cabin camera's led lights |
| ⑧ | POWER SLOT | Mini USB Power Interface |

Playback the videos

Method1: playback on the PC.

Take out the SD Card and read it in the Pc. Then playback the videos on the Pc

Method2: playback it on the Dashcam

① stop recording

② short-press on the **M** M button you will reach the playback Mode;

using **<** Up and **>** DOWN button to scroll up and down to choose files to play. Long press on M button to delete/protect current files

③ short press M Under playback Mode to exit.

Causes Or Solutions

No boot: Make sure the vehicle is in the ignition on state, and manually press and hold the button to turn on

Cannot be recorded: No TF card, damaged TF card or TF card can't be recognizable, format the TF

card or replace the TF card

Record setting is faulty: Check the connection is normal

PRECAUTIONS BEFORE USING THIS CAMERA

- ① please use the original car charger provided to avoid fault or in comp ability. The dash cam battery is just to maintain and save settings. It should be connected to the car charger to get constantly powered, if the power is interrupted to the unit, it will shut down
- ② please "Reset" dash cam or reinsert & format if "SD Card error".
- ③ If any problem, please feel free to ask our after sales team.

Frequently Asked Questions

A "File Error" message appears on the machine: Settings menu > Restore factory settings and format the memory card. It is usually a problem with the TF card.

Horizontal stripes appear on the screen: Please select the correct power supply frequency 50HZ (PAL).

How to correctly enable the 24-hour parking monitoring function: Please do not turn it on during normal driving, as it may cause automatic shutdown or crash. It needs to be turned on after parking. If parking monitoring is required, please configure it. Set up a VCC step-down line (note that the output voltage is the same as the car charge). The car car charge car charger does not support parking monitoring.

The pictures taken at night are not clear enough: Recorder photography relies on strong external light sources (such as street lights/car lights).

The machine always reverts to the default date and time: The built-in battery is out of power, please use a car charge lighter to charge it fully.

Why does the video file lose seconds: (Please turn off the motion detection function/turn on the loop recording function) If you configure your own card, you must choose a genuine C10 high-speed memory card.