

Electric Fireplace

Portable



Model: TPL-ES-C

OWNER'S MANUAL

AC 120V 60Hz 1500W

Important Safety Instructions


When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. **USE THIS HEATER ONLY AS DESCRIBED IN THIS MANUAL.** Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
3. **CAUTION:** This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If you/child, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, books, and candles at least 3 feet from the front of the heater and keep them away from the sides and rear.
4. **EXTREME CAUTION:** is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. **ALWAYS** unplug heater when not in use.
6. **DO NOT** operate any heater if any of the following conditions are true:
 - a. Heater has a damaged cord or plug.
 - b. Heater has malfunctions.
 - c. Heater has been dropped or damaged in any manner.
7. **DO NOT** use outdoors.
8. This heater is **NOT INTENDED** for use in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container.
9. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rug, furniture, or similar covering. **DO NOT** route cord under furniture or appliances. Arrange cord away from traffic area and where it will be tripped over.
10. To disconnect heater, turn control to off, and then remove plug from outlet.
11. Connect to properly grounded outlets only.
12. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
13. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
14. A heater has hot and arcing or sparking parts inside. **DO NOT** use in areas where gasoline, paint, or flammable liquids are used or stored.
15. **ALWAYS** plug heater directly into a wall outlet/ receptacle. **NEVER** use with an extension cord or relocatable power source (battery) power strip.
16. Hypertension can result in death. Symptoms of hypertension include high body temperature, headache, nausea, vomiting, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hypertension, turn off the heater and seek medical attention.
17. To avoid excessive room temperatures which can cause hyperthermia. **DO NOT** leave product running unattended in a confined space served intake or individuals with reduced physical, sensory, or mental capacities.

SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Product Specifications

Model	Connection	Output Power	Power	Size
TPL-ES-C	Electric Fireplace	120V-0/04E	1500W	242*160*204mm

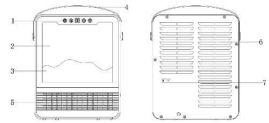

- 1. Display panel
- 2. Glass panel
- 3.3D Flame
- 4. Bolt
- 5. Air outlet
- 6. Air inlet
- 7. Switch

Usage Instructions

POSITION OF THE APPLIANCE

The heater should only be operated at a minimum distance of 50 cm (19.34") from any wall or other object. Position the airflow in order to optimize the heating of the room. Avoid corners, small volume rooms, floors, and ceilings.

OVER HEAT PROTECTION

This heater is protected with an overheat protection function that switches off the appliance automatically in case of overheating (e.g. due to the total or partial obstruction of the airflow intake and/or exhaust). In this case, unplug the appliance, wait about 20 minutes for the cool, and remove the object that is causing the obstruction. Then, switch heater back on as described above. The appliance should operate normally. Should the problem persist, please contact customer service or consult with a competent local qualified service technician.

Care & Maintenance

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- The housing may be wiped with a slightly damp, soft cloth.
- If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.
- To avoid the risk of electric shock, do not clean the heater with water and do not immerse it in water.

SAFETY INSTRUCTIONS FOR BATTERY

READ AND SAVE THESE INSTRUCTIONS

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Store used batteries and never immerse, submerge or crush.
3. Call a local poison control center for treatment information.
4. Never use the used battery if BMS is open.
5. Do not use the BMS on battery.
6. Non-rechargeable batteries are not to be recharged.
7. Do not force dismantle, pierce, disassemble, heat above manufacturer's specified temperature rating or incinerate. Being or may result in injury due to melting, leakage or explosion resulting in electrical shock.
8. Insert the battery into the device as instructed correctly according to polarity (+ and -).
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely charge the battery independently. If the battery compartment does not close correctly, stop using the product, remove the battery, and keep them away from children.

Subject: Thank You for Your Purchase!

Dear Customer,
Thank you for choosing our space heater! We truly appreciate your trust in our brand.
If you encounter any issues while using our product, please feel free to contact us via email. To help us assist you more efficiently, kindly provide the following details in your message:
Order Number;
Detailed Description of the Issue;
Relevant Photos or Screenshots (if applicable);
Our support team is committed to responding within 24 hours and will work diligently to resolve your concerns as quickly as possible.
Your satisfaction is our top priority, and we are always here to help.
Best regards,
Customer Support Team
E-mail: ketek@2023@outlook.com

WARNING

- **INSERTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH or serious injury may occur if ingested.**
- An alkaline button cell or coin battery can cause **Internal Chemical Burns** in 18 to 24 hours.
- **KEEP** this and used batteries **OUT OF REACH OF CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Retain this manual for future use.