

变更次数	变更说明
1	
2	
3	



材质:封面封底200G铜板纸, 过哑膜, 内页157G铜板纸
 尺寸:120x120mm
 印刷: CMYK四色+专色 ■ 5115C

名称	TM01 说明书
型号	TM01
版本号	1.0
操作时间	2024-12-30

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.



www.mookashops.com



support@mookashops.com



1-855-666-9955

IMPORTANT SAFEGUARDS 1

In order to prevent harm or damage happened to users or others, be sure to comply with the requirement as below:

WARNING/ATTENTION



WARNING

It reminds that misusing or mishandling may cause death.



ATTENTION

It reminds that misusing or mishandling may cause hurt.



FORBID

The operation cannot be performed or forbidden.



FORCE

A certain operation should be performed (mandatory).

2 IMPORTANT SAFEGUARDS



WARNING



Please supervise your children and avoid them from touching or using machine.



AVOID WET

Do not connect or disconnect the power with wet hand
It may cause electrical shocking.



NO DISASSEMBLE

No disassembly, repair and reconstruction.
It may cause fire or damage.
Please send it to the retailer for repair.



FORBID

Do not use the over run socket or wiring connector.
Do use the rated voltage.

IMPORTANT SAFEGUARDS 3



AVOID WET

Avoid any water on the surface of the unit.

It may cause short circuit or electrical shocking.



DISCONNECT POWER

The appliance must be disconnected from the supply mains before cleaning or other maintenance

Otherwise the unit may start working in a sudden which may cause electrical shocking or hurt.



Do not insert any metal objects into the unit.

It may cause hurt or electric shocking

4 IMPORTANT SAFEGUARDS



FORBID

Do not repair it when the cord or plug is damaged..

It may cause short circuit, electric shocking or fire.

Please send it to the retailer for repair.



**If there is dust on the plug, it may weaken the insulation,
even cause fire**

Take out the plug and clean it with dry cloth.

Please remove the plug from the socket if not using for a long period.



 
ATTENTION



FORBID


Do not power the unit on when using insecticide in the room
Otherwise the insecticide may be stored in the unit and will blow out during the normal working time. It is harmful to the health.

Please ventilate completely after having used the insecticide before turn on the unit.

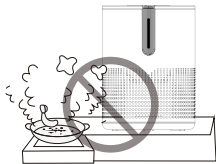


Do not use in the room with lampblack such as kitchen.

 It may cause hurt because the machine is not a ventilator

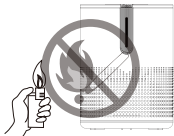

Do not blow in any combustible or fired cigarette into the unit.

 
It may cause fire

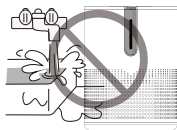

Do not use in the watery or high temperature room such as the bathroom etc.


Otherwise it may cause creepage, electric shocking or fire.

 6 ATTENTION

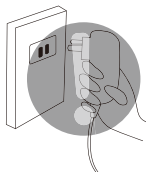


Please hold the plug instead of the cord when unplug the power.

 Otherwise it may cause short circuit, breaking of the cord, electric shocking or fire.

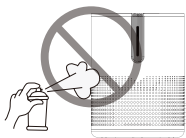

Keep away from alcohol, organic impregnated or insecticide

 It may cause cracking, short circuit, electric shocking, hurt or fire

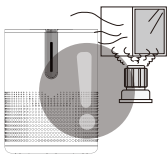

Please ventilate timely when used with fire in the room

Otherwise it may cause poisoning of CO as the machine is not a ventilator

Please remove the plug from the socket if any conditions as below:


- If all switches do not work
- If the power cord or plug hot singularly
- If any peculiar smell, exceptional noise or vibration
- Any other abnormality or failure

If the power cord is damaged, please send it to the retailer or service center or technician for repairing. Do not change or repair it by yourself.


PURIFICATION TECHNOLOGIES 7


The multi-functional filter is composed of pre-filter, HEPA layer and activated carbon layer.

 DIAGRAM OF PURIFICATION

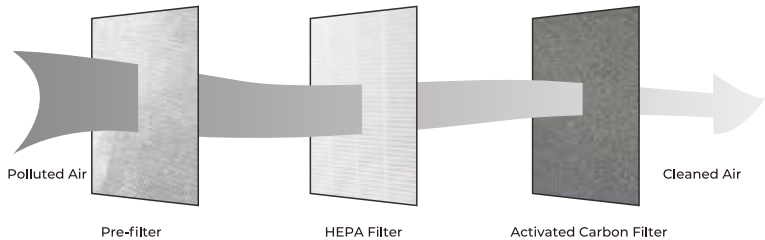

8 PRODUCT APPEARANCE DIAGRAM

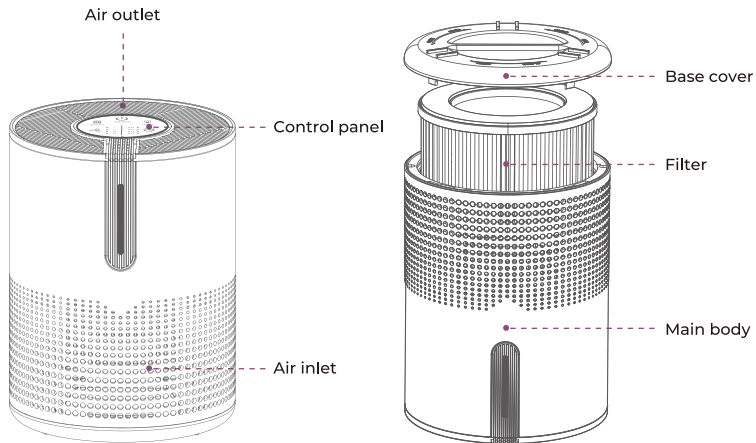 

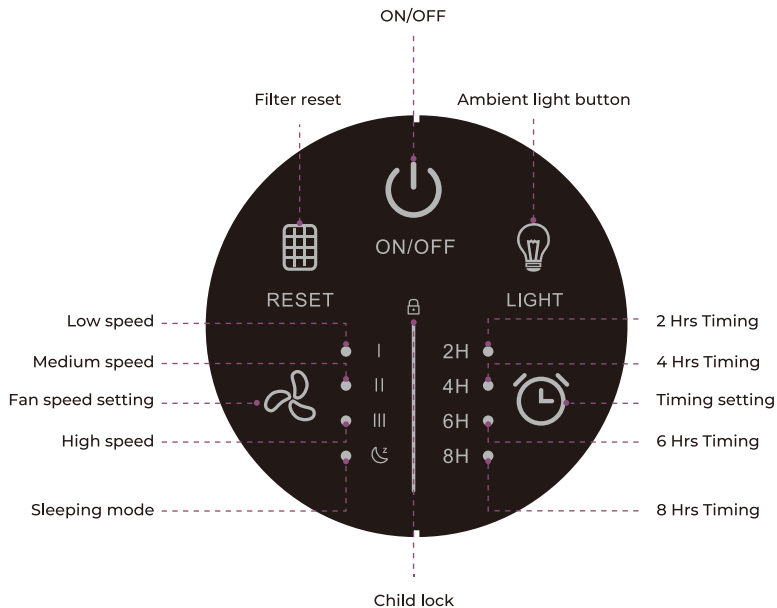 

10 USE AND OPERATION

PLACEMENT

Please keep the machine air inlet and outlet 30cm or more far away from the wall and home furniture.

Do not use the machine in front of hot source outlet.

REPLACEMENT OF THE FILTERS

Prompt to replace the filter and reset

 
 
 
 
If the "filter replacement reminder" indicator light is lighted, it means the filters life time (1440hrs) comes to the end, please replace new filters.

After replacing new filters, please long press "reset" button for approx.3 seconds, then "filter replacement reminder" indicator light will be switched off, the machine starts to record the filters using time.

TAKE OUT FILTER

1. Turn it off first, then unplug the power.
2. Put the machine upside down, hold the machine body firmly with one hand, press the cover with the other hand and rotate it counterclockwise.
3. Take out the used filter.


USE AND OPERATION 11

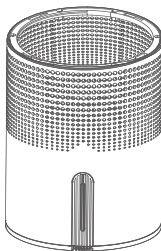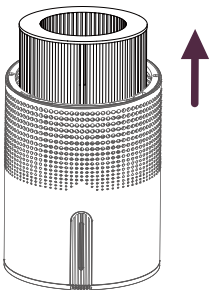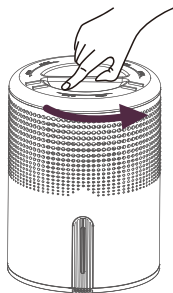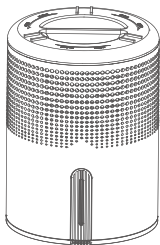

12 USE AND OPERATION


INSTALL THE FILTER

 1. Remove the protective film of the new filter, and then install the new filter.
2. Put the machine upside down, hold the machine body firmly with one hand, press the cover with the other hand and rotate it clockwise.

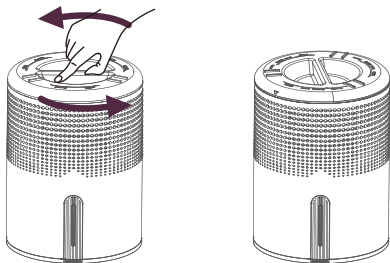


ADD FRAGRANCES

 1. Use your thumb to push the cover outward
2. Add fragrances.
3. Push it inward to lock it.

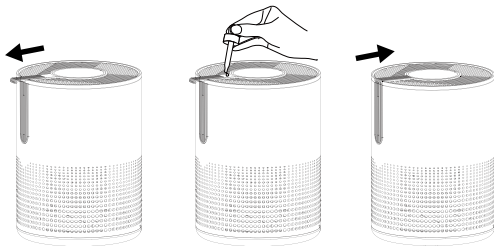

DC POWER

 Power supply: 5V 

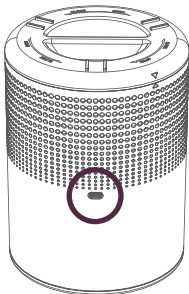

interface: Type C

 


USB cable


14 INSTRUCTIONS FOR USE

THE POWER SETTING

- ◆ After power on, all the indicator lights will be on for 0.5 seconds for self-test, then enter standby mode. The following pictures are for reference.
- ◆ The first time the unit is turned on, the wind speed button, ON/OFF button, ambient light and light button will be on and the unit will run at low speed. The following pictures are for reference.

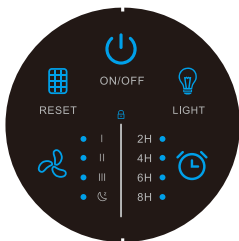


Self Check

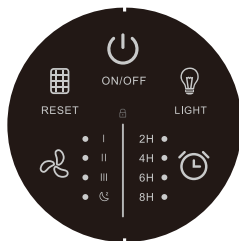 

Standby Mode

 
When the product is turned off but not disconnected from the power supply, the device has a memory function. The device will operate in the previous mode when it is turned on again.

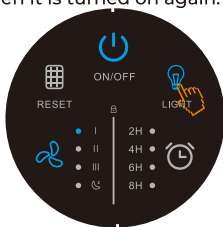


Ambient Light:
Tapping the light button to turn on/off the ambient light.

FAN SPEED SETTING

 
- ◆ Touch fan speed button to adjust the fan speed

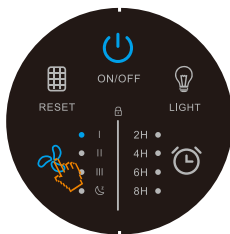

low fan speed

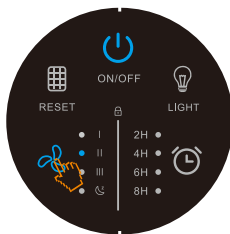 


Medium fan speed

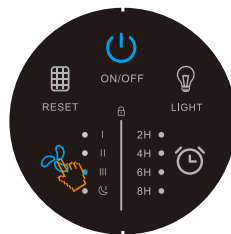 


High fan speed

 
After entering sleep mode, all the lights except for the sleep mode indicator will automatically turn off after 10 seconds of no operation. Press any button to deactivate sleep mode.

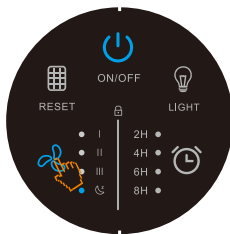

 Press the fan speed button to select sleep mode

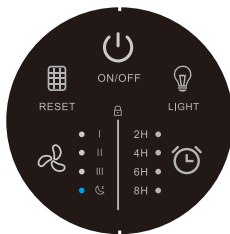

 No operation within 10 seconds after entering sleep mode

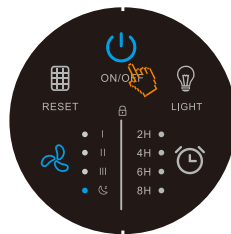


Deactivate sleep mode by pressing any button


16 INSTRUCTIONS FOR USE

TIME SETTING

 
- ◆ Press the "Timer" button to set the working time, 2/4/6/8 hours are available.

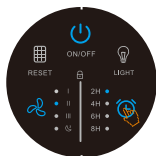


Timing 2 hours

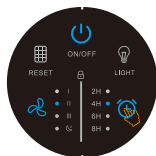 

Timing 4 hours

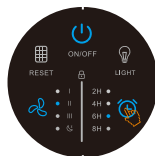 


Timing 6 hours

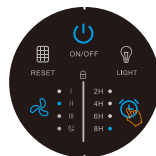 


Timing 8 hours

CHILD LOCK

 Child lock function can temporarily lock the control panel to avoid accidental touch. Press and hold the "Timer" button for about 3 seconds to turn on/off the child lock. The picture on the right shows the child lock indicator light on.

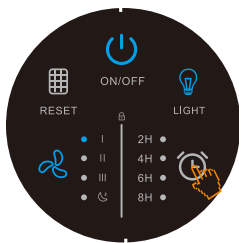

Child lock was deactivated

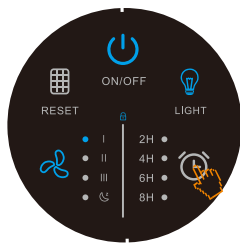 

Child lock was switched on

CLEANING AND CARE



Please remove plug from the socket before cleaning and maintenance .


- ◆ Cleaning the body for this device by damp cloth, then wipe it dry.
- ◆ If machine is too dirty, neutral detergent can be used for cleaning, but please dilute the detergent before use.
- ◆ Do not clean the unit with the solvent listed on the right which may cause distortion or discolour.
- ◆ If the filter replacement indicator light is light up, replace with a new filter.
- ◆ After replacement, press filter replacement button for approx.3 seconds, the filter replacement indicator light will switched off.



If the machine is not working properly, please kindly check as follows before contacting us for replacement.

Problem	Checking methods	Possible solution
Do not work	<ul style="list-style-type: none"> • Please check if the plug is disconnected from the socket. 	➡ Power plug should be plugged properly
Odor can not be removed	<ul style="list-style-type: none"> • Is there a very strong odor in the using environment? (Notes: air should be purified continuously) 	➡ It is recommended to ventilate first and then turn on the machine
	<ul style="list-style-type: none"> • Does the using life time for filters come to the end? 	➡ Please replace the used filter with a new one.
High noise	<ul style="list-style-type: none"> • Is the PE bag for filter removed? 	➡ Please take out filter and tear off PE bag.
	<ul style="list-style-type: none"> • Does the using life time for filter come to the end? 	➡ Please replace the used filter with a new one.

18 IMPORTANT

Model No.:	TM01
Power supply:	5V 
Net weight:	0.8KGS
The length of power cable:	≤1.0m
Rated current:	800mA
Dimensions(WxDxH):	150x150x200(mm)

MULTI-FUNCTION FILTER

Dimensions(WxDxH)	130x130x86(mm)
Life time	1440H

mooka

Beyond Elegance

 www.mookashops.com

 support@mookashops.com

 1-855-666-9955



Made in China