
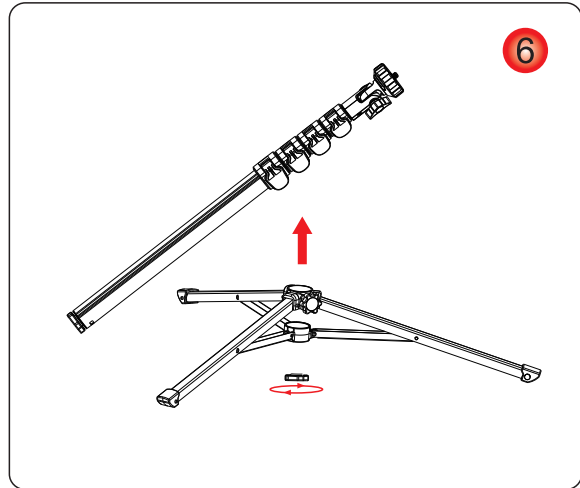
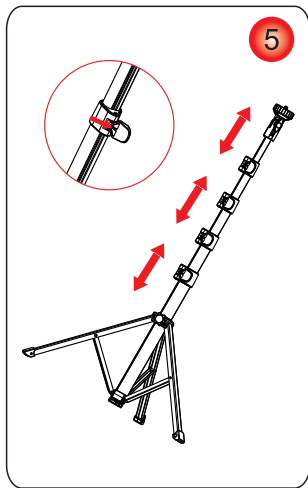
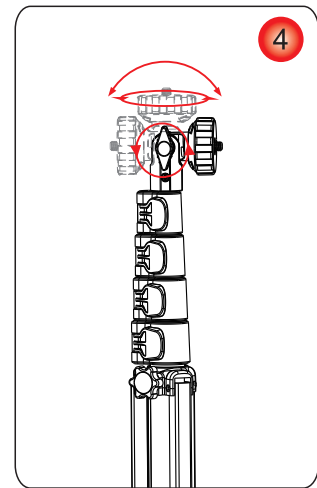
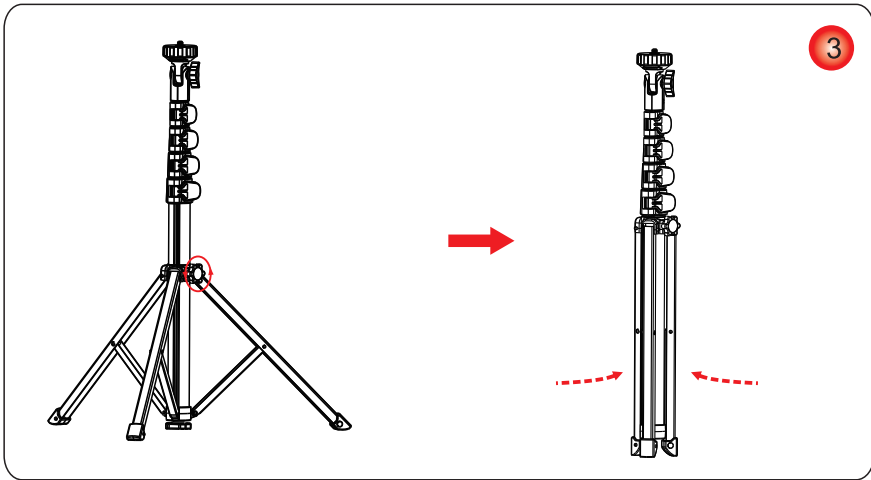
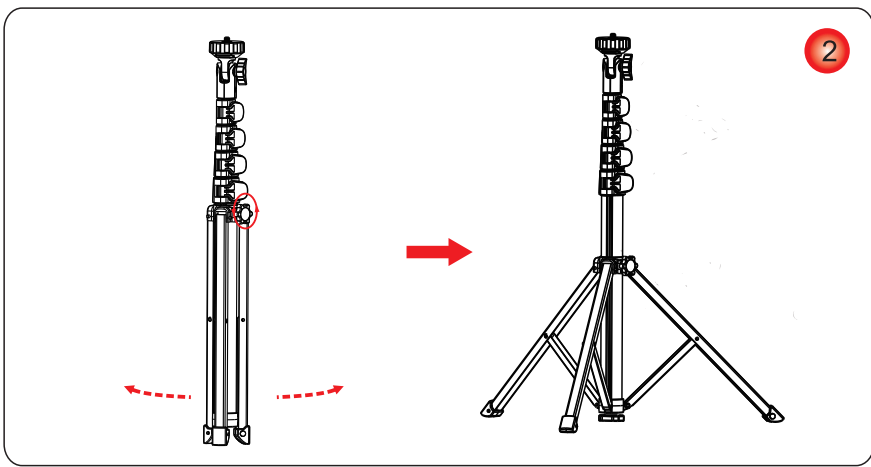


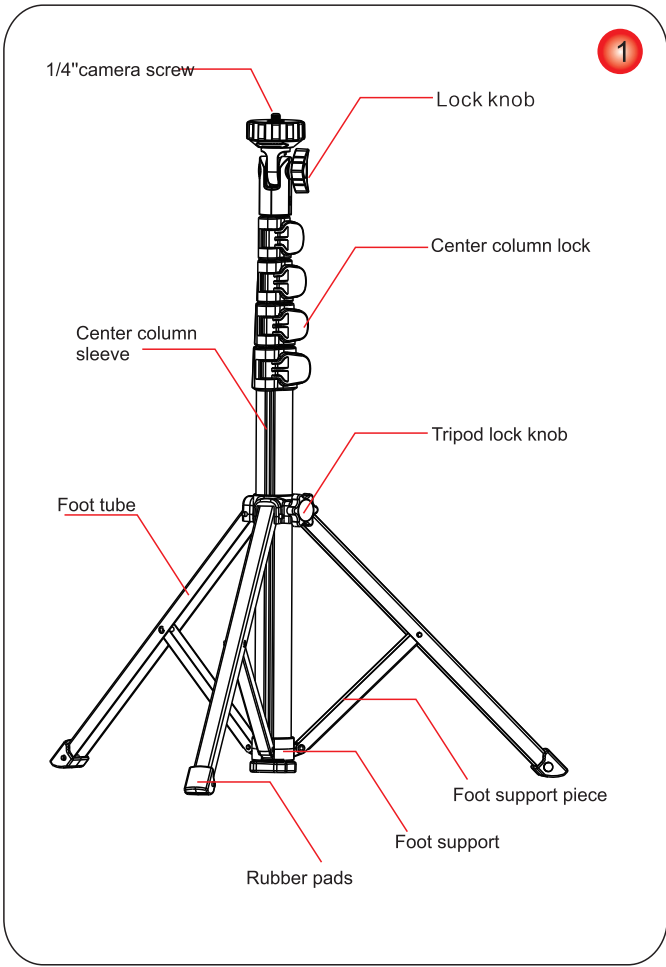

1.(Illustration 1) Light stand introduction

2.(Illustration 2,3)Light stand Adjustment

- (Illustration 2) After loosening the stand locking knob and pressing downward to your desired angle, then the stand can spread when the locking knob is firmly locked.
- (Illustration 3) To fold the stand by loosening the locking knob.

3.(Illustration 4)Use of multi-functional loading plate

Loosen the loading plate and lock the knob, the angle of the loading plate can be adjusted as required.

4.(Illustration 5)Expansion and collapse of the center column

- Pull the trigger, pull the center shaft to the required height and then press the trigger to unfold.
- When the central shaft is unfolded, pull the trigger to close it.

5.(Illustration 6) Switching between tripod and monopod

Unscrew the center column bottom knob, the center column can be taken out to be a monopod.

Warnings:



Do not exceed the light stand maximum load capacity.



Ensure the light stand is locked.



Do not operate this light stand when the temperature is below -20° C or above 70° C. It is not recommended to operate in saltwater.



Do not put this light stand in sunlight or lean it against the glass of a car for a long time.



Do not leave this light stand unattended in public place; please be careful when using it in a dangerous place.



Remove the camera from the ballhead during setup or transport.



It is not necessary to equip lubricant. Please use standard lubricant or grease when necessary.



For your safety, keep it out of power supply.

Dear Customers:

Thank you for purchasing KINGJOY! To provide you perfect after-sales services, please read carefully and keep the card properly.

- KINGJOY products are warranted against defects in workmanship under normal use for a period of one (1) year from the date of original purchase. Freight and other expenses for repair shall be borne by the buyer.
- Warranty card must fill in the product name, date of purchase, and stamped with the dealer seal. You must present this card when there is a warranty claim.
- The warranty is only for the product body and the component is not covered by the warranty.
- Not free for repair with the following circumstances, that needs to implement reasonable charge to repair.
 - Warranty card is lost or exceeds the expiration date.
 - Damage or tampered by improper handling and used (such as broken, water, corrosion, etc.)
 - Self-demolition (repair) products, or unauthorized repair;
 - Due to floods, fires, earthquakes and other irresistible factors caused by failure or damage;
- Limited warranty, for consequential and incidental damages is expressly disclaimed and shall not exceed the purchased price paid.

(Such as the various costs of photography, the value of photographic equipment, the impact of shooting will be the benefits of mental damage are indirect losses)

- If unknown, please consult our company.
- Please keep this card, no supplement for any card lost.

Product Name: _____

Model No.: _____

Purchase Date: _____

Customer Name: _____

Address: _____

Tel: _____ Fax: _____

E-mail: _____