


HICFM

USER MANUAL AND OPERATING INSTRUCTIONS

READ & SAVE THESE INSTRUCTIONS

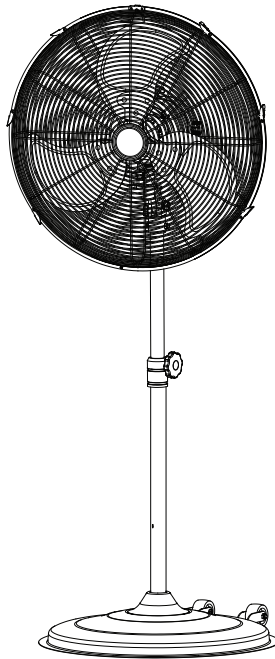

20" OSCILLATING STAND FAN

120V / 60Hz, 1.35 A

ITEM NO.: FAN-P20SW

MODEL NO.: SFSI-500SW1



If you have any questions or comments
about this or any product,
please e-mail our customer service by
inquiry@hicfm.com

www.hicfm.com

SAFETY INFORMATION


WARNING

1. Read and save these instructions. Do not operate fan unless you have read these instructions.
2. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
4. Unplug the fan when it is not in use.
5. DO NOT unplug the fan by pulling the cable cord. Unplug by holding the plug and pulling.
6. DO NOT use the fan when there is damage to the cable cord or plug. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.
7. To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
8. DO NOT use the fan close to fires.
9. DO NOT insert your hand or other objects into the grille or the movable parts.
10. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
11. DO NOT use this fan outdoors, this fan is designed for indoor use only.
12. To Reduce The Risk Of Fire Or Electric Shock Do Not Use With An Extension Cord.

CAUTION

1. Unplug the fan from the socket and clean it with a soft cloth.
2. DO NOT immerse the fan.
3. Fit the guard onto fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.


PACKAGE CONTENTS

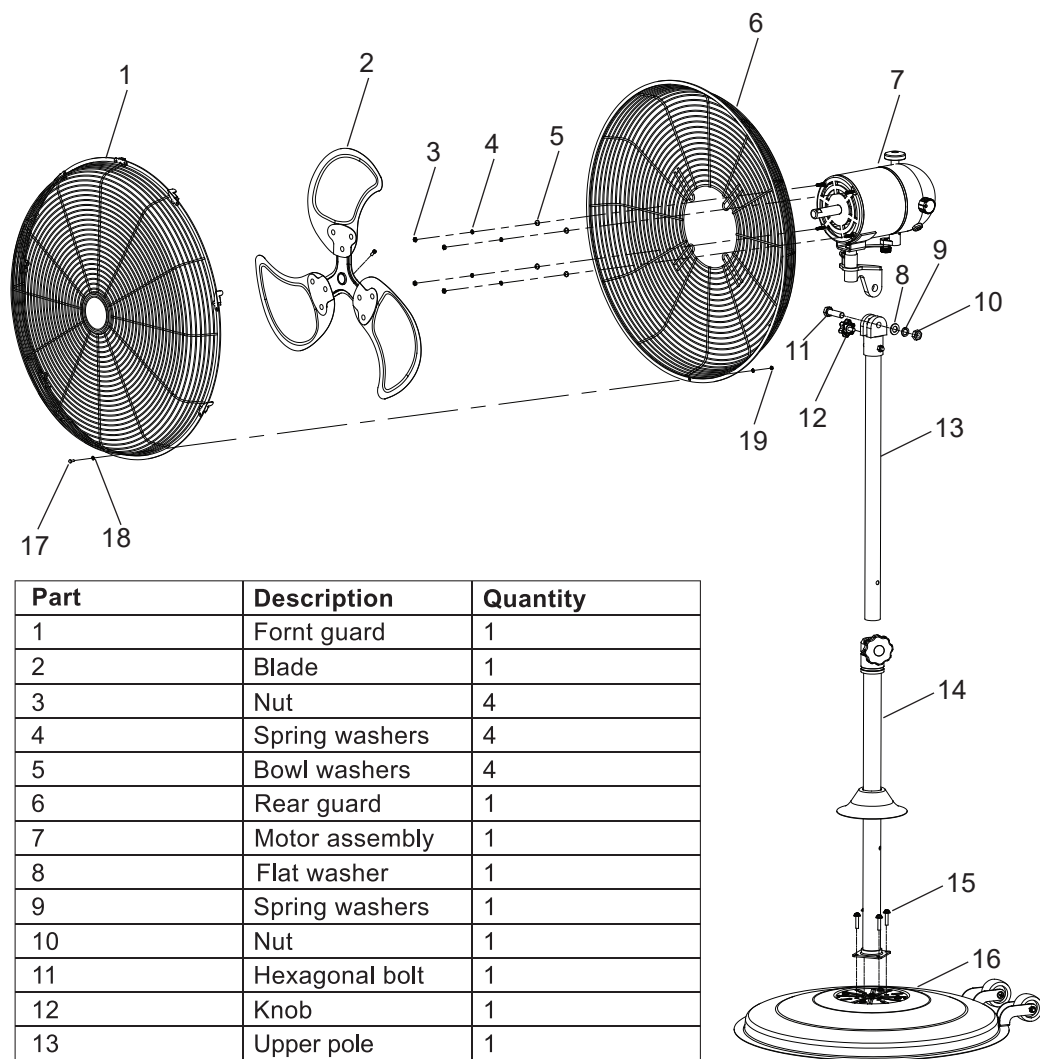

Part	Description	Quantity
1	Front guard	1
2	Blade	1
3	Nut	4
4	Spring washers	4
5	Bowl washers	4
6	Rear guard	1
7	Motor assembly	1
8	Flat washer	1
9	Spring washers	1
10	Nut	1
11	Hexagonal bolt	1
12	Knob	1
13	Upper pole	1
14	Lower pole	1
15	Screws	4
16	Base	1
17	Screw	1
18	Star washer	2
19	Nut	1



ASSEMBLY INSTRUCTION

1. Remove four Screws from Base. Save them for Step 2.

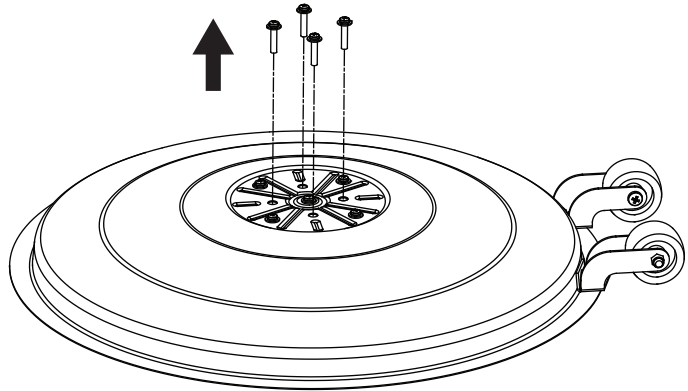


2. Assembly the Lower Pole to Base by tightening the four Screws from Step 1.

And slip the coupling cover carefully.

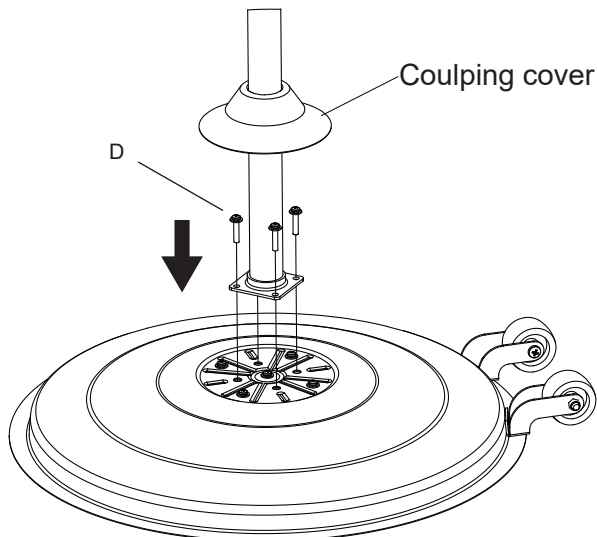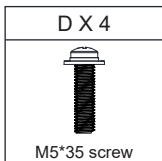


ASSEMBLY INSTRUCTION(CONTINUED)

3. Insert upper pole into standing pole. Adjust to the desired height and tighten back the locking knob.

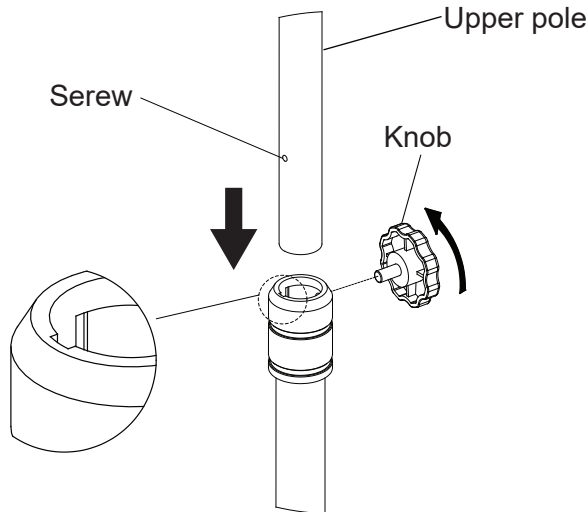

4. Remove the hexagonal bolt, flat washer, spring washer and nut from the extension pipe. Save for Step 5. Loosen the adjusting knob.

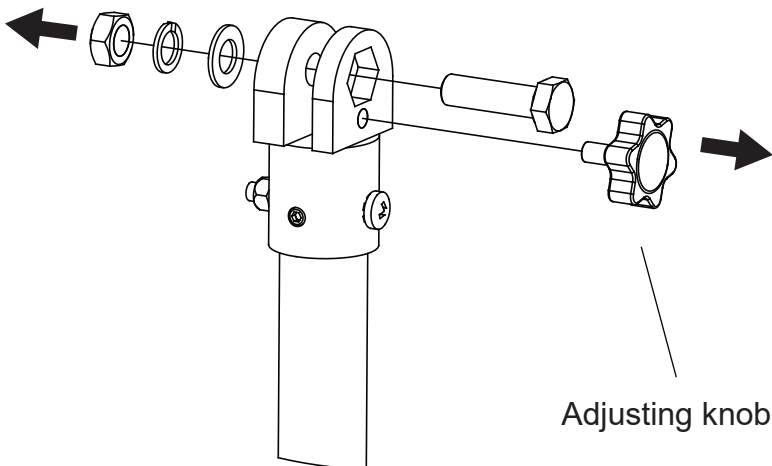


ASSEMBLY INSTRUCTION(CONTINUED)


5. Install the motor assembly onto extension pipe by tightening the hexagonal bolt, flat washer, spring washer and nut from Step 5. Tightening the adjusting knob.

BB X 1	BC X 1	BD X 1
		
M10*35 Screw	φ20*φ10 washer	φ10 spring washer

BE X 1	BF X 1
	
M10 Nut	M6*14 Adjusting Knob

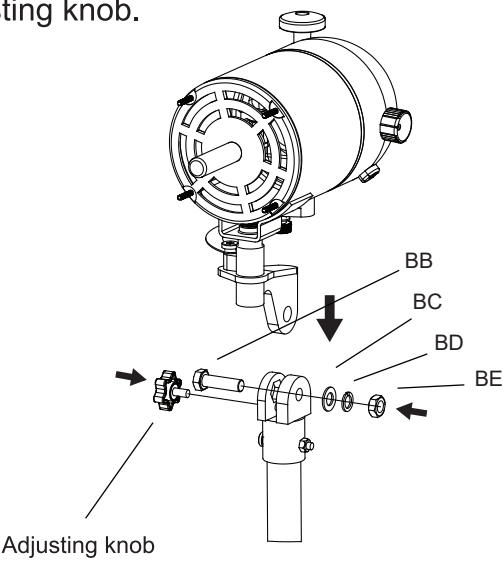

6. Remove four sets of hexagonal nuts, spring washers and bowl washers from motor. Save them for Step 7.

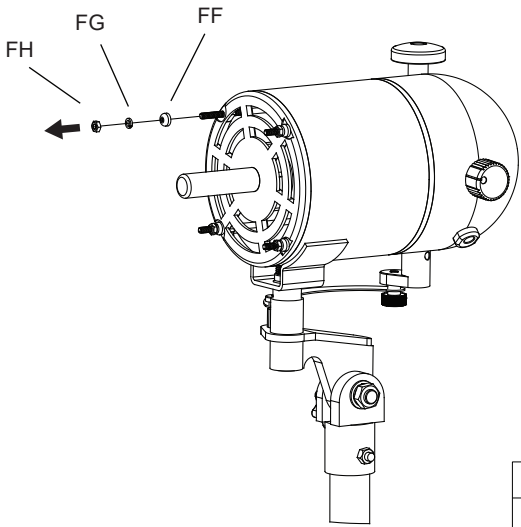


FF X 4	FG X 4	FH X 4
		
φ16*φ5.2	φ5	M5*δ4

ASSEMBLY INSTRUCTION(CONTINUED)


7. Attach the Rear guard in proper position, install it by tightening the hexagonal nuts, spring washers and bowl washers from Step 6.

Make sure the assembly hole at the bottom.

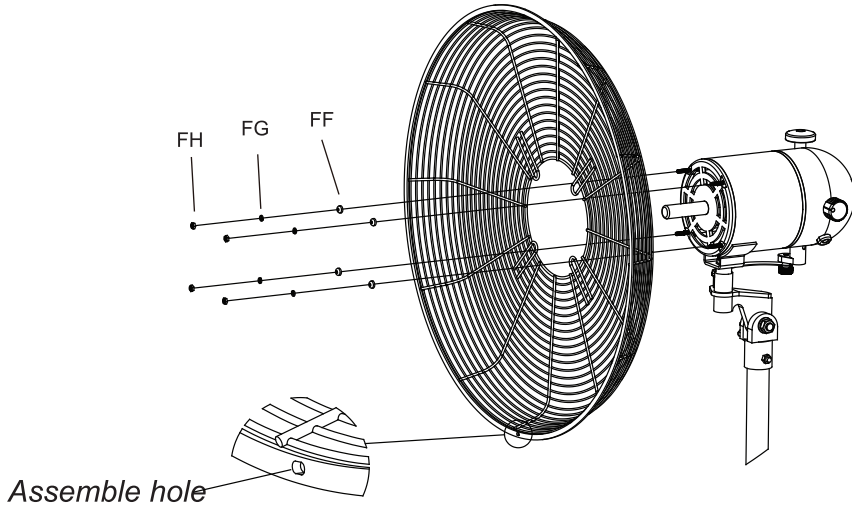


8. Assembly the blade with motor by fastening the screw from blade's hub into groove of motor shaft.

Make sure the screws are assembly to the flat side and tightly secured.

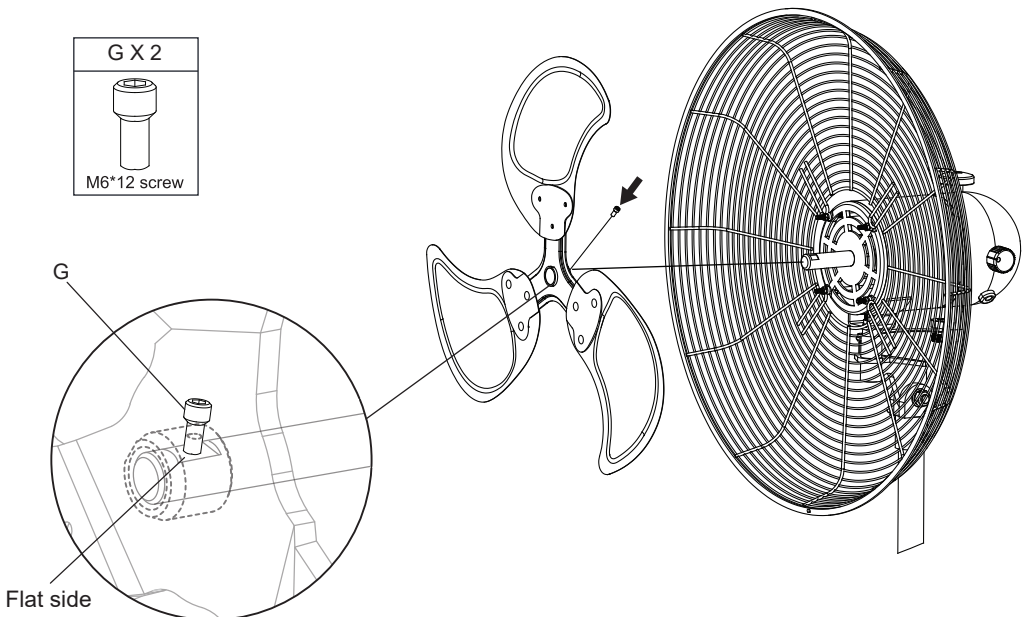


ASSEMBLY INSTRUCTION(CONTINUED)

9. Assemble front guard to rear guard by fixing both guards together with clips on the rim of front guard.

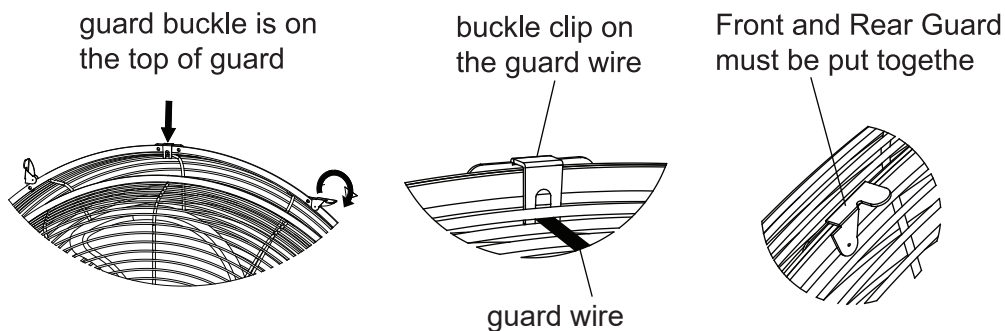

10. Secure the assembly on the front guard and rear guard by tightening the screw, washer and nut at the bottom of the fan guards.

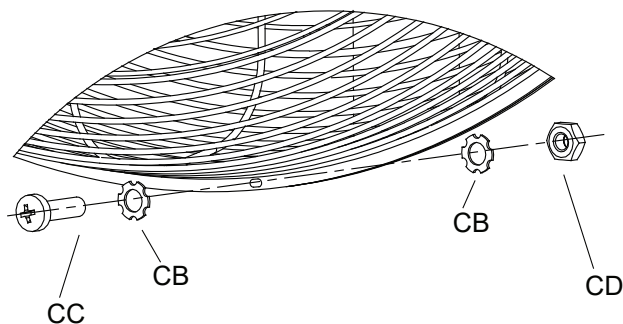


CC X 1	CB X 2	CD X 1
		
M3*10	φ3	M3

OPERATION INSTRUCTION

1. Adjust upper tube to your height and tightening back the adjusting seat. (FIG.1)

Caution: Please hold the upper tube when loosening the adjusting seat .

2. Tilting the fan head upward or downward for your desired direction of air flow. (FIG.2)
3. Turn the switch to the desired speed. (FIG.3)
4. Turn the oscillation function on by pressing the oscillation button down. Turn the oscillation function off by pulling the oscillation button up. (FIG.4)

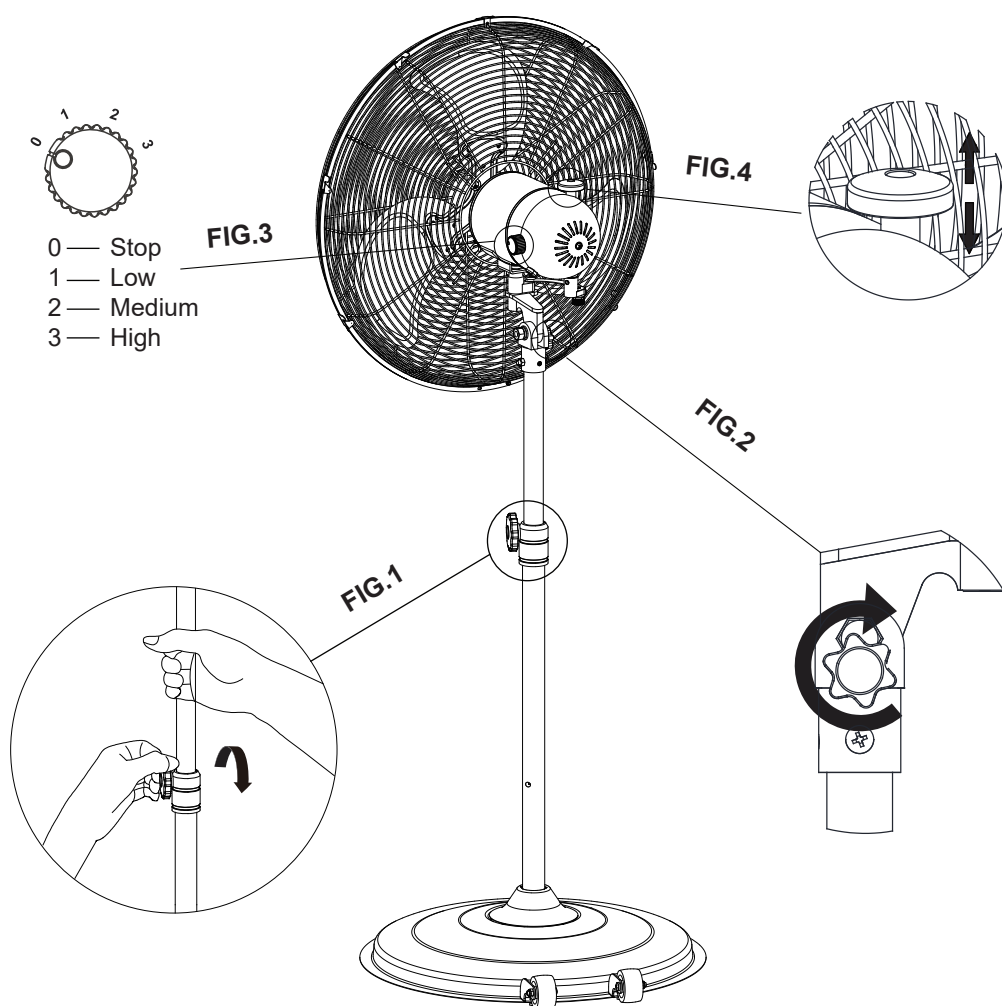


OPERATION INSTRUCTION

5. The fan could move easily by the wheels.

CAUTION: Please **turn off** the fan before moving the fan.

Please hold the both side of the fan head when moving the fan.

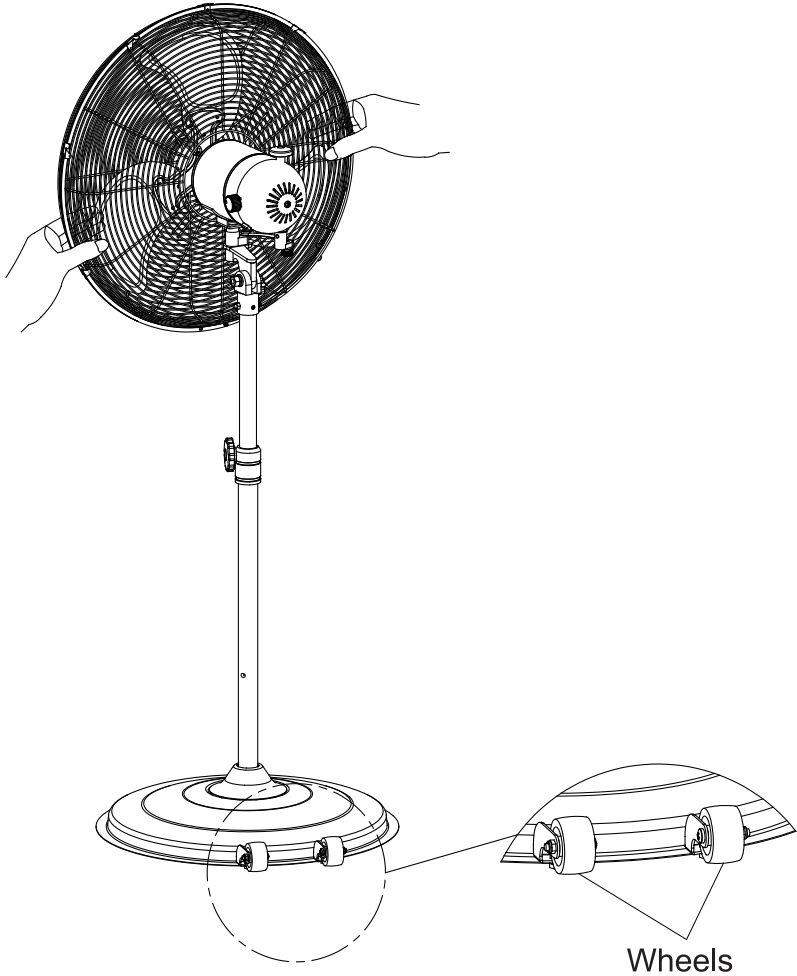

CARE AND MAINTENANCE


Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and wipe off the surfaces of the fan. In order to remove the dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill. After cleaning, remount the grill. After doing this, fasten the screws on the edge of the grill.

1-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from manufacturing defects in the material and workmanship under normal use for a period of one year after the date of purchase by the original purchaser.

This warranty does not cover transit damages. This warranty does not apply to damages from accident, misuse, alteration of any kind to the fan or where the connected voltage is more than above the nameplate voltage. This warranty does not apply to the finish on any portion of the product. Servicing performed by unauthorized persons shall render the warranty invalid. The warranty is not responsible for damages of any kind, including accident and consequential damages. Some states do not allow the exclusion or limitation of the incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

REPLACEMENT PARTS LIST

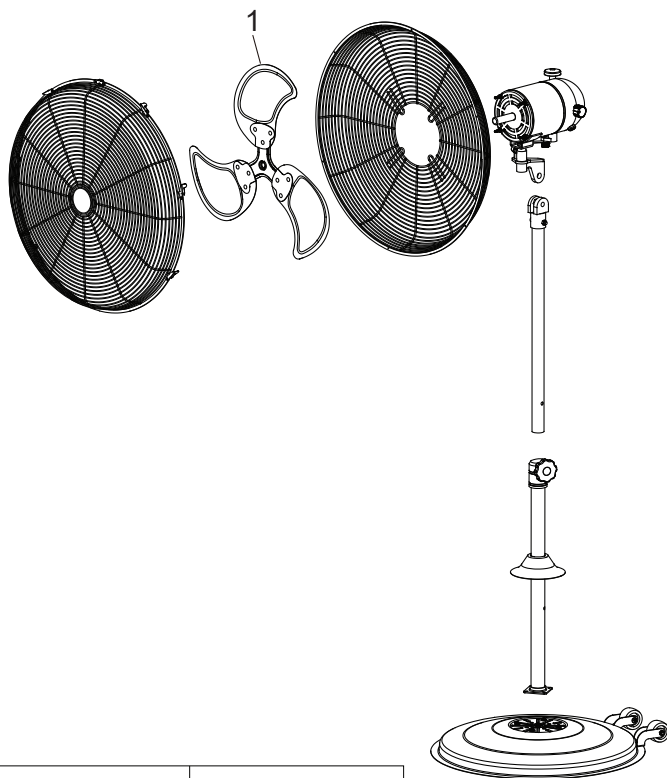

Part	Description	Part #
1	Blade	FAN-P20SW-1