


Electric Space Heater

MODEL: TWH-15Q2

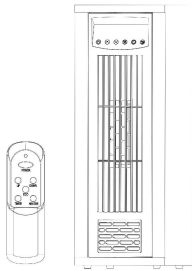

Thank you for choosing AIR CHOICE Space Heater!
This user manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read and start enjoying your warm winter!

Always here to help you
For any questions or help, please email us: airchoice@afterservice.vip

Warning: Please read the user manual carefully before using the unit and save it for future reference. Thank you for choosing the product of AIR CHOICE. This user manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:


Read ALL instructions before using this unit.

- CAUTION:** Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
- This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
- Exercise caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
- DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
- DO NOT touch the control panel or plug with a wet hand.
- DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.


ITEMS IN THE BOX

- INFRARED ZONE HEATING SYSTEM
- REMOTE CONTROL (It needs 2 AAA batteries, but not included)
- INSTRUCTION MANUAL

PRODUCT DIAGRAM

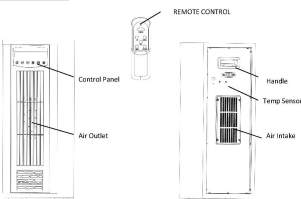

Control Panel

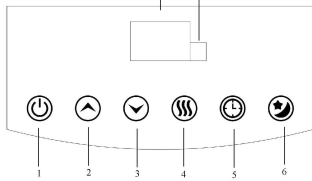

- ON/OFF button: Powers the display on and off.
- Temp up button: To increase desired temperature.
- Temp down button: To decrease desired temperature.
- Heating Mode button: To select between High and Low modes.
- Timer button: Used to engage timer mode and to set hour value for the timer.
- Eco button: Operates the machine in energy saving mode.
- ECO button: Used for energy saving mode.
- Mode button: Used for heating mode selection.
- Timer button: Used for setting timer and adjust time value of timer.

3. Setting the POWER OFF TIMER Function

Note: The Power-Off-Timer Function will allow for the heater to power Off after a certain set time, and can only be set while the heater's display is in the "On" position.

Turn the heater to the "On" position. Press the Timer button on the heater's control panel or the remote.

The digital display changes from the "temperature" to the "hours" option for the timer. Continue to press the timer button to change the number of hours you would like the heater to run before powering itself off. The hour options for the timer are from 0 to 12 hrs. (in 1 hr increments).

The selected hour increments will flash for a few seconds, then revert back to the set desired temperature. The heater will power OFF when the internal heater clock counts down the hour increments you set.

5. Setting electron lock

The Electron Lock can help avoid the heater from being accidentally engaged by children. The locking mechanism can be set in both the ON and OFF modes.

Press Temp Up and Temp Down buttons at the same time for 3 seconds. Locking is complete when you hear a beep. When locked, the functions of the control panel and remote will be locked for use. (LCD displayed on the digital screen)

When you need to unlock it, press Temp Up and Temp Down buttons at the same time for 3 seconds. You will hear a beep. The control panel and remote control will become functional again.

MAINTENANCE

- Turn off the heater on by pressing the ON/OFF button on the control panel or by pressing the Power button on the supplied remote control.
- Unplug the unit and let it cool completely.
- To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. CAUTION: DO NOT let liquid enter the heater.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- DO NOT immerse the heater in water.
- Wait until the unit is completely dry before use.
- If you won't use the unit for a long time, please take out battery in remote control according to following steps, then take care of the remote control.

CONTACT US

Thank you for choosing AIR CHOICE product.
If there is a defect arises during one year, please feel free to contact us to get your valid claim. To obtain warranty service, please model and order of the product via:
airchoice@afterservice.vip
☎ 41.885.333.868
Our usual response time is within 12 hours!

Get 24/7 Assistance at



Or Visit: <https://airchoice.afterservice.vip>


Questions or Problems?

Tell us
We are here to help with our lifetime professional 100% satisfied service within 12 hrs.

airchoice@afterservice.vip

- A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or unreliable power tap (strip/plug power strip).
- To avoid fire or shock hazard, plug the unit directly into a 120V AC electrical outlet.
- To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug. DO NOT unplug by pulling on the cord.
- Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
- Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by manufacturer dealers may cause hazard.
- Always use on a dry, level surface. Use on floor only.
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
- To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
- DO NOT use outdoors.
- WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
- Connect to properly grounded outlets only.
- Save these instructions.

Remote Control

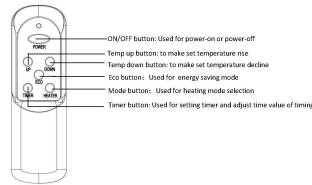

PREPARATION

Place the heater on a firm, level surface and plug it into a 120V/60Hz grounded power outlet. Only operate the heater in the upright position. Insert 2 AAA batteries into the remote control before using the remote control. (The batteries are not included.)

Get 24/7 Assistance at



Or Visit: <https://airchoice.afterservice.vip>

Questions or Problems?

Tell us
We are here to help with our lifetime professional 100% satisfied service within 12 hrs.

airchoice@afterservice.vip

SPECIFICATION

Voltage Rating	120 V (60Hz)
Power Consumption	1500W
Unit Size	8.46 in. (W) x 10.23 in. (D) x 24.03 in. (H)
Unit Weight	14.9 lbs


SAFETY FEATURES

Tip-Over Safety Feature

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored an upright position, the heater will restart. To continue operation, turn off the heater using the supplied remote control or the control panel on the heater.

Overheat Safety Feature

This heater is equipped with an overheat safety feature. When the heaters internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off.

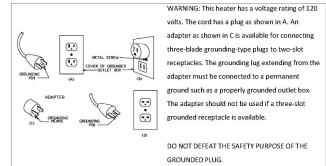

WARNING: It is normal for the power cord to feel warm to the touch, however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

OPERATING INSTRUCTION

1. Start and select working mode

Turn the heater on by pressing the ON/OFF button on the control panel or by pressing the Power button on the supplied remote control.

Once power is off, heating element will stop working at first. Fan will precool working for 3 mins to emit plenty of heat inside. This mark will indicate running during the 3 mins.

Select a heat Mode
Press the HEAT button to toggle between high and low heat modes.

 
Press ECO button for ECO mode selection.

High Mode uses 1500W; Low Mode uses 1000W; ECO mode is an Economic Energy Saving Function. When ECO mode is chosen, the heater will manage itself from less to more heating power (watts) in an attempt to maintain a constant warm 68°F.

2. Setting Desired Temperature

Adjust the desired temperature by pressing the Up/Down arrows on the control panel or remote control.

Desired temperature options vary from 59°F to 86°F. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.



STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt buildup, use the original packaging to repack the unit.

TROUBLESHOOTING

- If the heater will not operate, please check the following before seeking repair advice:
- Check if the power cord is plugged into an electrical outlet, if not, plug in.
 - Check to see if the battery on the remote is placed correctly.
 - Check to see if the battery on the remote is undamaged.
 - NOTE: For the heater to function properly, the desired temperature on the heater must be set a few degrees higher than the temperature in the room. If the seems to not be heating, increase the desired temperature on the heater to engage the heat elements.

WARRANTY

AIR CHOICE warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, AIR CHOICE will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) replace the product with a new product that is at least functionally equivalent to the original product, or provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part not included in accordance with instructions provided by AIR CHOICE, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes AIR CHOICE's property. When a store credit is given, the original product must be returned to AIR CHOICE and becomes AIR CHOICE's property. To obtain warranty service, e-mail AIR CHOICE Limited Warranty Service at airchoice@afterservice.vip. Please be prepared to describe the product that needs service and the nature of the problem.

This warranty does not apply to damage caused by failure to follow instructions relating to product use or the installation of components; damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; damage caused by service performed by anyone who is not a representative of AIR CHOICE; accessories used in conjunction with a covered product; a product part that has been modified to alter functionality or capability; terms intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; any product sold as is, including, without limitation, floor demonstration models and refurbished items; or a product that is used commercially or for a commercial purpose.