

AIRPLUS AP20-1909EE 除湿机说明书

尺寸: 143×210 mm 左右翻页册子 彩色印刷



BEFORE FIRST USE
First make the dehumidifier standing upright for 24hrs before being started so the compressor will be settled.

CONTACT US
We guarantee a replacement or a full refund if you have any questions! Please keep this manual for further reference.

ATTENTION:
Contact us to get **A FULL REFUND** or **A REPLACEMENT** if you have any questions with this product.

WARNINGS

This appliance should not be used by children under 8 years old. This is not a toy and children should not play with the appliance. Cleaning and user maintenance should not be done by children. This appliance can be used by children aged 8 years or older or persons with reduced capacity if they have been given instruction concerning using the appliance in a safe way and understand the hazards involved.

TROUBLESHOOTING

PROBLEMS	PROBABLE REASONS	SOLUTIONS
The dehumidifier does not work.	The socket is loose. The light of "FULL" is on. The room humidity is lower than setting. The filter is dirty.	Please check the loading to ensure the machine is charged. Please remove the water from the tank or replace the tank in its place. Please reset the humidity setting of the machine to ensure it is lower than the humidity of the room. Please clean the filter and make sure there is at least 1/2 inch space around the dehumidifier.
Dehumidifying effect is not obvious. Or the dehumidifier is not removing moisture.	The inlet or outlet is blocked. Doors and windows are open. The room temperature or humidity is too low.	Please clean the inlet and outlet. Check that all doors and windows are securely closed. This is normal.
The dehumidifier is a little noisy.	The vibration may be caused by uneven placement. The filter is clogged.	Please put the machine in a flat place. Please clean the filter.
The air turbine does not work.	The air turbine does not work. The filter is clogged.	Please reposition the air turbine or remove the foreign objects. Please clean the filter.

The display shows "E1", "E2", "H1" or "LO"

E1/E2	The component inside dehumidifier is under open circuit or short circuit.
H1	The indoor temperature is higher than 16°F.
LO	The indoor temperature is lower than 32°F.

⚠ If you have any questions, please contact us immediately.

CONTENTS

- 01 Notice of Compressor Running Status
- 02 Notice of Full Tank Detection
- 02 Before First Use
- 03 Important Safety Instructions
- 04 Product Details
- 04 Operation
 - Control Panel
 - Drainage
- 05 Care & Cleaning
 - Cleaning Tips
 - Clean The Filter
 - Storage
- 06 Notice of Continuous Drainage
 - Wrong Use Methods
 - Advised Use Methods
- 08 Troubleshooting
- 09 About Warranty

Advised Use Methods

⚠ This method is applicable for external water collecting vessel, please note the following:

- Keep the hose downward.
- Make sure the drainage outlet of the appliance is always higher than the maximum water level of the water collecting vessel or water may flow backward.
- Make sure there is always a height difference of 5.5 in between the outlet of hose and the drainage outlet of the appliance. The outlet of hose should be 5.5 in lower all the time.

⚠ This method is applicable for floor drain. Well connect the hose to the appliance and place the other end to the floor drain.

Notice of Compressor Running Status

It's a normal phenomenon that the compressor and fan keep running when the ambient humidity reaches the preset RH. The fan stops 5 minutes after the preset RH is reached. The compressor stops when the ambient humidity is 4% lower than the preset RH, and it starts automatically when the ambient humidity level is 4% higher than the preset level. The Return Difference design featuring 4% error range is for better protecting and prolonging lifespan of the appliance.

Notice of Full Tank Detection

- There may be a few residual water in the water collecting tray while the tank full indicator light is on. Please wait for several minutes before take out the water tank.
- The fan will keep working for 5 minutes and the compressor will auto shut off when the tank full indicator light is on for protection. The fan will auto shut off after extra 5-minute work if the water tank is still full.

STORAGE

If you do not need to use the dehumidifier for a long time, please store it in the following ways:

- Turn off the dehumidifier, cut off the power and sort out the power cord.
- Empty the water tank and keep it dry.
- Clean the filter and dry it out.
- Put away the dehumidifier and place it in the position unexposed to sun.

NOTICE OF CONTINUOUS DRAINAGE

Wrong Use Methods

⚠ If there is a U shape or a V shape between two ends of the hose, the increasing accumulation of water in the valley may stop water from draining to the water collecting vessel. It eventually leads to a backflow to water tank or a water leak from other lower parts of the appliance.

⚠ If there is no space between the outlet of hose and the water collecting vessel, the increasing pressure of water caused by raising water level may result in a failure of drainage from the appliance. It eventually leads to a backflow to water tank or a water leak from other lower parts of the appliance.

BEFORE FIRST USE

To prevent any unintended damage, please leave the appliance **standing upright** and outside the box for **24 HOURS** before plugging it in. It is very important to keep the appliance upright on a **flat surface** during use.

DRAINAGE

There are two methods of drainage to choose from.

01 Manual Drainage
When the tank is full, the dehumidifier will alarm and stop working automatically. Meanwhile, the "FULL" indicator light will turn on. It is suggested to "pour out" the water in the tank.

- Take out the tank gently.
- Empty the tank and put it back in place (if the tank is not in the correct position, the indicator light will remain on).

02 Continuous Drainage (optional)

- Take out the water tank and there is a continuous drainage outlet.
- Plug in the long hose.
- Put the water tank back in the dehumidifier and keep the hose downward to ensure proper drainage.

CARE & CLEANING

Attention:

- Keep the machine unplugged before maintaining or washing.
- Please clean the dehumidifier after running it off for 1 hour.
- Please use slightly water-dampened cloth to clean the dehumidifier.
- Please do not use volatile chemicals, gasoline, detergent, chemical processed fabrics or other cleaning solutions, which may be harmful to the dehumidifier.
- Please do not wash the dehumidifier with water directly.**

CLEAN THE FILTER

Experiment shows that a dry and clean filter is great for dehumidifying effect. Therefore, it is suggested to clean and dry up the filter every two weeks.

- Take out the filter.
- Remove dirt and wash out the filter.
- Leave the filter air-dry fully in the shade.

IMPORTANT SAFETY INSTRUCTIONS

- After being carried or tilted, the dehumidifier needs to be stop to keep upright for 24hrs.
- Keep the dehumidifier upright and make sure there is at least 10-inch space around it.
- Please keep cleaning the pre-filter regularly to maintain high efficient dehumidification.
- Keep the foreign objects away from the air inlet and outlet.
- Do not pour or splash water onto the dehumidifier.
- Do not unplug the dehumidifier or turn it off. Please use the switch button on the control panel.
- Please turn the dehumidifier off and empty the water tank before moving it.
- Do not clean the dehumidifier with bad sprays or other flammable detergents.
- Please turn the dehumidifier off and unplug it if it breaks down.
- If the power cord is broken, please contact us immediately.

PRODUCT DETAILS

- Air Outlet
- Power Cord
- Control Panel
- Handle
- Filter
- Water Tank
- Air Inlet
- Continuous Drainage Outlet
- Handle of Water Tank
- Caster

OPERATION CONTROL PANEL

ON/OFF Plug in the power cord, and the alarm sound indicates the appliance is ready. Press "ON/OFF" to turn on/off the dehumidifier.

Press "MODE" to choose your mode:
DRYING: Continuous operation
RAINING: Automatic setting, RH=45%
SLEEP: Automatic setting, RH=50%
STANDARD: Artificial setting of RH
MODE

Press "HUM" to set your desired humidity (RH 40%-80%) or CD (continuous operation) in standard mode.
HUM

Press "TIMER" to have a timer setting choice from 0 up 24 hours.
TIMER

Anion Functions: Please keep pressing the "MODE" button for at least 3 seconds to turn on/off the function.

OTHERS **Defrost Function:** When the ambient temperature is too low, it will automatically start to defrost to prevent collected water from being frozen.

Overflow Protection: when the tank is full, the dehumidifier will stop working and the indicator light will be on.