


Floor Fan

Instruction Manual

MODEL:FGD-18

AC-DSV21PD-18

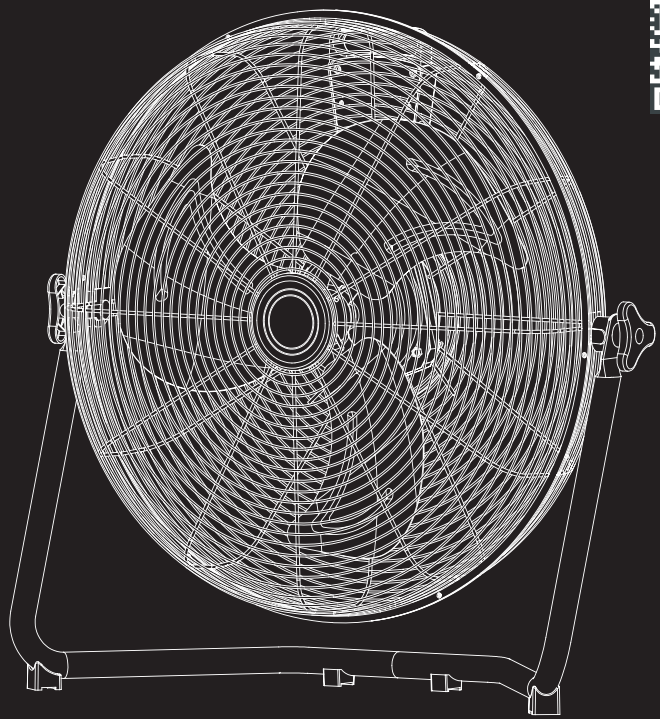

EST 9:00AM--17:00PM

HJ-Customer-Service@outlook.com

6269443420 | 6267435564

SPECIFICATIONS

Power Supply	120 V~ 60 Hz
Power Consumption	100 W
Operating Temperature	41°F~104°F (5°C~40°C)

Note: Due to continuous product improvements, the design and specifications of this product may differ slightly from the unit shown on the packaging.

Read this instruction manual carefully before assembling or operating the appliance, and keep it for future reference.


SAFETY WARNINGS

When using electrical appliances, always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons, including the following:

- To reduce the risk of electric shock, do not immerse or expose this appliance or its power cord to rain, moisture, or any other liquid.
- Dangerous high voltages are present inside the enclosure. To avoid electric shock, do not open the housing. Servicing should be performed by qualified personnel only.
- Ensure the fan is not placed near drapes, curtains, or any objects that may be drawn into the fan blades. Never position or operate the unit where it could be exposed to:
 - Heat sources such as radiators, heat registers, stoves, or other appliances that produce heat
 - Direct sunlight
 - Excessive dust
 - Mechanical vibration or shock
 - Poor ventilation
 - Uneven surfaces
- Do not expose the appliance to dripping or splashing. Do not place objects filled with liquids, such as vases, on or near the product.
- Do not obstruct the ventilation openings. These slots and openings ensure proper airflow and protect the product from overheating. Do not operate the fan if any opening is blocked; keep the unit free of dust, lint, hair, or anything that may restrict airflow.
- Always place the fan on a stable, level, and dry surface during operation to prevent accidental tipping.
- Connect only to a suitable 120V~ 60Hz grounded (earthed) mains outlet.
- Do not operate the fan in the presence of explosive or flammable fumes. Keep the fan away from open flames, cooking appliances, or any heat-producing equipment.
- Do not operate the fan if the cord or plug is damaged, if the appliance malfunctions, or if it has been dropped or otherwise damaged.

- Do not operate the fan without the grilles securely in place. Do not use the appliance if any grille becomes damaged or loose.
- Do not place the fan near an open window. Rain or moisture entering the fan may create an electric shock hazard.
- Do not let the power cord hang over the edge of a table or counter, or allow it to come into contact with hot surfaces.
- Do not insert fingers or allow foreign objects to enter the grilles, as this may cause injury or damage to the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by persons lacking experience and knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by a person responsible for their safety.
- WARNING:** Children must be supervised to ensure they do not play with the appliance.
- Turn the fan OFF and unplug it from the outlet when not in use, when moving it from one location to another, or before cleaning.
- To disconnect, grasp the plug and pull it directly from the outlet. Never pull on the cord.
- Switch off and unplug the appliance when not in use, before assembling or disassembling any parts, and before cleaning. To avoid a tripping hazard, safely coil the power cord.
- Do not place this appliance on flooring that may be marked, dented, or otherwise damaged by vibration.
- If the supply cord is damaged, it must be replaced by a qualified technician to avoid a hazard. Do not attempt to repair, disassemble, or modify the appliance yourself. There are no user-serviceable parts inside.


PRODUCT OVERVIEW

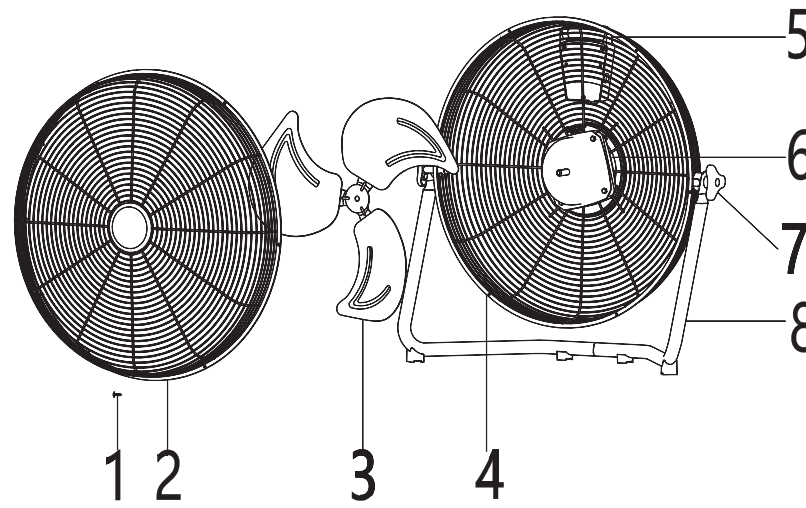


1	Locking Screw	5	Speed Control Switch
2	Front Grille	6	Motor
3	Fan Blade	7	Hand Knob
4	Rear Grille	8	Support Tube

Remove all packing materials and accessories. Ensure that all parts are included. If any item is damaged or missing, please contact our after-sales support.

ASSEMBLY INSTRUCTIONS

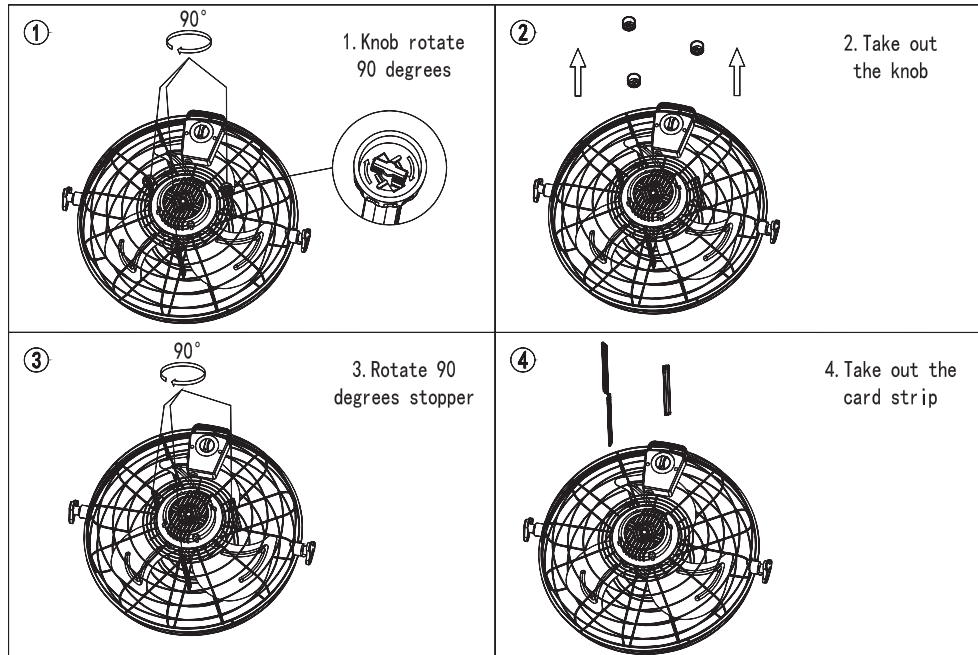

Do not plug the fan into a power outlet, and make sure the power switch is turned off before beginning assembly.

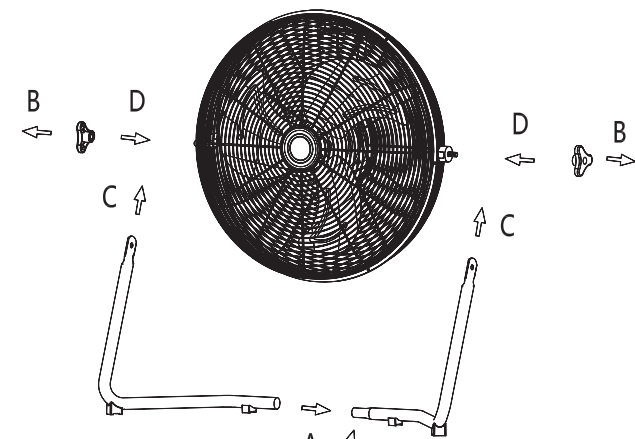

- Release the screw from the tube, connecting the support then tighten the screw.
- Remove the hand knobs from the fan.
- Attach the support tubes to the fan.
- Reinstall and tighten the hand knobs.

OPERATION

- Place the fan on a level, dry surface.
- Plug the fan into a suitable power outlet. Turn the speed control switch to select the desired speed. The fan has four settings: 0 (Off), 1 (Low), 2 (Medium), and 3 (High).
- To adjust the tilt angle of the fan head, gently push the guard.
Caution: Always turn off the fan before making this adjustment.
- After use, turn the speed control switch to "0" and unplug the fan.




Warning: Never touch the fan blades with your hands or any other objects while the fan is operating.

CARE AND MAINTENANCE

- Always disconnect the fan from the power outlet before cleaning.
- Avoid contact with moving parts.
- Use only a soft, damp cloth to clean the fan.
- Do not immerse the fan in water or allow water to enter the motor housing.
- Do not spray the fan with liquids or submerge it in water or any other liquid.
- Do not use gasoline, paint thinner, or other harsh chemicals to clean the fan.
- Make sure the fan is switched off and unplugged before removing the guard.
- Clean the fan blades and guard with a soft, damp cloth.
Caution: Fan blades may have sharp edges. Handle with care.
- If the fan will not be used for an extended period, store it in its original packaging or cover it and keep it in a dry place to protect it from dust.

WARRANTY INFORMATION

- This product is covered by a **one (1)-year** limited warranty against defects in materials and workmanship, valid only for the original purchaser. The warranty period begins on the date of retail purchase and is non-transferable.
- This warranty does not cover normal wear and tear, or any damage resulting from misuse, negligent use, use with improper voltage or current, failure to follow the operating instructions, or any disassembly, repair, or modification not authorized by our after-sales service.
- Additionally, this warranty does not cover damages caused by Acts of God (such as fire, flood, hurricanes, or tornadoes) or force majeure events (such as arson, power outages, riots, or vandalism).
- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state (or province to province). Some states (or provinces) do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

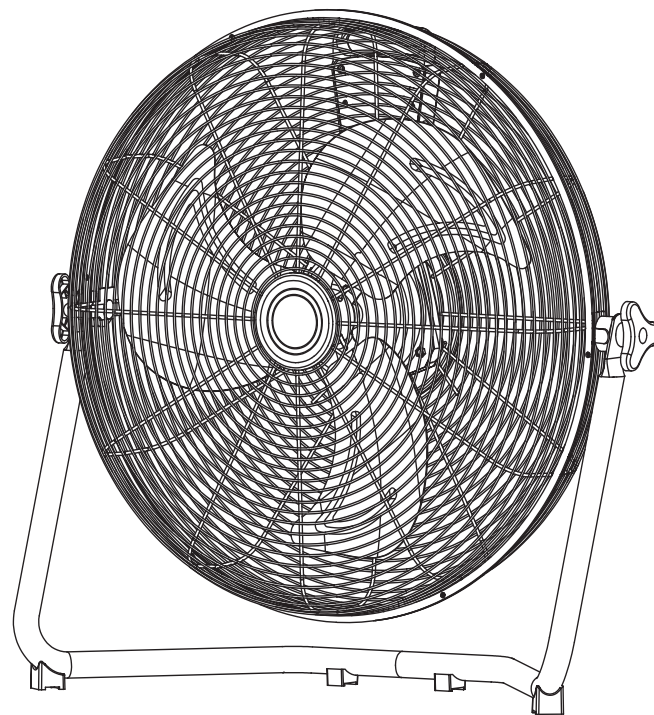

Technical Support

6269443420 | 6267435564

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.