

Kenmore®

29" Tower Heater with Humidifier

Model: KM-65012-BK

Customer Support
support@kenmorehomecomfort.com
www.kenmorehomecomfort.com



Table of Contents

Before Using Your New Heater	2
Important Safety Instructions	2-3
California Proposition 65.....	3
Specifications	3
Assembly	4
Parts and Features	4-5
Operating Instructions	6-7
Maintenance and Cleaning	7
Disposal and Environmental Protection	7
Limited Warranty	8

Before Using Your New Heater

The following instructions are essential for proper assembly and operation. Please keep these instructions for future reference. Always refer to the technical data on the product, subject to technical alterations.

Please read the instructions carefully.

Important Safety Instructions



WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using this heater, follow basic safety precautions including the following:

- **WARNING:** Please read the following instructions for safety before use. Improper use may result in fire, property damage, personal injury, or death. DO NOT use the product with incompatible components or alter the product in any way. Improper use may result in fire, property damage, or personal injury. Make sure to use the heater according to the following safety instructions and guidelines.
- Use the heater only as described in this guide.
- This heater is for household use only.
- This heater is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If used near children and/or pets, close supervision is necessary.
- Never leave the heater unattended while it is in use. Always turn the heater to the OFF position and unplug it from the electrical outlet when not in use.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. If provided, use handles when moving the heater, or move when the heater has cooled.
- Connect the heater to a single phase AC supply of the voltage specified on the rating plate.
- Do not locate the heater immediately below an electrical socket outlet.
- Do not run the cord under carpeting and do not cover the cord with throw rugs, runners, or similar objects. Place cord away from high traffic areas and where it will not be tripped over.
- Do not use the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person to avoid a hazard.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.
- Be sure that no other appliances are in use on the same electrical circuit, as your heater as an overload can occur.
- The cord should not be placed near the hot surface of the appliance. Do not wrap the cord around the heater immediately after use.
- Use the heater on flat, dry surfaces only.
- Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool. Never locate the heater where it may fall into a bathtub, standing water, or other water container.
- Do not immerse any part of the heater in water.
- Do not allow the interior to get wet as this could create a hazard.
- Do not use any cleaning chemicals such as detergents and abrasives.
- Make sure that no pieces of packing material have been left between the elements of the heater. It may be necessary to pass over the appliance with a vacuum cleaner.

Important Safety Instructions, con't

- Do not put any object into any ventilation or exhaust opening of heater. To prevent a possible fire, do not block air intakes or exhaust openings in any manner.
- Do not use the heater on soft surfaces, like a bed, where openings may become blocked or heater may fall over.
- Keep all flammable materials e.g. furniture, pillows, bedding, papers at least 3 feet from the front of the heater and avoid contact with the sides and rear.
- Do not place this heater near flammable surfaces or substances. Keep flammable surfaces and substances at least 3.3 feet from the front and avoid contact with the sides and rear.
- Use the heater in a well-ventilated area.
- Do not use the heater in a room smaller than 53 square feet.
- Do not use the heater in any areas where petrol, paint, or other flammable liquids are stored, e.g. garages or workshops as there can be hot, arcing or sparking parts inside the heater.

California Proposition 65



WARNING

The use of this appliance can expose you to chemicals, including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

El uso de este electrodoméstico puede exponerte a productos químicos, incluidos el plomo y compuestos de plomo, que según el Estado de California son conocidos por causar cáncer y defectos de nacimiento u otros daños reproductivos. Para obtener más información, visita www.P65Warnings.ca.gov.

L'utilisation de cet appareil peut vous exposer à des produits chimiques, y compris du plomb et des composés de plomb, qui sont connus par l'État de Californie pour causer le cancer et des anomalies congénitales ou d'autres dommages reproductifs. Pour plus d'informations, rendez-vous sur www.P65Warnings.ca.gov.


Specifications

Product Description	29" Tower Heater with Humidifier
Model Number	KM-65012-BK
Rated Voltage	AC 120V ; 60Hz
Rated Power	1500W
Assembled Dimensions	10.2x10.2x29.7"


Assembly

Base setting:

Align the four fixing screw holes of the chassis with the screw posts of the fuselage, and lock the fuselage and the chassis with four self-tapping screws to put the product into use.

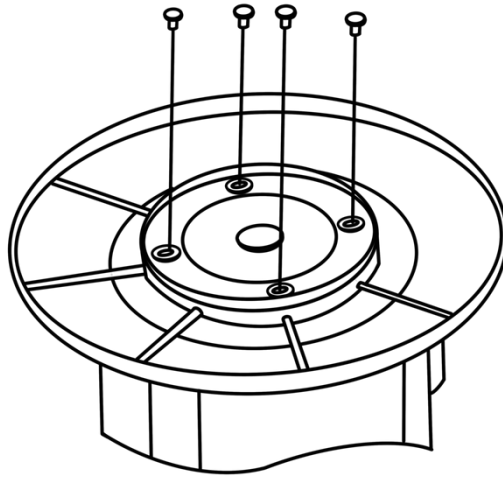


Parts and Features

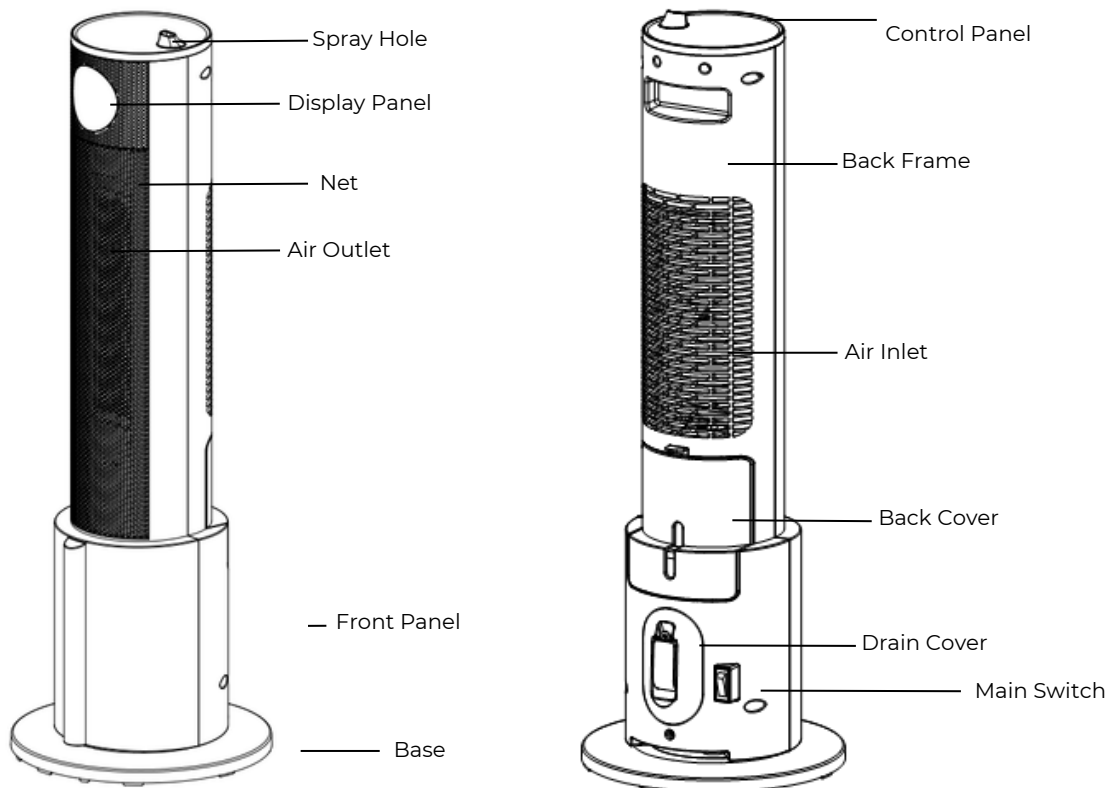


Parts and Features Con't

Control Panel

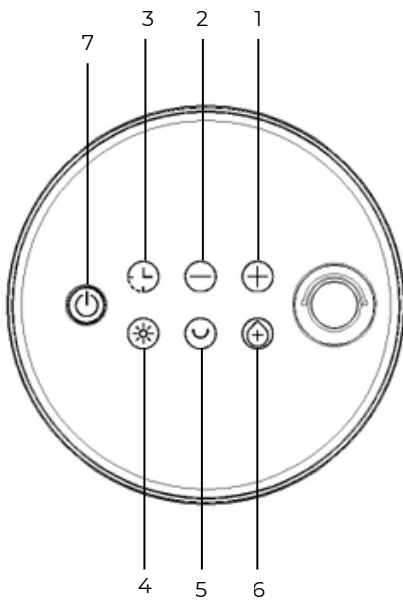


1. Temperature increase
2. Temperature decrease
3. Timer
4. Heating
5. Swing
6. Humidifier
7. Standby

Remote Control

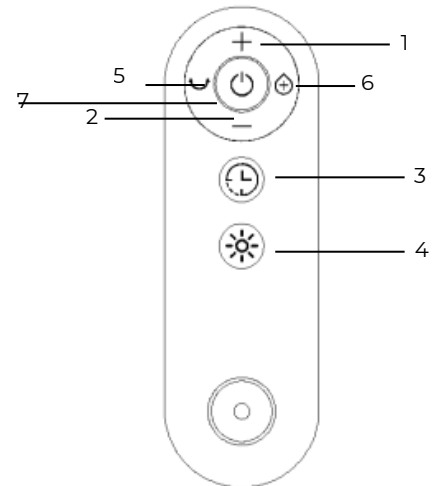

Display Panel

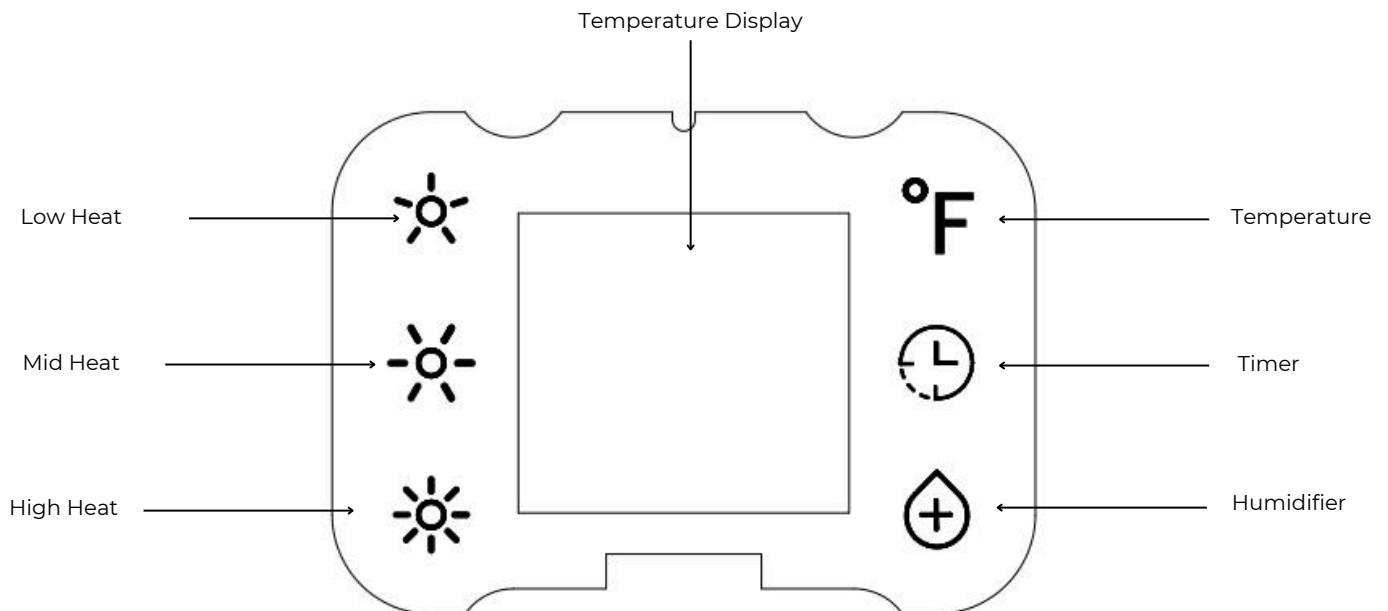

Operating Instructions

Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.

POWER ON: Place the heater on a stable floor and plug into an electrical outlet. Turn on the power switch on the back of the product. "I" means open, "O" means off. At this time, the heater is in standby mode, the display shows ambient temperature, and the "°F" light is on. Press the "⏻" button on the control panel. The heater starts to work in the low-level heating, and the "★" light is on.

HEATING: Press the "⊙" button once for mid-level heating. The display shows "⊙". Press twice for high-level heating. The display shows "⊙". Press again for low-level heating.

TIMER: Press this "⌚" repeatedly to set a period after which the heater will turn itself off (between 1 hour – 12 hours). The timer symbol light will display at the same time.

SWING: Press this "↺↻" to activate oscillation. The same light will display. Press again to cancel.

TEMPERATURE: "+" and "-" adjust room temperature. Press "+" to increase the desired temperature, and press "-" to decrease the desired temperature.

HUMIDIFICATION FUNCTION: First add water to use the humidification function. (Figure 1)

To add water: Make sure the heater is unplugged. Then open the back cover and take out the water tank. Fill the water tank with water and put back into the body of the heater. Replace the back cover. Plug the heater into a wall outlet.

Press "⊕" button. The product turns on the humidification function, and the humidification indicator "⊕" lights up. Then press "⊕". The humidification function is turned off, and the humidification indicator is off. (The humidification function can also be used separately when power is turned on).

POWER OFF: Press "⏻" again. After working for 30 seconds, the fan will automatically turn off. If the product is not in heating before, it will go directly to standby.

NOTE:

Drainage: When the product is not used for an extended period of time, the water in the tank should be drained. Make sure the heater is turned off and then unplug the heater from the outlet. Open the back cover and remove the water tank. Empty the water tank into a sink and replace the water tank and back cover. Then, unplug the water plug and drain the remaining water from the tank. (Figure 2)

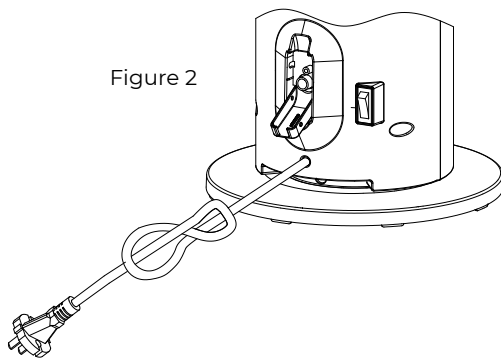


Figure 2

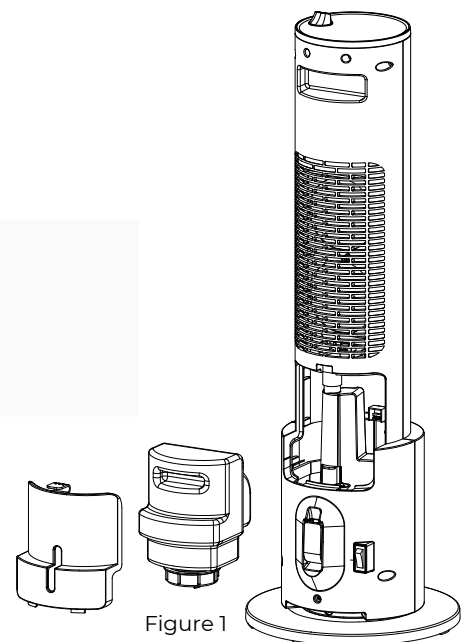
 



Figure 1

Operating Instructions, con't

Remote control: Before using the remote control, unplug the plastic piece on the right side of the remote control, then use the remote control to align the product with the remote control receiver.

HOW TO CHANGE THE REMOTE CONTROL'S BATTERY:

1. Open the battery compartment by sliding the cover down.
2. Install the button battery, paying attention to the battery polarity.
3. Cover the battery cover.

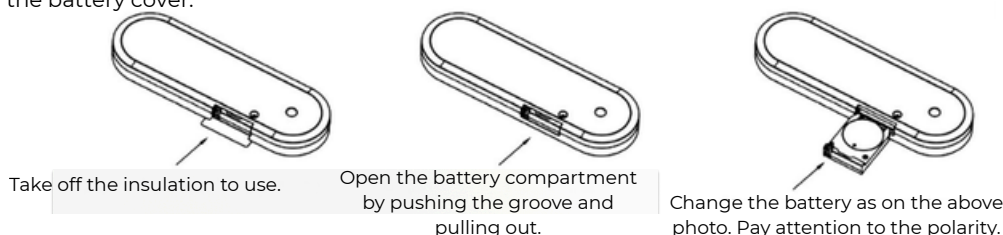

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- DO NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Replace the battery with 1 "CR2025" button cell battery and dispose of the used battery properly and in accordance with local law and ordinances.
- The nominal battery voltage of the "CR2025" button battery is 3.0V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 158°F (70°C) or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for extended periods of time according to local regulations.
- Always completely secure the battery compartment if the battery compartment does not close securely. Stop using the product, remove the batteries, and keep them away from children.

Maintenance and Cleaning

- Always remove the plug from the socket outlet and allow the heater to cool down before cleaning it.
- Wipe the heater with a soft damp (not wet) cloth.
- To store the heater, wind the cable around the bobbin and store the heater in a clean dry place.
- In case of malfunction, do **not** try to repair the heater yourself, it may result in a fire hazard or electric shock.

Disposal and Environmental Protection

- Dispose of the product at the end of its lifetime according to relevant legal regulations.
- Electrical products such as electrical appliances, energy-saving lamps, and (rechargeable) batteries marked with a crossed-out garbage can cannot be disposed of with household waste.
- Dispose of the product at a specialized waste disposal site.



Limited Warranty

Equity Sales & Marketing, Inc., ("ESM") warrants this product against defects in workmanship or material for a period of 1 year from the date of purchase for residential, non-commercial use. This is the Limited Warranty against manufacturing defects. This warranty is valid only in the United States. For California residents, this warranty commences on the delivery date of product to the consumer, instead of the date of purchase. The Kenmore Brand is used under license. Direct all claims for warranty service to www.kenmorehomecomfort.com.

THIS WARRANTY SHALL NOT APPLY to any products or parts thereof which have been damaged by acts of nature, accidents, negligence, commercial use, tampering, misuse or abuse, or which have been altered or modified (including removal of the serial number) or repaired by an unauthorized person or service center. Misuse includes, among other things, connection to improper voltage supply. Further, this warranty does not cover cosmetic damage to the product.

THIS WARRANTY SHALL NOT APPLY to wheels, casters, or accessories since their life depends upon the amount of use.

THIS WARRANTY SHALL NOT APPLY to a product exposed to liquids, or used in wet, rainy, or humid environments.

THIS WARRANTY SHALL NOT APPLY to a product with exhausts or ventilation that have been obstructed.

THIS WARRANTY SHALL NOT APPLY to a product used in a manner contrary to any of the sections of the Use and Care Guide.

FOR REPAIR OR REPLACEMENT the inoperative machine must be delivered with shipping and delivery charges prepaid together with the receipt, bill of sale, or receipted invoice which is evidence of the purchase date (or delivery date for California residents) to place of purchase. ESM will either repair or replace, at its selection, all defective machines during the warranty period.

This limited warranty is the sole and exclusive warranty for the ESM product. No employee, agent, dealer, or other person is authorized to alter this warranty or make other warranty on behalf of ESM.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY TO THE CONSUMER. ESM SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. ESM'S LIABILITY UNDER NO CIRCUMSTANCES WILL EXCEED THE CONTRACT PRICE FOR THE PRODUCT OR PARTS FOR WHICH LIABILITY IS CLAIMED.

The foregoing obligations are in lieu of all other obligations and liabilities including negligence and state ESM's entire exclusive liability and the purchaser's exclusive remedy. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions do not apply to you in those states.

For more information visit: www.kenmorehomecomfort.com

Kenmore and the Kenmore logo are registered trademarks of Transform SR Brands LLC and are used under license. Distributed by Equity Sales & Marketing, Inc., Bentonville, AR 72712.

