


BOE.

# Y27Q-30 Simplified service manual for dismantling

Model Name: Lenovo Y27Q-30

# Exploded Diagram

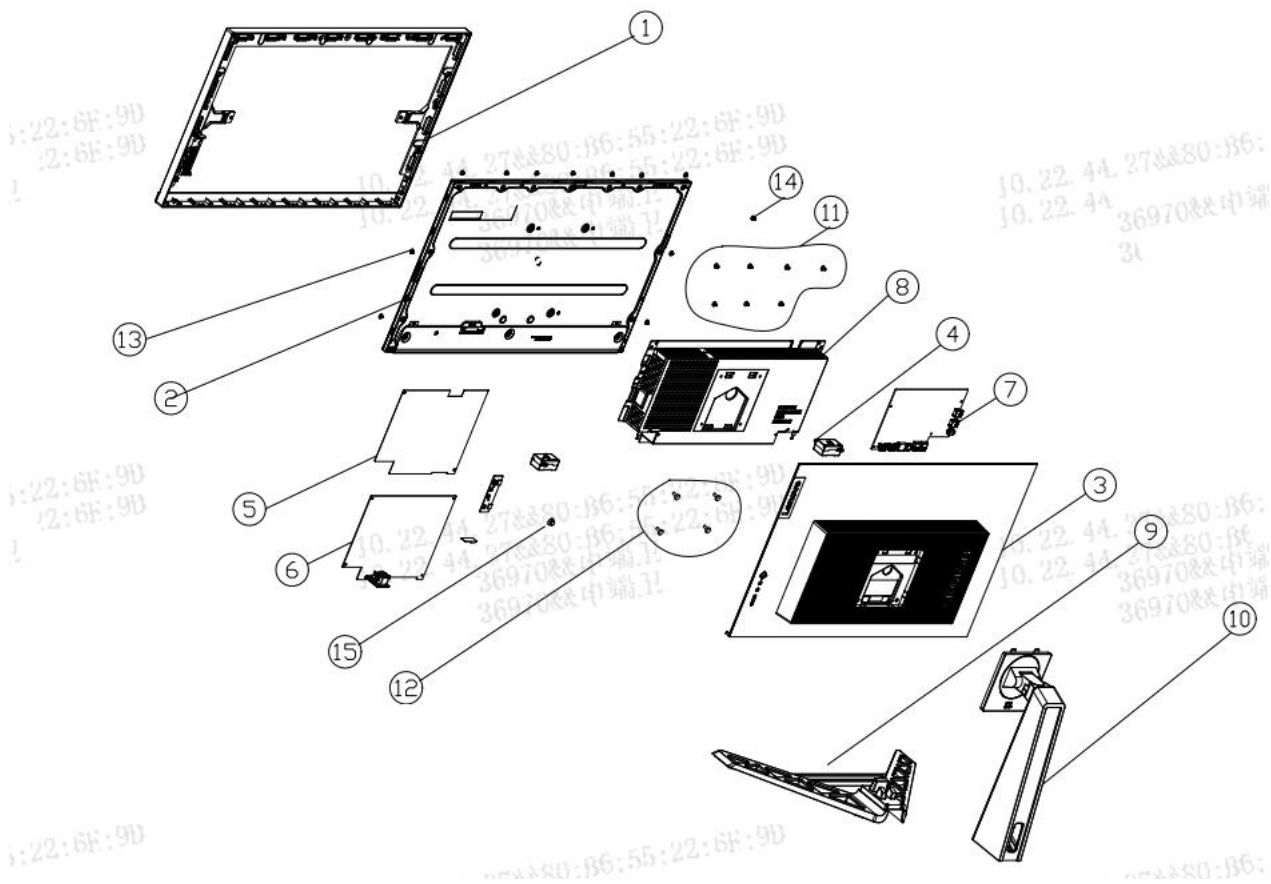


NO.	Part Name
1	Middle frame
2	Panel
3	Rear shell
4	speaker
5	Power board mylar
6	Power board
7	Main board
8	Isolation cover
9	Base
10	Stand assy
11	Screw
12	Screw
13	Screw
14	Screw
15	Five way key

## 1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.

Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.




<p>Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.</p>	
<p>Hold LCD by the side carefully and DON'T touch or press panel directly.</p>	

## 2. Appropriate tools

Select the Appropriate tools for disassembly and re-assembly.

Phillips screwdriver (#2)	
spacer screwdriver	
C/D disassembly tool	
Gloves or soft cloth	

### 3. Disassembly SOP

<p>Put the monitor on a flat surface (Put the EPE on under the monitor)</p>	
<p>Disassemble the bracket through the button in the circle</p>	
<p>Pull out stand</p>	

Remove the screws




Use the C/D disassembly tool to release Rear cover hook from disassemble hole on bottom




Remove All tape and foil




Remove the left and right light bar lines, Then remove the wires connecting the key board and take out the key board and LED board

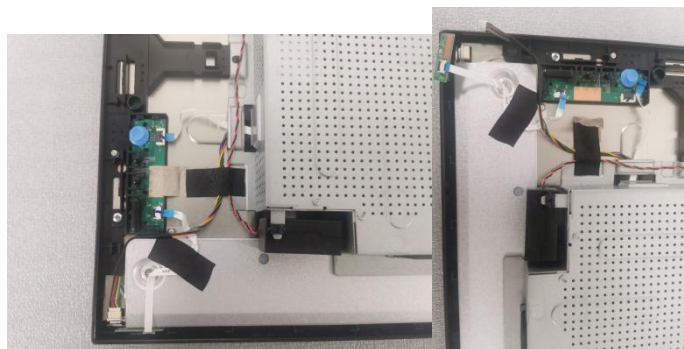


Remove FFC line

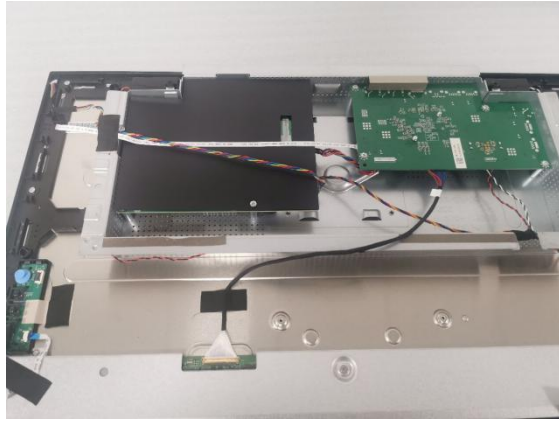

Remove screw.  
Take out the mylar sheet from  
board

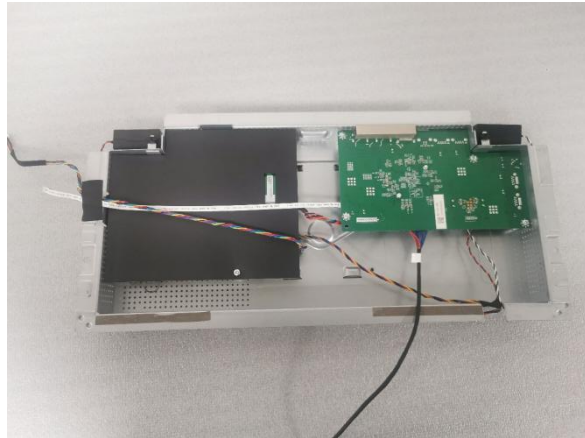

Remove the main board and power  
board screws

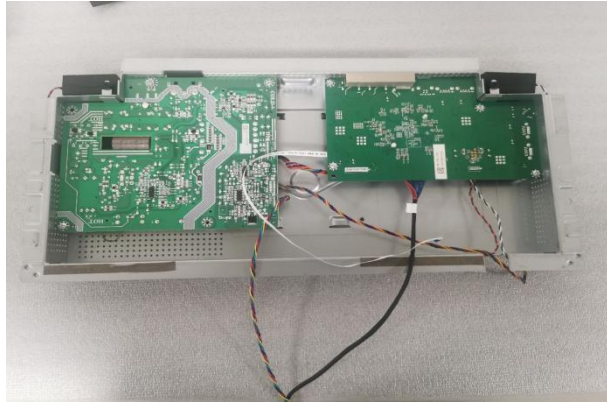

Take out the main board and  
power board

