

## Lug kits and accessories

### Standard main/sub-feed breaker lug capacities

| Ampere rating | Lug wire range Al/Cu                   |
|---------------|----------------------------------------|
| 100           | (1) #14–1/0                            |
| 125–225       | (1) #4–4/0                             |
| 250–350       | (1) 250–500 kcmil                      |
| 400           | (2) 3/0–250 kcmil or (1) 3/0–500 kcmil |

### Main/through-feed lug kits

| Ampere rating | Wire range Al/Cu | Catalog number   |
|---------------|------------------|------------------|
| 100           | (1) #14–1/0      | <b>LUGKIT100</b> |
| 225           | (1) #6–300 kcmil | <b>LUGKIT225</b> |
| 400           | (2) #2–500 kcmil | <b>LUGKIT400</b> |
| 600           | (2) #2–500 kcmil | <b>LUGKIT600</b> |

### Kits

| Description                                                                              | Catalog number                   |                 |                   |
|------------------------------------------------------------------------------------------|----------------------------------|-----------------|-------------------|
|                                                                                          | 100 A                            | 225 A           | 400/600 A         |
| Service entrance kit—MLO                                                                 | <b>SEK1/2 ①</b>                  | <b>SEK1/2 ①</b> | <b>SEK4/6 ①</b>   |
| Service entrance kit—MCB                                                                 | <b>SEKB ②④</b><br><b>SEKG ③④</b> | <b>SEKF ④⑤</b>  | <b>SEKKL ④⑥</b>   |
| 200% neutral kit                                                                         | <b>2NK100</b>                    | <b>2NK225</b>   | <b>1NK400</b>     |
| Sub-feed breaker adapter<br>(used to mount 225 A<br>sub-feed breaker in<br>400 A panels) | —                                | —               | <b>225ASFBKIT</b> |
| Sub-feed breaker adapter<br>(used to mount 225 A<br>sub-feed breaker in<br>600 A panels) | —                                | —               | <b>225BSFBKIT</b> |
| Sub-feed breaker adapter<br>(used to mount 400 A<br>sub-feed breaker in<br>600 A panels) | —                                | —               | <b>400ASFBKIT</b> |

① Applicable for use with MLO, SE panels only.

② Only applicable for SE PRL1a with chassis-mounted BAB, QBH main breaker.

③ Only applicable for SE PRL2a with chassis-mounted GHB main breaker.

④ Main breaker panels only—includes barrier kit and bonding jumper.

⑤ To be used with F-frame main breaker.

⑥ To be used with K- and L-frame main breaker.

### Accessories

| Description             | Catalog number    |
|-------------------------|-------------------|
| Isolated ground bar kit | <b>ISOGROUND</b>  |
| Copper ground bar kit   | <b>CUGROUND</b>   |
| 1P filler plate ①       | <b>5155C62H01</b> |
| Series rating kit ②     | <b>SRK</b>        |

① Each PRS panel comes with 50% filler plates, e.g., 18 circuit interior contains 9 filler plates.

② Series rating kit includes series rating book and adhesive sleeve and series rating sticker. If panelboard is being series rated higher than the base rating, an SRK is required.