 


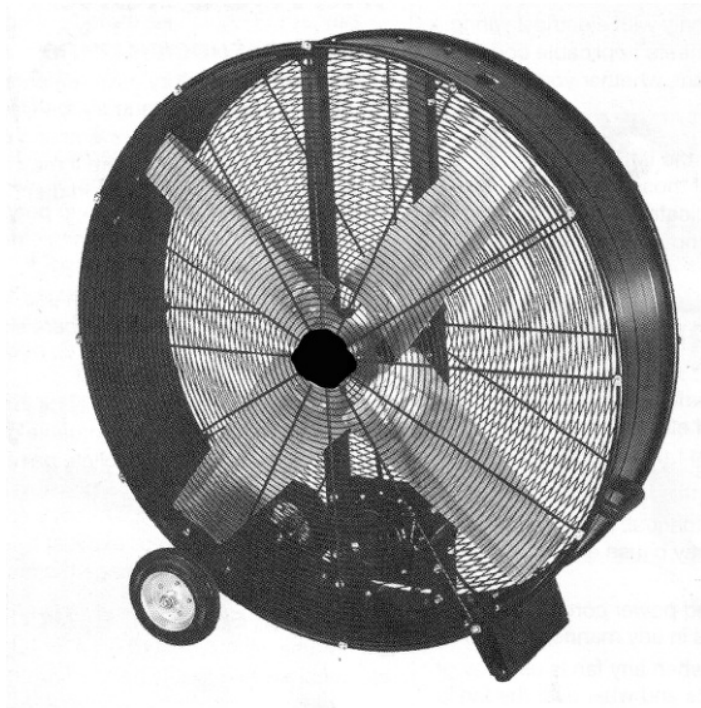

42"High Velocity Belt Drive Drum Fan

Features:

- 2-Speed Industrial Fan
- Individually Balanced Aluminum Blades
- Handle and Wheels for Easy Movement
- All Metal Body
- Steel Safety Grilles
- Belt Drive for Low Noise and Vibration
- 115V A.C. / 60Hz

Save These Instructions

INTENDED USE:

This product is intended for indoor residential, office, industrial, or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician,

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "**WARNING**" to indicate the level of hazard. **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS:

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner,
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 18 AWG and rated not less than 1875 watts. 1115W
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS!

WARNING: SHOCK HAZARD

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. Do not use in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock fire, or damage the fan.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.

CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, do not use this product with any solid-state speed control device.

 
WARNING: PREVENT ELECTRIC SHOCK

This product has a cord with 3-prong grounding-type plug (A) which fits the 3-slot grounded receptacle (A2). DO NOT remove the grounding prong (A1) if only a 2-slot receptacle (B) is available."

For connecting 3-prong grounding-type plug to 2-slot receptacle, use an ADAPTER (C) The grounding lug (D) extending from the adapter must be connected to a permanent ground with the Metal Screw (E) such as a properly grounded outlet box (E).

The adapter should not be used if a 3-slot grounded receptacle is available.

DO NOT DEFEAT THE SAFETY PURPOSE OF EITHER A GROUNDED PRONG OR A GROUNDING LUG.

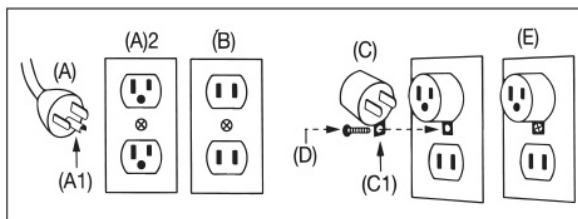


Adapter is not included

DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner, Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement, For all other repairs contact Comfort Zone Customer Service by telephone or mail for information and assistance,


DO NOT run power cord under carpeting. Do not cover cord with throw rugs, runners or the like, Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 18 AWG and rated not less than 1115 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

 PACKAGE CONTENTS

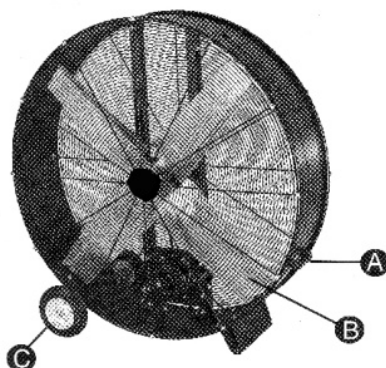

PART	DESCRIPTION	QUANTITY
A	Handle	2
B	Blade	1
C	Wheel	2

 Wheel Assembly Instructions:

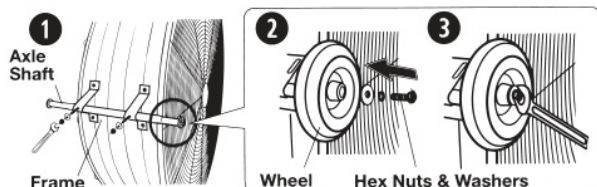

1. Insert axle shaft through the frame. Align the holes in the frame to the screws in the axle. Secure washers and hex nuts with a wrench as shown.
2. Slide in each wheel over end of each axle shaft and secure with hex nuts and washers.
3. Tighten hex nuts.

SPECIFICATIONS

Voltage
115V
Frequency
60Hz
Wattage
430W
Max.Amperage
3.7A

USAGE

Fan Operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

Fan Location: Place the fan in the area of the room that will provide proper fan cooling.

Fan Connection: Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.

Note: To Prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.

Turning fan on: Place fan on stable, level surface. Plug fan into properly grounded outlet. To start the fan, press the rocker switch from the O position to the desired fan speed - II or I.

Turning fan off: To turn the fan off, press the rocker switch from the current fan speed setting to the O position. Remove plug from outlet.

CARE AND MAINTENANCE

Cleaning: CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance: The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair: DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage: Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.