



OPERATING INSTRUCTIONS

RT26 - RT32 - RT40 - RT48

RINSE TANKS

For use with Solvent Cleaning Solutions

Build-All LLC
5203 W. Clinton Ave
Milwaukee, WI 53223
414-716-0023
www.Build-All.com
Sales@Build-All.com

SET-UP AND OPERATION

Unpack the Rinse Tank and inspect for any visible signs of shipping damage. If damage has occurred, please contact the distributor where you purchased the Rinse Tank to file the appropriate claim.

This unit is designed for use with petroleum based solvents with a TCC Flashpoint of 105 degrees Fahrenheit or above.

- STEP 1) While the unit is resting on the side of the tub attach the legs to the tub of the Rinse Tank using 1/4-20 x 1/2" Phillips Head Screws (16 pcs provided) and secure them with the 1/4-20 Nylon Locknuts (16 pcs provided). See schematic.
- STEP 2) Once legs are securely attached set Rinse Tank upright and place in desired location.
- STEP 4) Open the lid of the Rinse Tank until it is "locked" in the open position.
- STEP 5) The Rinse Tank is now ready for solution, verify which model you have with the serial number decal and fill with the appropriate amount of solution;

MODEL	MINIMUM CAPACITY
RT26	20 GALLONS
RT32	32 GALLONS
RT40	38 GALLONS
RT48	60 GALLONS

The Rinse Tank is now ready for use. Always keep the lid of the Rinse Tank closed to minimize solvent evaporation. Please see the appropriate manual for any pump module that may have been purchased with the Rinse Tank.

CAUTION: Follow the Chemical Manufacturers instructions for proper handling.

CAUTION: The fusible links must be intact and properly installed during operation of this unit.

PARTS LIST

<u>RT26RT32</u>		<u>RT40</u>	<u>RT48</u>	<u>QTY</u>	<u>DESCRIPTION</u>	
1	40102	40105	40106	40110	1	Tub Weldment
2	40101	40104	40107	40109	1	Fire Cover
3	40100	40103	40103	40108	1	Legs w/hardware
4	14888	14888	14888	14888	8	#10 Tech Screw
5	10344	10344	10344	10344	16	1/4-20 Hex Bolt
6	13152	13152	13152	13152	16	1/4-20 Locknut
7	15944	15944	15944	15944	32	1/4" Flat Washer
8	40099	40099	40099	40099	1	Latch Bar
9	99-12472	99-12472	99-12472	99-12472	1	Fusible Link
10	14992	14992	14992	14992	1	Socket Hs Shldr Screw
11	14968	14968	14968	14968	1	Socket Screw
12	15920	15920	15920	15920	1	#12 Flat Washer