



OPERATING INSTRUCTIONS

SSWH30

**STAINLESS STEEL
RECIRCULATING CLEANER**

FOR USE WITH AQUEOUS CLEANING SYSTEMS

SET-UP AND OPERATION

Unpack the parts washer and inspect for any visible signs of damage during shipping. If damage Has occurred, please contact the distributor where the unit was purchased for proper instructions.

- STEP 1) Choose a suitable location for the SSWH30MOD series parts washer and place a 30 gallon drum.
- STEP 2) Place the DHR900 heater in the drum with the heater box located on the right side of the drum.
- STEP 3) Fill the drum with the aqueous cleaning solution of choice.
- STEP 4) Place the parts washer on its front; insert pump on the pump hanger into bracket located on the bottom of the tub.
- STEP 5) Carefully place tub on top of the drum which should be full of cleaning solution.
- STEP 6) Align the Tub with the Drum Heater so the Heater passes through the gap in the Mounting Ring on the bottom of the Tub
- STEP 7) Plug the pump power cord into the upper receptacle (switched outlet). Plug the heater into the bottom receptacle (outlet not switched). Plug the electrical assembly power cord into a properly grounded outlet with 115V/60Hz, 15 Amp power source.
- STEP 8) Set the adjustable thermostat on the heater to the desired temperature. Allow 2-3 hours for the cleaning solution to heat up.
- STEP (9) Switch power to the Aon@ position. Cleaning solution should be at a steady flow through the flex hose and flow thru cleaning brush. The parts washer is now ready for use.
- STEP (10) **TURN OF THE UNIT WHEN NOT IN USE. LEAVING THIS UNIT RUNNING MAY RESULT IN PREMATURE FAILURE OF THE DRUM HEATER OR PUMP. FAILURE OF THE PUMP OR HEATER CAUSED BY RUNNING THESE ITEMS IN A DRY ENVIRONMENT WILL VOID THE WARRANTY**

CAUTION: FOLLOW THE CHEMICAL MANUFACTURERS INSTRUCTIONS FOR PROPER HANDLING OF SOLVENT.

SECTION III - WARRANTY AND SALES INFORMATION

WARRANTY

BUILD-ALL's equipment is guaranteed for one (1) full year from the date of purchase against defects in materials and workmanship. This warranty covers the repair or replacement, at Build-All's option, of any part that proves to be defective provided that the part is submitted to Build-All by its original owner, all transportation charges prepaid and that examination by Build-All discloses a defect in materials or workmanship.

TURN OF THE UNIT WHEN NOT IN USE. LEAVING THIS UNIT RUNNING MAY RESULT IN PREMATURE FAILURE OF THE DRUM HEATER OR PUMP. FAILURE OF THE PUMP OR HEATER CAUSED BY RUNNING THESE ITEMS IN A DRY ENVIRONMENT WILL VOID THE WARRANTY

The warranty does not apply to any unit or part that has been damaged in shipment or abused, or repaired by any person nor belonging to Build-All's repair department.

Build-All does not assume liability for unauthorized changes or repairs to this equipment and its liability does not extend to consequential damages.

SALES INFORMATION

To order replacement parts always furnish the model number and serial number to insure correct identification, call or write:

Build-All
5203 W. Clinton Avenue
Milwaukee, WI 53223
(800) 558-2148

