WindGuard Tech.



Assembly instructions for Wind Guard A330/A310/Q400/B1900



HOT GLASS WILL CAUSE BURNS

DO NOT TOUCH GLASS UNTIL COOLED

NEVER ALLOW CHILDREN TO TOUCH GLASS

- Keep children away.
- **CAREFULLY SUPERVISE** children near fire pit.
- Alert children and adults to hazards of high temperatures and Burns.
- High Temperatures may ignite clothing or other flammable materials.
- Clothing, furniture and other flammable materials must not be placed on or near the glass guard.
- Do not leave appliance unattended while burning.

What Is Required

- Phillips Screwdriver (Hand tools ONLY, do NOT use power tools for assembly)
- Soft leather gloves for handling glass panels
- Soft non-abrasive surface for assembly
- Two people are recommended for assembly



Included in this Kit (Note: Included items differ for each kit. See below for your specific model)

- Square and Linear Wind Guards:
 - Model B1900:
 - 4 Glass panels of equal length
 - 8 Corner brackets; 4 top, 4 bottom
 - Model A330/Q400
 - 2 Long, 2 short panels.
 - 8 Corner brackets; 4 top, 4 bottom
- Round Wind Guards:
 - Model A310
 - 4 round panels of equal length
 - 8 rounded brackets; 4 top and 4 bottom

<u>Corner Brackets</u> <u>for Linear and Square Wind Guards:</u>



Rounded Brackets for Round Wind Guards:



Top Brackets

<u>Installation Instructions for Linear and Square Glass Guards</u>

A330/Q400/B1900




HOT GLASS WILL CAUSE BURNS

DO NOT TOUCH GLASS
UNTIL COOLED


NEVER ALLOW CHILDREN
TO TOUCH GLASS

WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation!

HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.

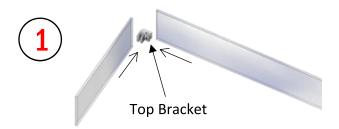


• Loosen set-screws in **TOP BRACKET** and slide a short and long piece of glass into it. (for square glass kits, all panels will be equally sized)

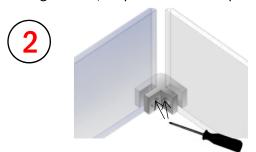


- Make sure the top edge of the glass is flush with the bracket.
- Ensure small silicone pad is in place on tip of set screws, never secure with metal screw directly to the glass. Over-tightening may break glass!
- Tighten set-screws until snug.



Repeat steps 1 and 2 for remaining three corners.

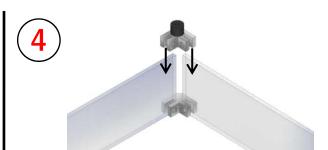

- Loosen set-screws and place BOTTOM
 BRACKET onto glass. The rubber standoff
 should position glass flush with bracket
 edge. Secure all screws, making sure to not
 over-tighten.
- Secure remaining three bottom brackets using the same procedure.

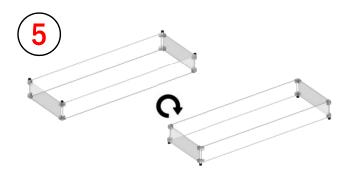

 Carefully, using two people, flip the assembly over. Gently set the glass guard onto fire pit.

<u>Installation Instructions for Round A310 Glass Guards</u> (4 panels)



HOT GLASS WILL CAUSE BURNS

 
DO NOT TOUCH GLASS UNTIL COOLED

NEVER ALLOW CHILDREN
TO TOUCH GLASS

WARNING: Always perform assembly on a soft, non-abrasive surface. Two people are recommended for assembly and installation!

HINT: For rectangular, square and round burners it is recommended to assemble guard upside down and flip over after it is fully assembled.






- Loosen set-screws in TOP BRACKET and slide two curved glass panels into it.
- Ensure small silicone pad is in place on tip of set screws. Never secure screws with only the metal screw directly against the glass. Overtightening may break glass!
- Tighten set screw until snug. Do not tighten all the way until all four brackets are on.






- Continue to install glass panels one at a time in the same procedure as step one until all four are in place.
- Once all four glass panels and top brackets are in place, finish securely tightening all 8 of the set screws holding the glass together.



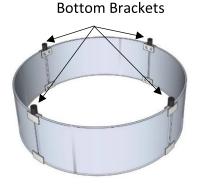

- Continue by installing the BOTTOM
 BRACKETS to the assembly and tightening
 the set screws in the same manner as the
 top brackets in previous steps.
- Remember to not overtighten screws and be sure silicone pad is adhered to set screw.

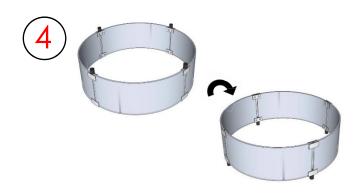

 Carefully, using two people, flip fully assembled glass guard over and place on fire pit centered around burner.



WindGuard Tech Wind Guards Limited Warranty

WindGuard Tech extends the following warranty for WindGuard Tech Glass Guards used in Canada or the United States of America. Dealers and employees of WindGuard Tech have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

WindGurad Tech warrants that this WindGuard Tech Glass Guard (the "Product") will be free from defects in material and workmanship for a period of 90 days from its date of purchase. Stainless steel parts and assemblies carry a limited lifetime warranty. This warranty is subject to the conditions, exclusions and limitations described below.

This warranty applies only to the original owner of the Product and is non-transferable. WindGuard Tech's obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions and the Listing Agency Identification Label furnished with the Product; (2) installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than those specified in the Operating Instructions; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by WindGuard Tech; and/or (6) modification of the Product not expressly authorized and approved in writing by WindGuard Tech. Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before WindGuard Tech has been afforded a reasonable opportunity to inspect the Product.

This warranty is limited to the replacement or repair of defective components or workmanship and WindGuard Tech may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. WindGuard Tech will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if WindGuard Tech is unable to provide replacement or repair in an expedient and cost-effective manner, WindGuard Tech may discharge all obligations under this warranty by refunding the purchase price of the Product.

EXCEPT TO THE EXTENT PROVIDED BY LAW, THE WINDGUARD COMPANY MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE WARRANTY SPECIFIED ABOVE. IN NO EVENT SHALL THE OUTDOOR GREATROOM COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY DEFECTS IN THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you.

To obtain service under this warranty, you must:

- 1. Send E-mail notice of the claimed condition to: custserv@jaytrends.com
- 2. Affirm that you are the original owner of the Product.
- 3. Provide WindGuard Tech reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.