

SAFETY PROTECTION SYSTEMS

This product has protection safe guards that shut off the product when parts become excessively hot or if it tips over. If the product shuts off, immediately turn the control to the OFF position and unplug it from the electric outlet. If it tipped over: place the product on a flat, stable surface in order to prevent the product from tipping over again.

TIP: Always make sure you have fully operating smoke detectors in your home that are in accordance with your local rules and and regulations.

Disposal

Disposal of the packaging



Sort the packaging before you dispose of it. Dispose of paperboard and cardboard with the recycled paper service and wrappings with the appropriate collection service.

Disposal of the oscillating ceramic heater

Old appliances may not be disposed of in the household trash!

- Should the oscillating ceramic heater no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in your city or state.

-Please ensure your recycling information conforms with the local regulations and EPA recommendations (www.epa.gov).

TROUBLE SHOOTING

Symptom	Possible Cause(s)	Corrective Action
Fail to operate	1. Power cord not plugged in	1. Plug into outlet
	2. The circuit breaker of the house is tripped	2. Reset the circuit breaker and avoid plugging a multiple outlet adapter into a socket
Shut off unexpectedly	3. The room temperature is warmer than the thermostat setting.	3. Set the thermostat knob on high to restart the heater. The heater will only turn on and output heat once the ambient room temperature drops below the thermostat setting.
	4. Tip-over protection is activated.	4. Check the tip-over safety switch. Make sure your heater is placed on a flat surface.
	5. The heater is overheating, overheating protection is activated.	5. Make sure the heater is dispatching the heat properly. Please keep it away from the wall by at least 3 feet, do not block either the back or front grille. Once the heater shuts off, pull out the plug and wait for it completely cool down and then plug it again to restart the heater.

LIMITED WARRANTY

A limited warranty is extended to the original purchaser of this heater and Proaira warrants against malfunction due to defects in material or workmanship for a period of one (1) year from the original date of purchase (the "Warranty Period"). If such a defect is discovered within the Warranty Period, Proaira will, at its option, repair or replace the product at no cost after a thorough review of the defect. Replacements outside of the Warranty Period will require a fee to cover materials, labor, handling and shipping.

This limited warranty does not apply to defects resulting from misuse or use contrary to the owner's manual and safety guidelines, damage caused by an improper voltage, damage caused by use outdoors, modification, alteration, repair or service of the product by a third party, mishandling, improper maintenance, commercial use of the product, damages which occur in shipment or are attributed to acts of God.

This limited warranty does not imply or assume any responsibility for consequential damages that may result from the use, misuse, or the lack of routine maintenance of this heating appliance. This limited warranty does not cover claims which do not involve defective material or workmanship. FAILURE TO PERFORM GENERAL MAINTENANCE WILL VOID THIS LIMITED WARRANTY.

THIS LIMITED WARRANTY IS GIVEN TO THE ORIGINAL PURCHASER IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PRODUCT. THE REMEDY PROVIDED IN THIS LIMITED WARRANTY IS EXCLUSIVE AND IS GRANTED IN LIEU OF ALL OTHER REMEDIES. IN NO EVENT WILL PROAIRA BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may have other rights that vary from state to state.

For full details, please contact Proaira Customer Service with proof of purchase.

Customer Service:
Phone: (877) 599-4747
Fax: (877) 600-4747
Email: info@proaira.com

Manufactured for:
Proaira
1060 Commerce Ave.
Union, NJ 07083 USA
(877) 599-4747
www.proaira.com



Oscillating Ceramic Personal Heater, 1500W
MODEL HTR40



- Safety tip over switch
- Adjustable thermostat
- Safety overheat protection system
- 2 settings
- 70 degree oscillation
- Stay cool housing
- Carry handle



Save These Instructions

GENERAL INFORMATION

Reading and Storing the User Manual

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with purchase receipt and box.

Explanation of Symbols

The words below are used in this user manual, on the oscillating ceramic heater or on the packaging.

- ⚠ DANGER!** This signal word designates a hazard with a high degree of risk which will result in death or severe injury if not avoided.
- ⚠ WARNING!** This signal word designates a hazard with a moderate risk which may result in death or severe injury if not avoided.
- ⚠ CAUTION!** This signal word designates a hazard with a low risk, which may result in minor or moderate injury if not avoided.
- NOTICE!** This signal symbol/word warns of possible damage to property.
- i** This symbol provides you with useful additional information on handling and use.

SAVE THESE INSTRUCTIONS

For Your Own Safety

1. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
2. Keep the air inlet and outlet free from objects. Keep objects at least 3 ft. away from all sides of heater.
3. Do not place the heater directly below a socket.
4. Do not use this heater in the vicinity of water including bath, shower, pool, etc.
5. Keep the heater clean. Do not allow any objects to enter any ventilation or exhaust opening, as this may cause electric shock, fire, or damage to the heater.

Proper Use

Only use the oscillating ceramic heater as described in this user manual. Any other use is considered improper and may result in damage to property. The manufacturer or vendor cannot be held liable for damages incurred through improper or incorrect use.

IMPORTANT SAFEGUARDS

If the information in this manual is not followed exactly, an electric shock or fire may result causing property damage, personal injury or loss of life.

READ ALL INSTRUCTIONS

⚠ WARNING! **WARNING:** When using electrical appliances, especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

RISK OF ELECTRIC SHOCK!

A faulty electrical installation, excessive line voltage or incorrect operation may result in an electric shock.

⚠ WARNING! WARNINGS!

- 1.Always use the heater in an upright position.
- 2.Do not use the heater to dry your laundry (obstructing intake and outlet grills causes danger of overheating).
- 3.Do not place the heater against walls, furniture, curtains, etc.
- 4.Cable replacement must only be completed by technicians authorized by the manufacturer.
- 5.Do not use the heater in rooms less than a 43 sq. ft. area.

The heater is fitted with a thermal overload protector which will switch off the heater in case of accidental overheating (ex. obstruction of air intake and outlet grills, motor turning slowly or not at all).

To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating, then plug the appliance in again. To avoid injury from unexpected starting or electrical shock, do not plug the power cord into a source of power during unpacking and assembly. The cord must remain unplugged whenever you are adjusting/assembling the heater. If any part is missing or damaged, do not attempt to use or plug in the power cord until the missing or damaged part is correctly replaced.

ELECTRICAL SAFETY AND HANDLING

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

- 1.Make certain that the power source conforms to the electrical requirements of the heater.
- 2.The heater is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions by a person responsible for their safety.
- 3.Do not operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- 4.Unplug power cord before servicing or moving the heater. Always unplug heater when not in use.
- 5.Do not use the heater in the rooms with gas or while using flammable solvents, varnish or glue.
- 6.WARNING: in order to avoid overheating, do not cover the heater.
- 7.Do not let animals or children touch or play with heater. The air outlet gets hot during operation.
- 8.Do not leave your home while the appliance is in function: ensure that the switch is in off (0) position and the thermostat is in the minimum position.
- 9.Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as it may cause an electric shock or fire or damage the heater. Do not block or tamper with the heater in any manner while it is in operation.
- 10.To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not place heater on soft surfaces, like a bed, where openings may become blocked.

⚠ WARNING! WARNING: DO NOT DEPEND ON THE ON/OFF SWITCH AS THE SOLE MEANS OF DISCONNECTING POWER WHEN SERVICING OR MOVING THE HEATER. ALWAYS UNPLUG THE POWER CORD.

- 11.Always place the heater on a stable, flat, level surface when operating to avoid the chance of the heater overturning. Locate the power cord so the heater or other objects are not resting on it. Do not run power cord under carpeting. Do not cover power cord with throw rugs, runners, or carpets. Arrange power cord away from room traffic and where it will not be tripped over.
- 12.This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use the handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9m) from the sides and rear.
- 13.This heater is not intended for use in wet or damp locations. Never locate a heater where it may fall into a bathtub or other water container.
- 14.Do not use heater outdoors.

⚠ WARNING! WARNING: REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK.DO NOT USE THIS HEATER WITH ANY SOLID STATE SPEED CONTROL DEVICES SUCH AS DIMMER SWITCHES, TIMERS OR TRIACS.

⚠ WARNING! **WARNING:** This product is equipped with a polarized plug (one blade is wider than the other blade). To reduce the risk of electrical shock, this plug will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. Always plug heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

Cleaning

NOTICE! **IMPORTANT!** Do not immerse heater in water! Clean the heater grills with the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from the inside of the heater.

DO NOT ATTEMPT TO TAKE HEATER APART. Clean the body of the heater with a soft cloth.

⚠ CAUTION! **CAUTION:** Do not use gasoline, benzine, thinner, harsh cleaners, etc. as they will damage the heater. NEVER USE ALCOHOL OR SOLVENTS.

STORAGE: Store the heater with these instructions in the original carton in a cool, dry place.

OPERATING INSTRUCTIONS

This appliance requires no installation. It should be used solely as a portable appliance. Portable appliances are not suitable for use in a bathroom.

Thermostat Knob

- Turn the thermostat knob clockwise to increase the thermostat setting temperature.
- Turn the thermostat knob counterclockwise to decrease the thermostat setting temperature.

Oscillation Button

Depress the oscillation button to set the heater to oscillate back and forth; press the button again to turn off oscillation.

Control Knob

- II • High heat 1,500 W
- I • Low heat 750 W
- FAN • Fan-only mode with no heat
- OFF • Off

Technical Data

Product description:	Oscillating Ceramic Heater
Model/Product code:	HTR40
Input voltage:	120 V / 60 Hz
Power:	1500 W
Dimensions:	7.8W x 6.1D x 11H in
Visible cord length:	5.9 feet

