



Manual of Post Puller

Move up to the post, align jaw and clevis pins with the post. Inspect the clevis pins to make sure the pins are seated properly.

1. Jaw


- a. Jaw assemblies are adjustable to pull post sizes
- b. Virtually any shape, round, square, T-posts, H-posts, can be clamped and pulled.
Able to grip and pull wood or steel posts
- d. Jaws are easily replaced. No tools required.

2. Post puller is quickly and easily connected to a skid steer, or other similar machinery. Mechanical and hydraulic hookup are quick and easy for any skid steer.

3. Post puller rests on the ground, requiring no lifting of post/concrete until post is completely broken free from the ground.

4. Machine is designed for minimum depth.

5. Long handle for maximum leverage.

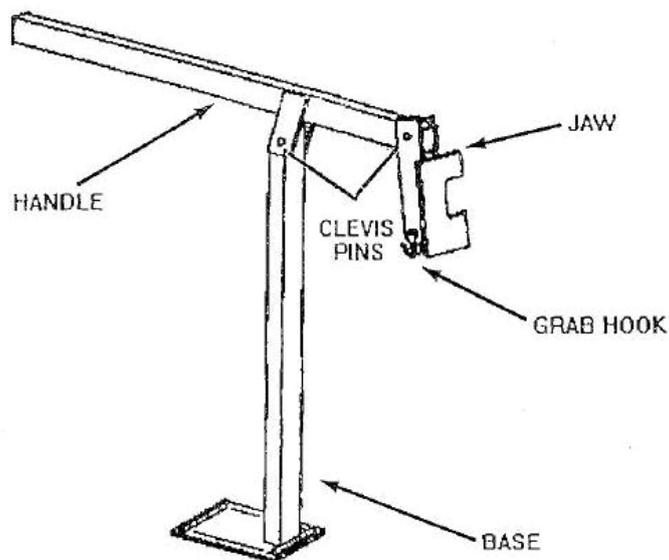

Maasdam®

a division of Pull'R Holding Company, LLC

415 East State Parkway

Schaumburg, IL 60173

888.797.7855 • Fax 847.228.6021

www.pullr.com

⚠ WARNING: This product can expose you to di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.