



Maxx Air 18" Wall Mount Poultry Fan

Models: HVWM 18PF & HVWM 18CDPF

IMPORTANT SAFETY INSTRUCTIONS — READ AND SAVE THESE INSTRUCTIONS

SAFETY



This safety alert symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

 


DANGER Danger indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.



WARNING Warning indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

SAFETY INSTRUCTIONS WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:



CAUTION Caution indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.



Used to indicate an electrical shock or electrocution hazard.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- Disconnect fan when moving from one location to another.
- Disconnect fan when removing guards for cleaning.
- Make sure fan is on a stable surface when in operation.
- Rain and moisture may create an electrical hazard.
- This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet one way. If this plug does not fit in the outlet, contact a qualified electrician.

- **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- **CAUTION:** For general ventilating use only. Do not use to exhaust hazardous or explosive materials or vapors.
- **CAUTION:** Disconnect the power to the fan before cleaning.
- **DO NOT** insert fingers or any objects through the grille guard when fan is in operation.
- **DO NOT** operate fan if any part is damaged or missing.



Your Maxx Air fan is shipped fully assembled. Enjoy the powerful, cooling breeze that the fan will provide for virtually any indoor application. There are no additional spare parts shipped with this item.

Specifications

Totally enclosed motor meets NEC 547-7 (2008) requirements for use in Agricultural Areas. This unit has a 110-120 Volt A/C polarized grounded plug. Do not remove grounding conductor from plug or use with an extension cord.

Warning

To reduce the risk of fire or electric shock, do not use with any solid state speed control device. This fan motor is equipped with an automatic reset overload device. The fan may start unexpectedly. Do not put any object through the grilles into the blade or motor. This fan is designed for indoor use only. Do not use to exhaust hazardous chemicals or vapors. Unplug unit for storage, when not in use or moving locations.

Installation

Minimum Attachment Requirements: 2x4 studding capable of supporting at least 50 lbs. Use a 3/8" diameter x 2" long Lag Screw with flat

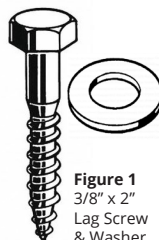


Figure 1
3/8" x 2"
Lag Screw
& Washer

washer (**Fig.1 not included**). Attach the fan to wall using the hole in the wall bracket with the above mentioned lag screw. Additional screws can be used to stabilize the wall mount if needed, however they are not required. Please Call: 1.800.433.1626 if you have any questions about the installation or operation of this fan.

Operating Instructions

1. Plug cord into a properly grounded receptacle.
2. Turn the knob on the fan to select the desired speed or turn the fan off.

User Servicing Instructions

Warning: Unplug the fan from electrical supply before cleaning.

1. Use soft, damp cloth to clean the fan. Remove any moisture with a clean, dry cloth.
2. Do Not use any cleaning solution that is harmful to the paint or plastic.
3. Do Not bend blade when cleaning fan.
4. **Motor is permanently sealed and does not require additional lubrication.**
5. Ensure all fan guards are reinstalled as previously installed after cleaning.



VENTAMATIC, Ltd.
LIMITED WARRANTY STATEMENT

This warranty is underwritten by Falco Insurance Company and is extended to the original retail purchaser of this model or, if this unit is purchased and requires installation by a building contractor, to the original owner of the home. No subsequent purchaser of the unit or of a home in which it is installed is entitled to any of the benefits of this warranty.

This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse, faulty installation, or the like.

Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit.

In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid.

You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking its obligations under this warranty. The right to demand and receive written evidence of date of purchase extends to all licensed dealers of Ventamatic, Ltd. products.

You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

To start a warranty claim you must:

Contact Ventamatic, Ltd.

An RGA (Returned Goods Authorization) form is required for returns to the factory to ensure your return can be processed efficiently and quickly. Please contact Ventamatic, Ltd. toll-free at 800-433-1626 or via web at www.bvc.com to obtain an RGA and follow the instructions given.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

rev. 04/19