

# COBY®

## Bulb Zapper



Model CBZ5J

 **WARNING:**

**IMPORTANT SAFETY  
INSTRUCTIONS.**

**READ ALL INSTRUCTIONS  
BEFORE USING.**

**DO NOT PLACE UNIT IN AN  
AREA WHERE IT CAN FALL  
INTO WATER OR NEAR  
FLAMMABLE MATERIALS.**

**DO NOT CLEAN UNIT WITH  
WATER OR LIQUID.**

**SAVE THIS MANUAL FOR  
FUTURE REFERENCE.**

# CONTENTS

## SAFETY INFORMATION

Important Safety Instructions .....	4
-------------------------------------	---

## SET UP & USE

Proper Location .....	5
How to Use .....	5

## MAINTENANCE

Removing and Cleaning Bottom Tray .....	6
Electric Grid Cleaning .....	6

## CUSTOMER SERVICE

Troubleshooting .....	7
Contact us .....	7
Limited Warranty .....	8

## PRODUCT REGISTRATION

Remember to record the model number of this device located on the base of this unit.

\_\_\_\_\_

Model number

Staple your receipt to your manual. You will need it to obtain warranty service.

\_\_\_\_\_

Date of purchase

## PRODUCT SPECIFICATIONS

- Model:** CBZ5J
- Coverage:** 500 FT<sup>2</sup>
- Bulb Wattage:** 5W
- Grid Voltage:** 1,100V

# SAFETY INFORMATION

-  **DANGER:** *Indicates an imminently hazardous situation which, if not avoided, will result in **death or serious injury**.*
-  **WARNING:** *Indicates an imminently hazardous situation which, if not avoided, could result in **death or serious injury**.*
-  **CAUTION:** *Indicates an imminently hazardous situation which, if not avoided, may result in **minor or moderate injury**.*
-  **NOTICE:** *Indicates a practice not related to personal injury which, if not avoided, may result in property damage.*

## IMPORTANT SAFETY INSTRUCTIONS:

-  **WARNING:** *This product can expose you to certain chemicals, which are known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)*
-  **WARNING:** *When using electrical appliances, basic safety precautions should **always** be followed to **reduce the risk of fire, electric shock and personal injury**:*

- 1. READ ALL INSTRUCTIONS BEFORE USING THE PRODUCT.**
2. Keep away from children and pets.
3. For indoor use only.
4. Disconnect plug before cleaning, servicing and changing bulbs or when not in use.
5. Store product indoors when not being used.
6. Do not use where unit may be exposed to water or direct sunlight.
7. Insects accumulating within base of the unit may contribute to fire. Clean dead insects from unit frequently as noted in this manual.
8. For Household Use Only.
9. Don't abuse cord –Never carry product by cord or yank it to disconnect from receptacle. Keep cord away from heat and oil
10. Keep out of reach of children.
11. Do not clean this product with a water spray or similar method.
12. Product should only be connected to a circuit that is protected by a ground-fault circuit-interrupter (GFCI).
13. If the unit is malfunctioning, unplug it and contact the manufacturer.
14. Do not place unit in an area where it can fall into water or near flammable materials. Do not clean unit with water or liquid.
15. Avoid looking directly into the UV light.
16. Do not insert any foreign objects into the unit including fingers while it is connected to an electrical outlet.

# SET UP AND USE

## PROPER LOCATION:

**Flying insects will always be more attracted to humans than to lights, however they will gravitate to the strongest light source in the area.**

**We suggest when Flying insects are very aggressive in your area, try and stay away from the bug zapper for a few days with only the light of the zapper on. This will help lure them into its trap and kill off the majority of insects. Depending on the insect population, two weeks or more may be necessary to significantly reduce the population.**

Device can be located in an outdoor setting only in cases where it is protected from any rain such as in a covered porch or carport. Ideal location should be 6-7 feet above ground level to prevent children from reaching the unit. Keep at least 6 feet away from any food prep or food storage areas and away from fans or open windows when used inside. Always make sure to mount in a sturdy location.

## USING THE ZAPPER:

1. Unpack unit and save all packaging material for storage when season is over.
2. Select the proper location as noted in above instructions.
3. Ensure bottom tray is tightened against base before installation.
4. Screw unit into standard lamp socket.
5. If zapping grid shows signs of accumulation of dead insects on the live electrified grid, occasional cleaning of wire grid may be required. (see *Electric Grid Cleaning, Pg. 4*)
6. It is recommended to use this unit from early Spring until late Fall for best results.
7. Unscrew device when not in use for long periods of time.

## MAINTENANCE


The CBZ5J Bug Zapper Bulb housing does not require cleaning. Do not attempt to clean the housing with water or spray or any other liquids.

### REMOVING & CLEANING BOTTOM TRAY:

Regular emptying of bottom tray/cap is necessary to ensure your bug zapper performs optimally.


#### Removing Tray:

Tray is located on the bottom of the device. Wearing gloves, grasp tray and turn counter-clockwise to loosen and remove. Use caution when removing as an accumulation of dead insects can occur and fall out during removal.

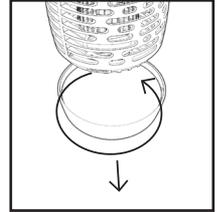

#### Reassembling Tray:

Once properly emptied, reassembly is achieved by reassembling the cap on the base of the bulb and turning clockwise until the cap is snug.

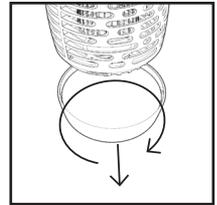


### ELECTRIC GRID CLEANING:

#### **WARNING:**

*Always unscrew your Bug Zapper before cleaning to avoid electric shock. When cleaning electric grid, only use included cleaning brush to avoid any risk of shock or injury. Ignoring this warning may result in death or injury.*

- In areas with large insect populations, electric grid may begin to accumulate dead insects on the grid that can affect the function of the device. To ensure effective use of this device periodic cleaning of electric grid with included brush may be necessary.
- Rate of cleaning depends on insect population in your area.

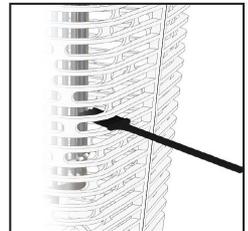

1. Unscrew the device and remove unit from socket and allow it to sit for two hours to allow all electricity in unit to disperse.
2. Access grid through the open slots in grill as shown using included cleaning brush and gently brush away dead insects so they fall down into the lower grate for removal.
3. Never use water to clean the unit as this can cause damage to the electronics.
4. Use care and make sure not to move the metal electric grid.
5. When cleaning of grid is completed, screw bulb back into socket and device is ready for use.

# CUSTOMER SERVICE

## **WARNING:**

*Do not try to adjust or repair the zapper yourself. Component parts shall be replaced with like components. Servicing shall be done by factory authorized service personnel to minimize the risk of possible ignition due to incorrect parts or improper service.*

## **TROUBLESHOOTING:**

### ***Device does not light but appears to have voltage through the electrical grid:***

- Check if bulb is properly seated in socket.

### ***Device does not light and electrical grid does not appear to have voltage:***

- Ensure device is screwed into a functioning socket.

### ***Device appears to be functioning (light and zapper work) but insect population does not appear to have been reduced:***

- Move unit to another area for better results.
- Allow more time. It can take several weeks for the device to affect the insect population depending on the density of insects.
- Check surrounding area to ensure there are no features that may be drawing the insects to your location. Examples include standing water, refuse and bright lights that may compete with the light output of this unit.

**If troubleshooting does not solve the problems you are encountering,  
or if you have further questions not answered by these instructions,  
please call our customer service at 1 (855) 855-0294**

## **BEFORE YOU CALL CUSTOMER SERVICE:**

1. Check to make sure that the unit is screwed in securely. If it is not, remove the unit from the socket, wait 10 seconds and screw in again securely.
2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the socket with another light bulb.

## **CONTACT US:**

### **IMPORTANT! DO NOT RETURN THIS PRODUCT TO THE STORE**

If you have a problem with this product  
please contact Customer Service at 1-855-855-0294

DATED PROOF OF PURCHASE and MODEL# REQUIRED FOR WARRANTY SERVICE



**NOTE:** Bulb contains mercury, dispose of properly.

# LIMITED WARRANTY:

Coby brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.**

W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured toaster oven equivalent to your original purchase during the warranty period.

**Exclusions:** This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On toasters that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. To glass parts and other accessory items that are included with the toaster.
12. Transportation and shipping costs associated with the replacement of the toaster.
13. Food loss for loss due to product failure or delay in service, repair or replacement.
14. Service calls to instruct you how to use your toaster oven.
15. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**Obtaining Service:** To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1-855-855-0294**.

W Appliance Co.,  
New York, NY 10018

# COBY®

© 2021 W Appliance Company. All Rights Reserved.  
1356 Broadway, New York, NY 10018

May 2021