



User Manual

Touchless Soap

Dispenser

MODEL: CCSA02S

1. READ these instructions carefully before installing and operating the appliance. Keep them for further reference.
2. Record in the space below the "SERIAL/MODEL NUMBER" found on the back or bottom of your appliance and retain this information for future reference.

SERIAL NUMBER:

MODEL NUMBER:

DATE OF PURCHASE:

Save and staple your sales receipt to your manual for warranty coverage.

SAFETY INFORMATION

BATTERY INFORMATION

- **KEEP OUT OF REACH OF CHILDREN.**

Swallowing may lead to serious injury or death. Severe burns can occur within 2 hours of ingestion. Immediately see a doctor and have the doctor phone (202) 625- 3333 collect. Keep in original package until ready to use. Dispose of used batteries immediately. Risk of injury due to fire, explosion or leakage. Do not disassemble, charge, crush or expose to fire or high temperatures.

HANDLING ALKALINE BATTERIES

WARNING

When handling alkaline batteries, basic safety precautions should be followed, including the following

1. Should fluid from the battery accidentally get into your eyes, there is a threat of loss of eyesight, do not rub them. Immediately rinse your eyes with clean tap water and then consult a physician immediately.
2. Do not put the battery in a fire, expose it to heat, dismantle or modify it. If the insulation or safety valve is damaged, the battery may leak fluid, overheat or explode.
3. Do not insert the battery with the poles reversed. Doing so may cause some abnormality or a short and the battery may leak fluid, overheat or explode.
4. Keep the battery out of the reach of children. If the battery is swallowed, contact a physician immediately.
5. If the alkali fluid gets in your mouth, rinse your mouth with water and contact a physician immediately.
6. If the alkali fluid gets on your skin or clothes, it may burn your skin, thoroughly rinse the affected area with tap water.
7. Do not mix new and old batteries or other makes of batteries. The different attributes may cause the battery to leak fluid, overheat or explode.
8. This battery was not made to be recharged. Recharging this battery may damage the insulation or internal structure and may cause the battery to leak fluid, overheat or explode.
9. Do not damage or remove the label on the exterior of the battery. Doing so may cause the battery to short, leak fluid, overheat or explode.
10. Do not drop, throw or expose the battery to extreme impact. Doing so may cause the battery to leak fluid, overheat or explode.
11. Do not alter the shape of the battery. If the insulation or safety valve is damaged, the battery may leak fluid, overheat or explode.
12. Immediately remove batteries when they have lost all power. Leaving the batteries in the unit for a long time may cause the batteries to leak fluid, overheat or explode due to gas that is generated by the batteries.

Contact your local government for disposal practices in your area.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

SET UP & USE

The hands-free dispenser is designed to dispense standard liquid soap, hand sanitizer and lotion. Foam liquids, or those that contain granules, small bits of fruit etc. must not be used as they could block the dispensing nozzle.


To avoid malfunction do not immerse the dispenser or any of its parts in water do not place the dispenser in a dishwasher.

Place the liquid filled dispenser in an upright position on a level counter-top.

Do not mix water with the liquid soap, hand sanitizer or lotion

Do not expose the dispenser to direct sunlight as it may interfere with the infrared sensor and cause malfunction.

PARTS & FEATURES

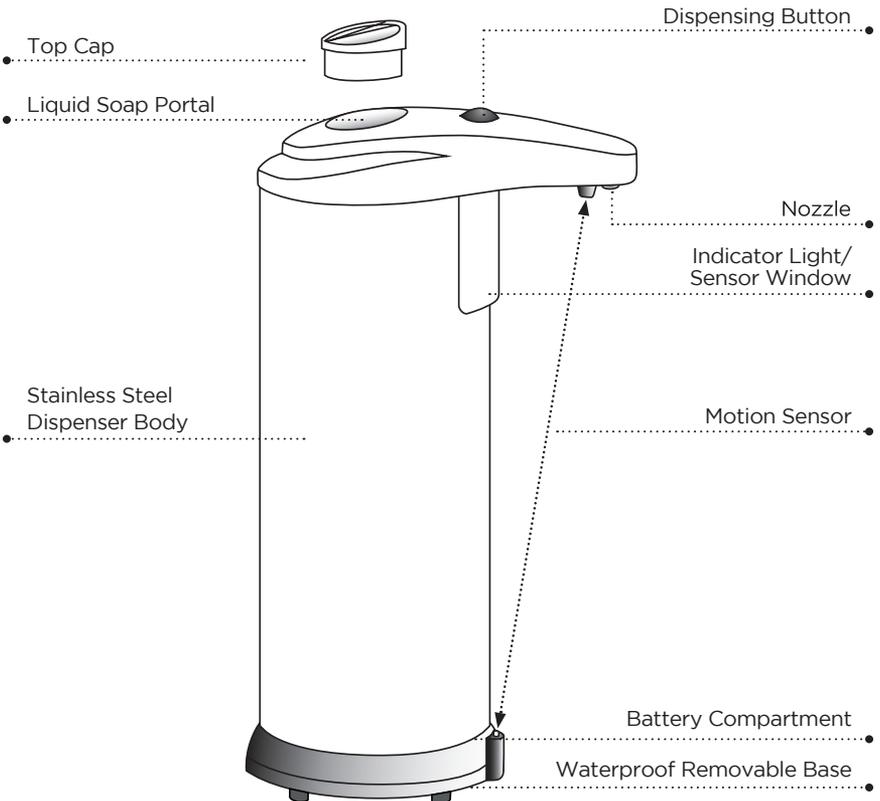


SET UP & USE

BEFORE FIRST USE

Remove the top cap of the soap dispenser by turning it. Fill the liquid soap portal with liquid soap or sanitizer making sure you leave enough space for the cap to be reinserted. Do not overfill.

BATTERY INSTALLATION (batteries not included)

NOTE: Use (4) size “AAA” alkaline batteries. Do not use rechargeable batteries.

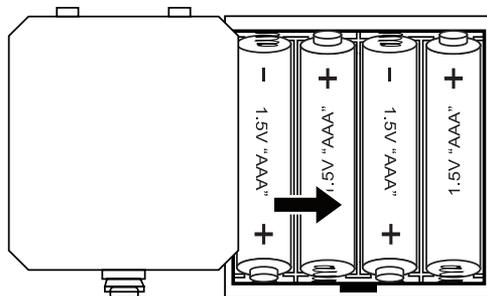

1. The battery compartment is in the waterproof base. Remove the waterproof base first. Press the battery cover latch to open it.
2. Insert 4 “AAA” batteries (not included) making sure that the positive terminals are facing the proper way.
3. Replace the cover.

OPERATING INSTRUCTIONS

After the soap dispenser has been filled with soap and batteries are installed, place upright on a table or counter top.

To turn ON, press and hold the dispensing button for three seconds. The red indicator light will illuminate. The volume of soap to be dispensed can be adjusted between LOW, MEDIUM and HIGH settings. When the dispenser is turned ON, it will automatically be set to the LOW setting. To increase the volume of soap being dispensed, press the button for a second time to set to the MEDIUM setting. Press for a third time to set to the HIGH setting. Pressing again will continue to scroll to the LOW volume setting.

To dispense the soap, place your hands under the nozzle. The indicator light will turn red and the soap will dispense.

To turn the soap dispenser OFF press and hold the dispensing button for five seconds.

CLEANING AND CARE

CLEANING AND STORING

The exterior of the dispenser can be cleaned with a damp cloth and then dried. Chemical or abrasive cleaners should not be used.

The body of the soap dispenser should not be immersed in water. The nozzle can be rinsed with warm water to clear out any soap residue to prevent clogs.

The base can be removed and cleaned.

The unit should be dried thoroughly after cleaning.

If the soap dispenser will not be used for a long period of time, remove the batteries. It is recommended that you remove the soap so that it does not clog the nozzle.

CLEANING AND CARE

CUSTOMER SERVICE

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 1-855-855-0294.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the steam iron still does not work properly, contact W Appliance Co. customer service center or the nearest authorized service center. Customers must never troubleshoot internal components.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
The soap dispenser is not dispensing soap.	<p>A. The unit needs to be turned on.</p> <p>B. If the unit is turned on and the indicator light does not illuminate, there may be an issue with the batteries.</p> <p>C. If the power light is on, there may be a clog in the nozzle.</p>	<p>A. Press and hold the Dispensing Button for 3 seconds to power the unit on until the indicator light illuminates.</p> <p>B. Install (4) size "AAA" alkaline batteries. Refer to battery installation for details. If fresh batteries are installed, make sure the terminals are facing the correct way,</p> <p>C. Clean the nozzle by running the nozzle under warm running water. Do not saturate the body or base of the unit.</p>

TROUBLESHOOTING & WARRANTY

LIMITED WARRANTY

Commercial Care brand is used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co. at **1 (855) 855-0294** from the USA or Puerto Rico.

W Appliance Co. warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)/carry in service.** W Appliance Co. agrees that it will, at its option, replace the defective product with either a new or remanufactured steam iron equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If damage is due to general misuse, accidents or acts of God.
4. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
5. On units that have been transferred from the original owner.
6. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
7. To products used in a commercial or rental setting.
8. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
9. To damages for service calls for improper installations.
10. To glass parts and other accessory items that are included with the unit.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **1 (855) 855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co. does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co. has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co.. W Appliance Co. reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **1-855-855-0294**.

W Appliance Co.,
New York, NY 10018



© 2020 Commercial Care is a W Appliance Company.
All Rights Reserved.