


Instructions For Use


SP1 Safety Cutter

(Safety Pro 1)

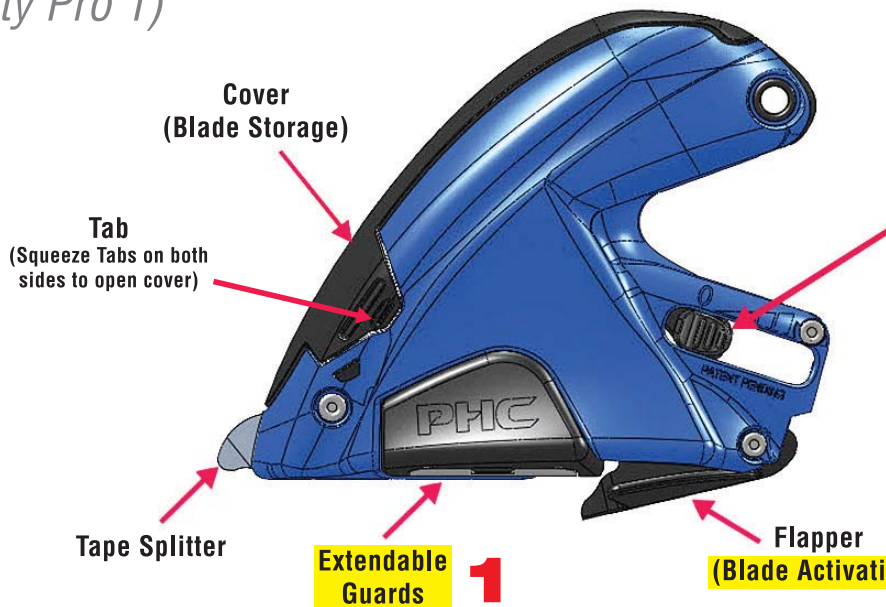

Blade Depth Adjuster Switch

2

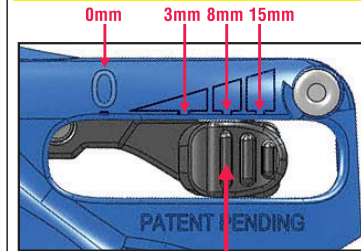

Align this part of button on desired indicator line to set blade depth (in this example: 8mm).


WARNING: Always use caution when Blade Depth Adjuster Switch is out of the safe position (0mm).

Features And Functions



CUTTING-- EASY AS 1,2,3...

- 1.** Extend Guard: Left guard for Right hand cutting, Right guard for Left hand cutting.
- 2.** Set Blade Depth using the Blade Depth Adjuster Switch.
- 3.** Activate blade by depressing flapper against cardboard box or other material to be cut.

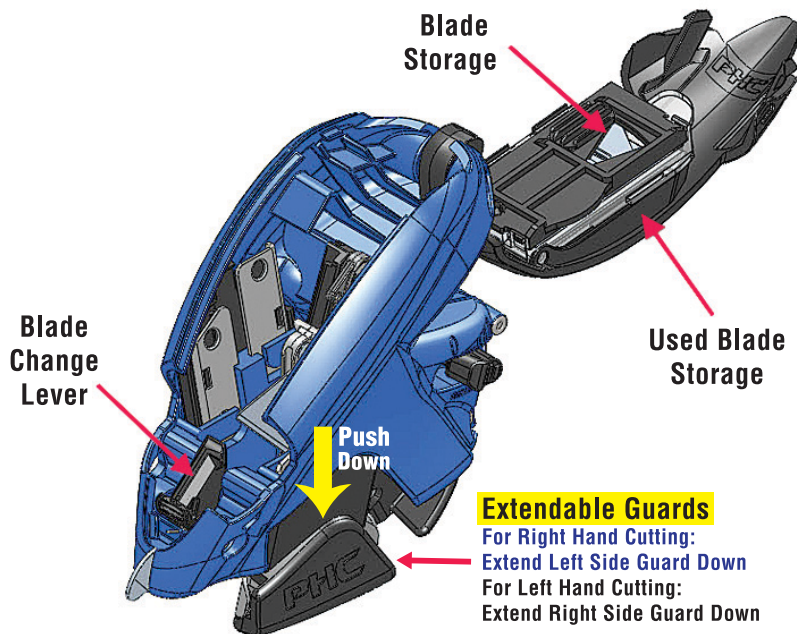


Instructions For Use

innovation

SP1 Safety Cutter

(Safety Pro 1)

SP1™

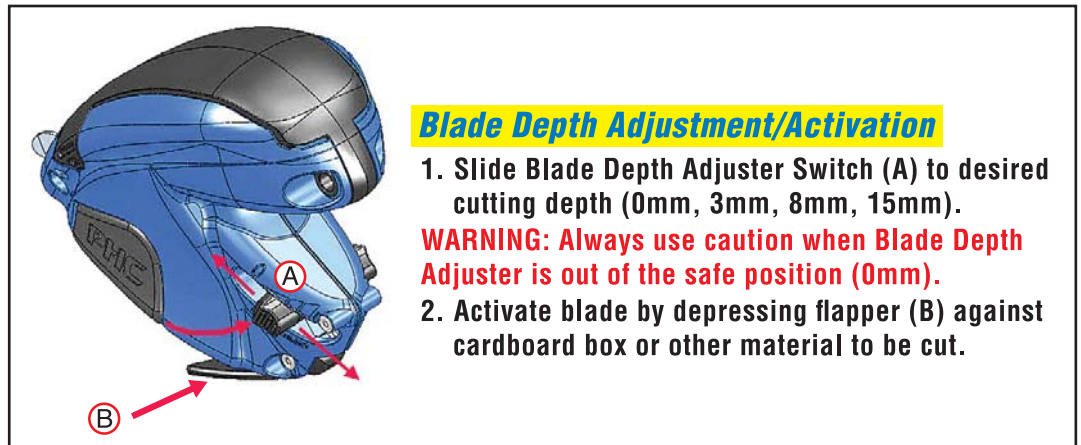


Blade Depth Adjustment/Activation

1. Slide Blade Depth Adjuster Switch (A) to desired cutting depth (0mm, 3mm, 8mm, 15mm).

WARNING: Always use caution when Blade Depth Adjuster is out of the safe position (0mm).

2. Activate blade by depressing flapper (B) against cardboard box or other material to be cut.

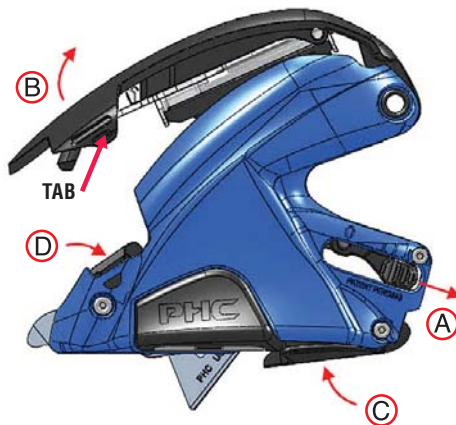

Blade Change

1. Set Blade Depth Adjuster Switch (A) to deepest setting (15mm).

2. Open Cover (B) by squeezing both side tabs and lifting.

3. Depress Flapper (C) to extend blade.


4. Depress Blade Change Lever (D).

5. Release Flapper (C).

6. Remove blade and replace with new blade (E).



7. Release Blade Change Lever (D).

8. Close Cover (B).

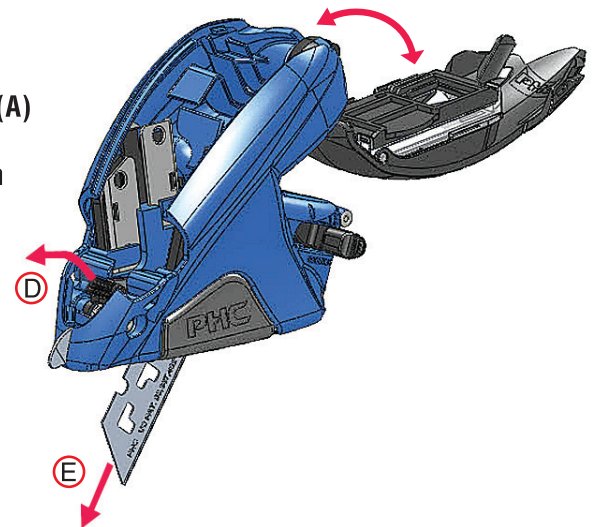


Blade Storage

1. Open Cover (A).
2. Lift Spare Blade Compartment (B), deposit used blade, close.
3. Dispense new blade, return blade dispenser lever (C).
4. Close Cover (A).

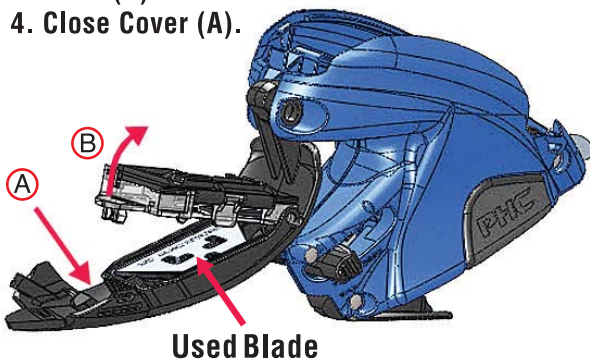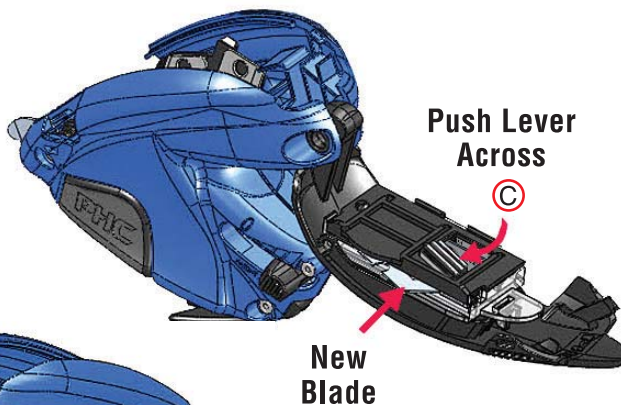

Blade Refill

1. Open Cover
2. Open Blade Dispenser Lid (A).
3. Load five new blades (B) into underside of Blade Dispenser Lid.
4. Close Blade Dispenser Lid (A).
5. Close Cover.

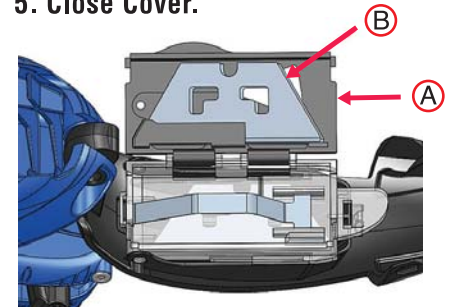

WARNING:

Bodily injury can result if Safety Cutter is improperly used. Safety Cutter is intended for cutting only. Handle with care.