 



Scan the QR code below to
download the APP



Search for "Tuya Smart" in
the mobile APP market


Smart Lock

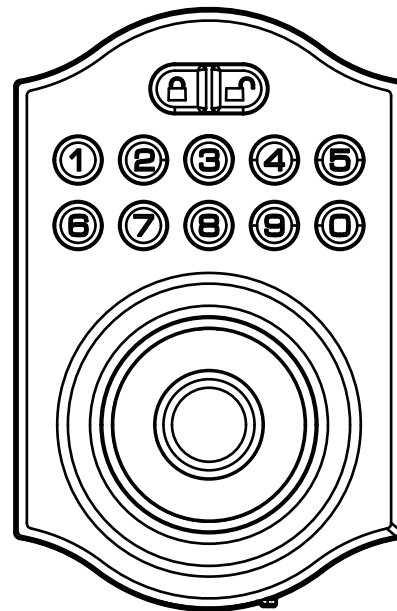


Bluetooth version

User manual


1. Accessory

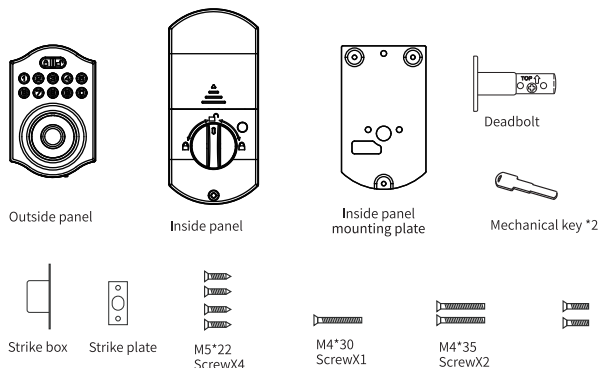


2. Product overview

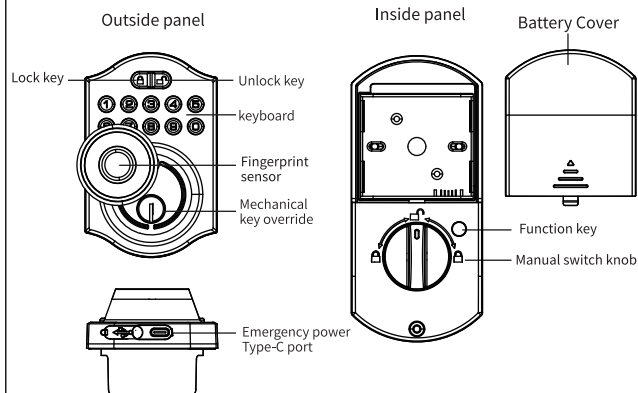

2. Product overview

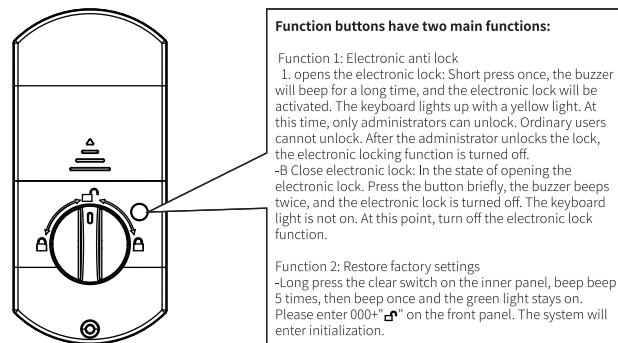


3. Installation guide

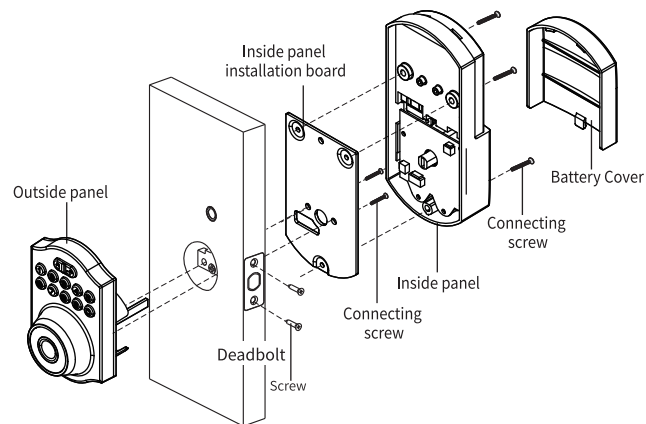


4. Deadbolt Installation


1) Adjust the length of bolt according to the thickness of the door

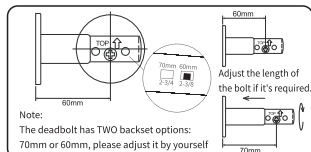


2) Install the deadbolt on the door.

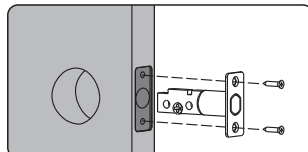

3. Use a screwdriver to test if deadbolt works smoothly

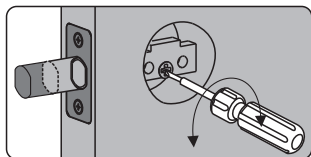


4) Make sure the bolt is in retracted (unlocked) position.

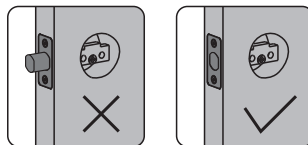


▲ NOTE: The bolt must be in retracted (unlocked) position before installing the lockset.

5. Panel Installation


1) Hold the outside panel to the door, and make sure the key nail piece can cable through the door hole.

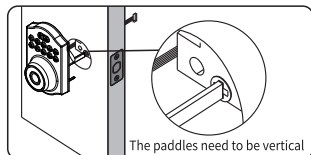

2) Install the mounting plate on the other side of the door.

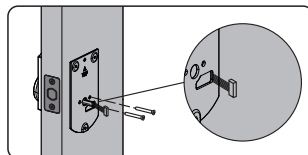


3) Install the inside panel

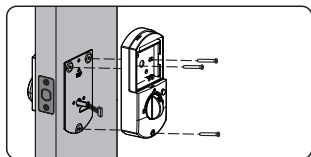


5. Panel Installation

4) Install the battery & battery cover

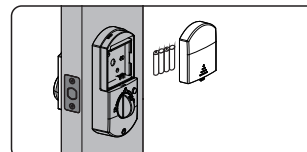

5) Install the strike box and strike plate

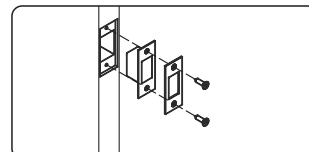


6. Product parameters

Item	Function	Content	Detailed description
1	Unlocking method	Password+mechanical key+fingerprint+Tuya(APP)	
2	Number of administrators	10 pcs	
3	Users	180 PCS	
4	Temporary users	10 PCS	
5	Virtual password length	20digit	20 virtual digit password, allowing for forward and backward insertion of codes, As long as there is a correct password in the middle, it can be unlocked
6	Low voltage alarm	4.8V	When the voltage of the lock is lower than 4.8V, the red light will remain on twice and accompanied by an audio alarm after the lock is turned on and off. Please ask the user to replace the battery in a timely manner
8	Static current	<80uA	
9	Dynamic current	>250mA	
10	Supply voltage	6V	Voltage when the new battery is fully charged (please choose a high-quality alkaline 1.5V battery)
11	Emergency power supply	5VDC	Type-C
12	Working temperature	-25°C~70°C	
13	Working humidity	20%~90%RH	
14	Voice navigation	Chinese/English	
15	False alarm	Support	Lock after 5 input errors, unlock after 1 minute, and when the unlock time is reached, a green light will flash and a beep will sound to remind
16	Electronic anti lock	Administrators can unlock	
17	One click locking	Quickly lock the door outside	Click the lock button (A) to perform the locking action

7. Smark Lock Operation


1. Add administrator

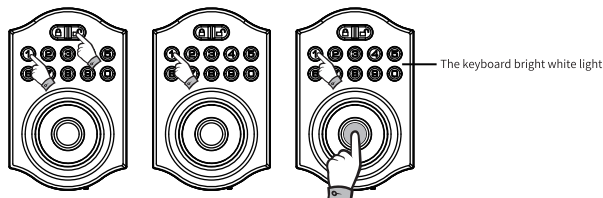

1. Press "A" + "1" + "A"
2. Verify administrator password
3. Add administrator password (6-digit number) or fingerprint

Note: 1. When the password has not been registered, use the default password "123456" for verification.
2. The administrator password cannot be entered continuously.


2. Add user information (password and fingerprint)

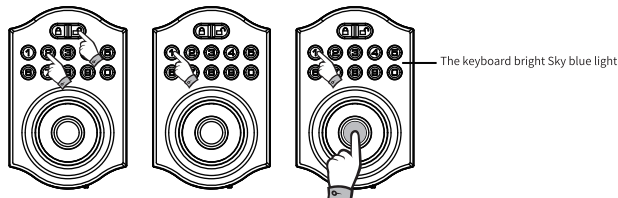

1. Press "A" + "2" + "A"
2. Verify administrator password
3. Add user password (6-digit number) or fingerprint

Note: Ordinary user passwords can be entered continuously.

3. Add a one-time password

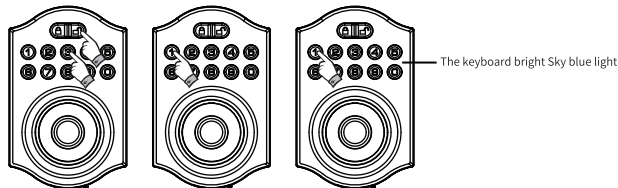


1. Press "A" + "3" + "A"
2. Verify administrator password
3. Add a one-time password (6 digits)

Note: One-time passwords are not allowed to be entered continuously.
If the registration is full, a red light will be displayed when entering.

7. Smark Lock Operation


4. Delete user

4.1 Search delete

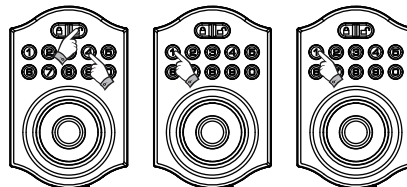


1. Press "A" + "4" + "A"
2. Verify administrator password
3. Enter the user information directly, and delete the door lock after searching for the user.

4.2 Number delete

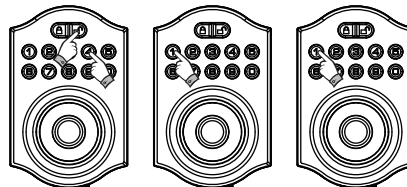

1. Press "A" + "4" + "A"
2. Verify administrator password
3. Enter the user's three-digit number.


4.3 Empty all ordinary users and temporary users

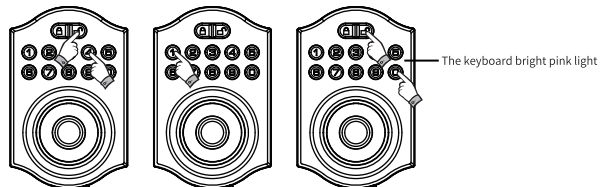

1. Press "A" + "4" + "A"
2. Verify administrator password
3. Enter 0000

7. Smark Lock Operation

5. Electronic anti-lock mode

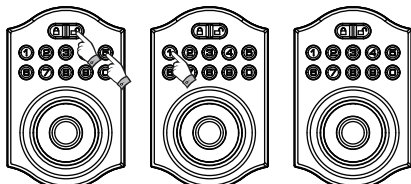


1. Press "A" + "5" + "A"
2. Verify administrator password
3. Switching on/off of electronic anti-lock mode

Note: 1. It is closed by default, and only the administrator can unlock it after opening.

2. After the administrator unlocks the lock, turn off the electronic lock.

[When this function is turned on, the green light is always on, and the buzzer is beep for a long time. When this function is turned off, the green light is always on, and the buzzer is beep twice.]

6. Mute mode

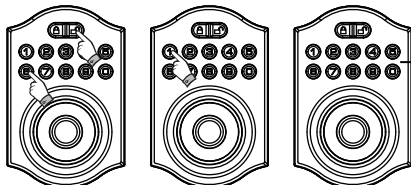


The keyboard bright Sky blue light

1. Press "A" + "6" + "A"
2. Verify administrator password
3. Switching of mute mode on or off.

Note: 1. It is turned off by default. After entering the mute mode, when the user enters the fingerprint password to unlock, it remains silent.

[When this function is turned on, the green light is always on, and the buzzer is beep for a long time. When this function is turned off, the green light is always on, and the buzzer is beep twice.]

7. Door magnetic switch (magnet is required to realize the function)

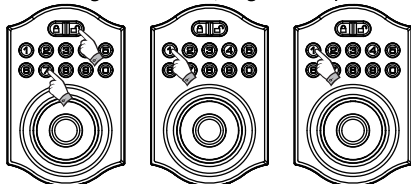


1. Press "A" + "7" + "A"
2. Verify administrator password
3. Switch the door magnetic switch on or off.

Note: It is turned off by default. When the door lock is turned on, the green light is always on and the buzzer is long. When this function is turned off, the green light is always on and the buzzer sounds twice.

7. Smark Lock Operation


8. Automatic locking

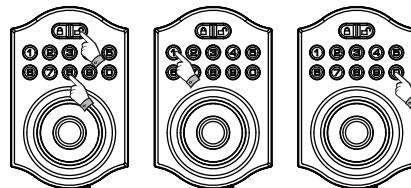

1. Press "A" + "8" + "A"
2. Verify administrator password

3. It is closed by default. Enter 05-30, which means that the lock will be automatically closed from 5 seconds to 30 seconds after unlocking. Enter 00 to close it.


9. Direction self-learning

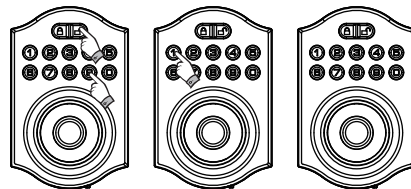

1. Press "A" + "9" + "A"
2. Verify administrator password

3. The system automatically learns the door opening direction.

10. Initialize settings

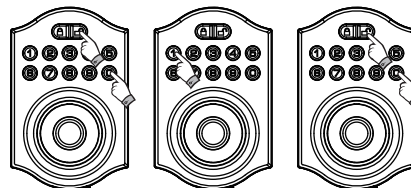


1. Press "A" + "0" + "A"
2. Verify administrator password

3. Enter 000

7. Smark Lock Operation


11. Network setting

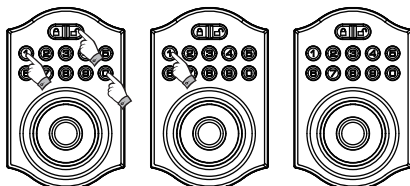

1. Press "Wi-Fi" + "10" + "Wi-Fi"
2. Verify administrator password
3. Turn on network pairing


Note: 1. If the door lock is a version without network module, it will report an error and exit.
2. If the wireless module has been added, please delete the network pairing before pairing again.

12. Delete network

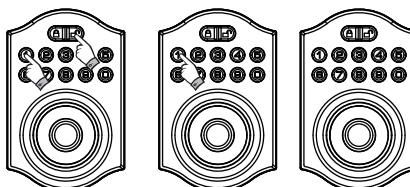

1. Press "Wi-Fi" + "11" + "Wi-Fi"
2. Verify administrator password
3. Delete the network pairing

8. Magnetic automatic locking function of closing door (magnet is required to realize the function)

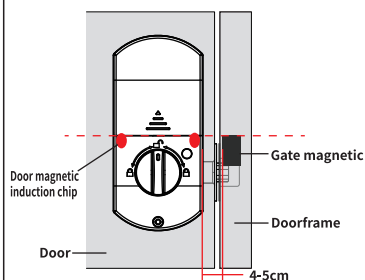

A. The back cover of the door lock integrates the door magnetic induction chip is in the middle of the door lock. Please align the top of the magnet with the bottom plate of the battery cover, and then attach the door to the door frame magnetically. Please make the distance between the door magnet and the middle of the rear shell about 4-5cm, so that the induction effect is better.

B. Enter the door lock menu, and press "Wi-Fi" + "7" + "Wi-Fi" to open the door magnetic locking function.

C. When the door is closed, the door lock will automatically lock.

9. Tuya APP operation

Scan code to download APP




1. APP registration and login

1) APP registration: If you do not have an APP account, you can choose to register or log in with one click of your mobile number.

2) Click "Register" to enter the account registration page. Obtain the verification code according to the mobile phone number or email, set the password,

3) If you have an existing account, click "Login" to log in to the app, password and verification code. Support social account login.

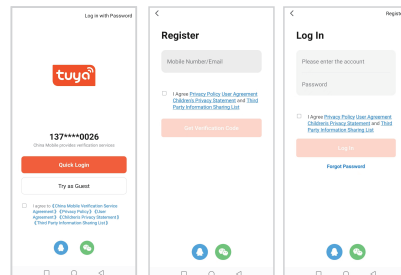


2. Create a home

1) After registration and login successfully create your home, click "Me" - "Home Management" - "Create a home" - "Home name" - "Save"


2) Each account can create and add multiple homes, and devices can be grouped by rooms in the home.

3) The weather and other functions depend on the geographical location of the family, it is recommended to set in advance

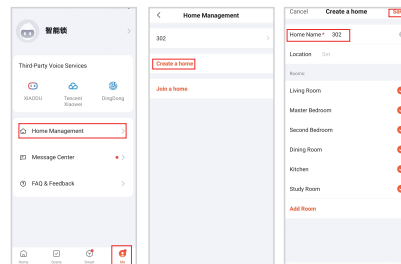

9. Tuya APP operation

4. Networking Settings: Operate on the lock

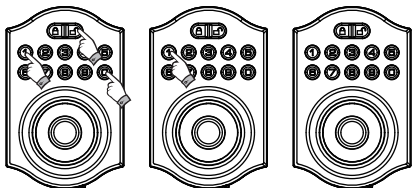


1. Press "+" + "10" + "+"
2. Verify administrator password
3. Turn on network pairing

At this time, the door lock has entered the distribution network state.


5. Add devices

In the "Home" section, click the "+" button in the upper right corner or click the "Add Device" button in the middle of the page, Enter the add device interface. Add device - Select lock - Connect - Add successful.

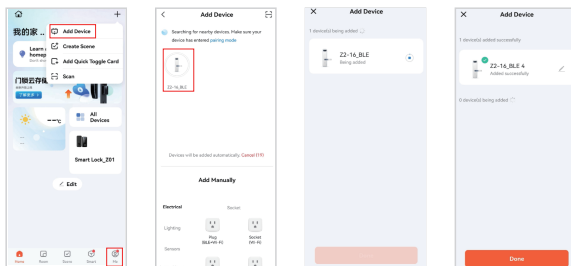

6. Bluetooth remote locking and unlocking


On the home page, swipe right to unlock and swipe left to lock.

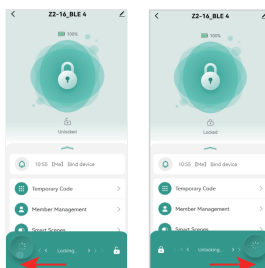

9. Tuya APP operation


7. Temporary password

Temporary passwords can be created and deleted through the app. The lock needs to remain connected to the internet, select the type of temporary password that needs to be added.

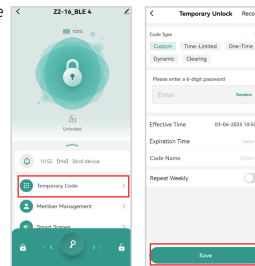

8. Member Management

You can add or remove family members

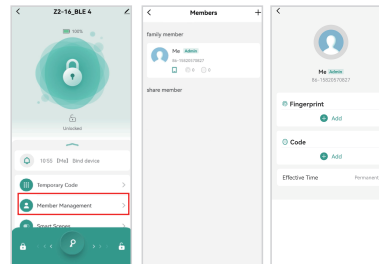

9. More settings

Can be set to turn on/off: remote unlocking/remote voice unlocking/automatic locking/electronic reverse locking, and doorbell volume setting.

