 


24 IN. HIGH VELOCITY DRUM FAN

MODEL# DF650-SP/ DF2624-SP

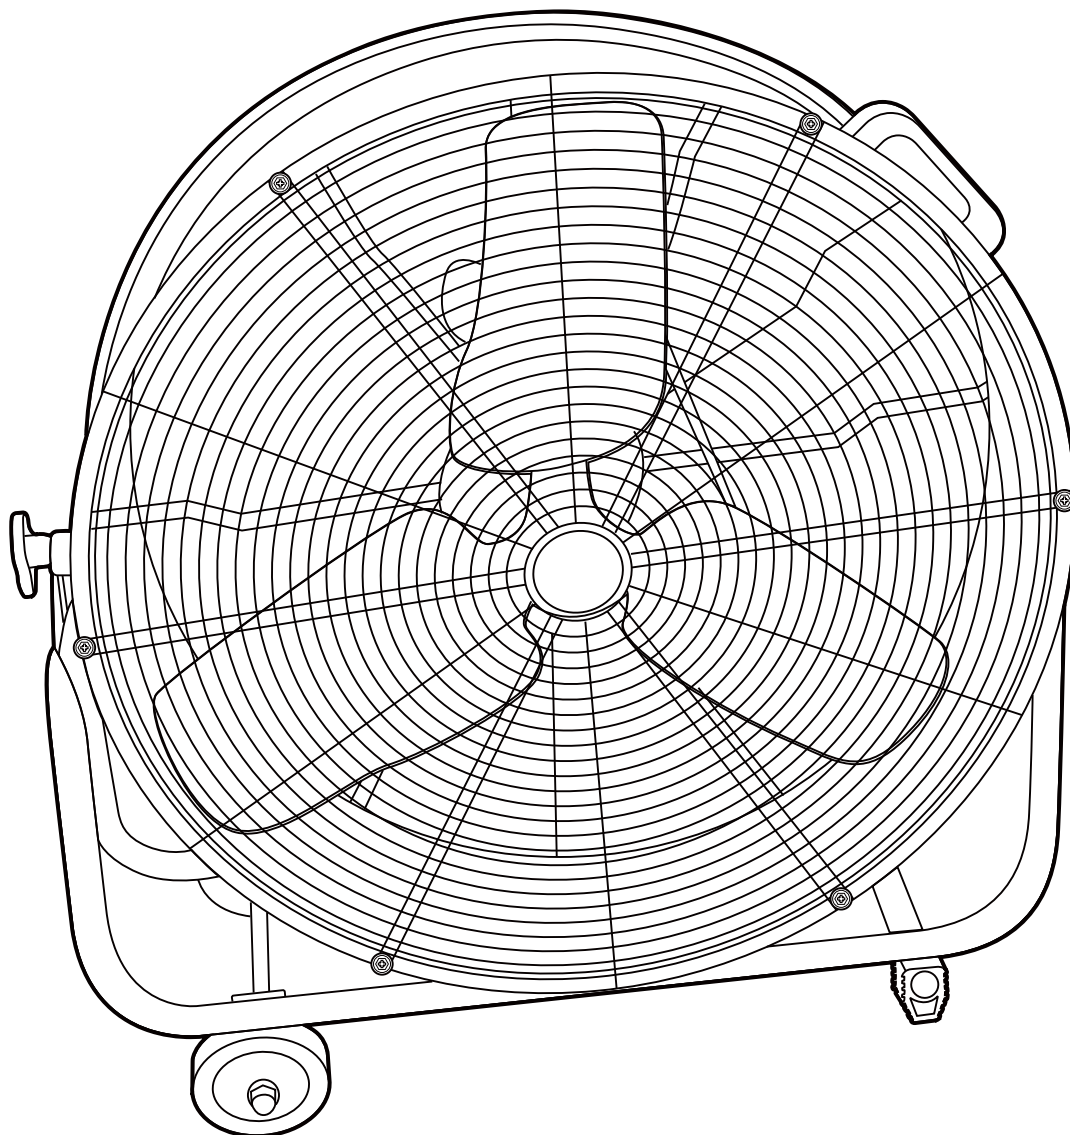

1. IMPORTANT SAFETY INSTRUCTIONS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

⚠ WARNING

Risk of fire, electric shock, or injury to persons.

⚠ WARNING Risk of electric shock!

- Do not expose to water or Rain.
- Do not use with damaged cord or plug.
- Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Do not use in damp environments such as flooded basements.

⚠ WARNING Risk of fire!

- Do not use near combustible materials or flammable gases or sources of heat.
- DO NOT USE in areas where gasoline, paint or flammable materials are used or stored.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

⚠ WARNING Risk of injury!

Avoid contacting moving parts. Wait until all components have fully stopped before touching them.

⚠ WARNING

To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

⚠ CAUTION Risk of fire and electric shock!

This product has a three prong grounded plug that must be inserted into a matching properly grounded outlet to reduce the risk of electrical shock. Do not attempt to defeat this safety feature.

⚠ CAUTION

- To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- To reduce the risk of injury disconnect from power supply before servicing.

- Read all the instructions before using this fan.
- Always disconnect this product before installing or replacing fuses.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product's rating label.
- Do not insert fingers or foreign objects in any opening of the product and do not obstruct the air vents.

 
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Never use the product without the safety guard or with a damaged safety guard.
- Do not place any clothes or curtains on the product as they could be sucked into the fan during operation and damage the product.
- During use, keep hands, hair, clothing and utensils away from the safety guard to avoid injuries and damage of the product.
- Unplug or disconnect the product from the power supply before servicing.

READ AND SAVE THESE INSTRUCTIONS

2. Intended Use

- This product is intended for indoor residential, office, industrial, or other commercial applications.
- This product is intended to be used in dry indoor areas only. Do not use in the presence of explosive and/or flammable materials/fumes.

3. Product Description

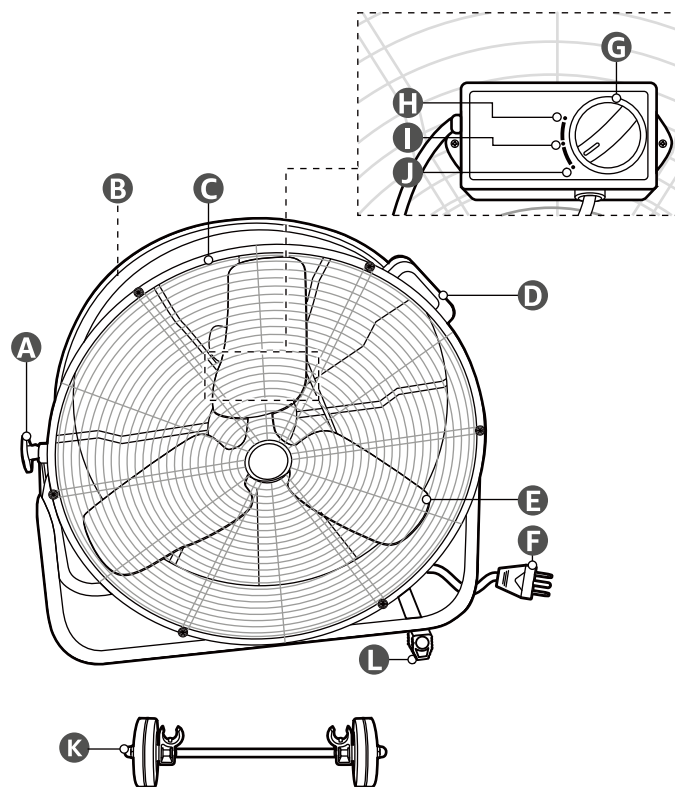

- | | |
|-------------------------------|-------------------------|
| A Tightening knob | H 2 setting |
| B Rear grille | I 1 setting |
| C Front grille | J 0 |
| D Handle | K Wheel assembly |
| E Fan blades | L Feet |
| F Power plug with fuse | |
| G Power knob | |

4. Before First Use

 
⚠ DANGER Risk of suffocation!

Keep any packaging materials away from children and pets – these materials are a potential source of danger, e.g. suffocation.

- ▶ Remove all the packing materials.
- ▶ Remove and review all components before use.
- ▶ Check the product for transport damages.
- ▶ Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.

5. Assembly

1. Align the wheel assembly (K) with the holes on the left side of the product frame. Push the wheel assembly (K) until it snaps into place (Fig. 1).

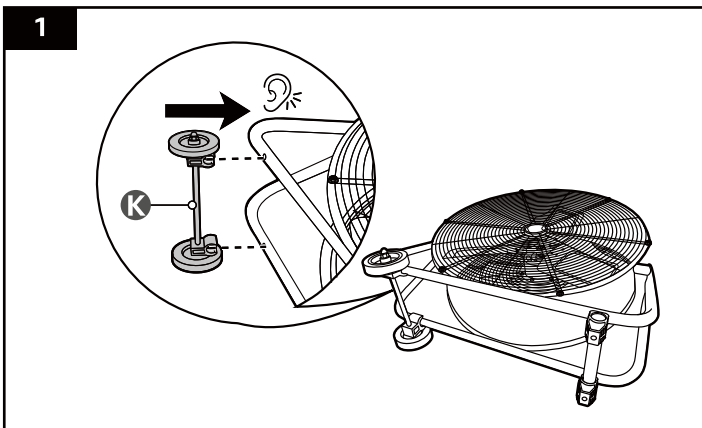

6. Operation

 
6.1 Switching on/off

1. Place the product in the upright position.
2. Connect the power plug (F) to a suitable socket-outlet.
3. To switch the product on, rotate the power knob (G) to 1 or 2 setting (I/H).
4. To switch the product off, rotate the power knob (G) to 0 (J).
5. After use, disconnect the power plug (F) from the socket-outlet.

6.2 Tilt adjustment

NOTICE Even after the tightening knob (A) is fully locked, the fan might still move if forcefully pushed, nudged or moved.

To adjust the tilt angle of the product, loosen the tightening knob (A). Adjust the tilt to the desired angle and then fasten the tightening knob (A) (Fig. 2).

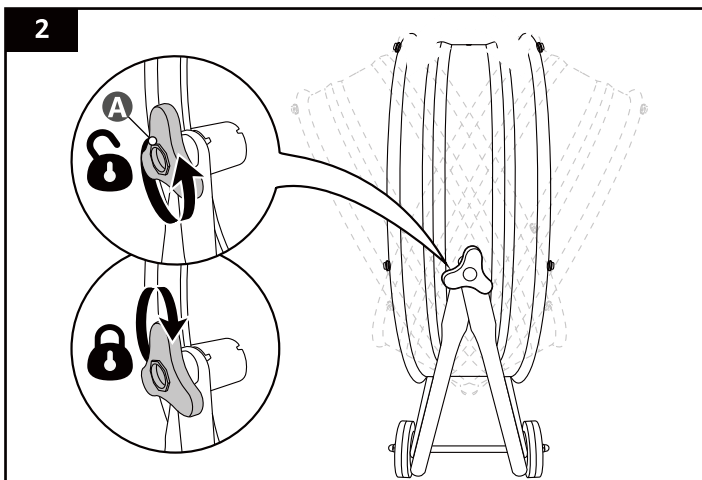

7. Cleaning and Maintenance

⚠ WARNING Risk of electric shock!

- ▶ To prevent electric shock, disconnect the product before cleaning.
- ▶ During cleaning do not immerse the electrical parts of the product in water or other liquids. Never hold the product under running water.

7.1 Cleaning

 
- ▶ To clean the product, wipe with a soft, slightly damp cloth.
- ▶ Wipe the product dry after cleaning.
- ▶ Use a vacuum cleaner to remove dust build-up on the grilles (C/B).
- ▶ Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

7.2 Cleaning the blades

⚠ CAUTION Risk of injury!

Do not take off the fan blades (E).

1. Take off the 6 screws on the front grille (C), then take off the front grille (C) (Fig. 3).

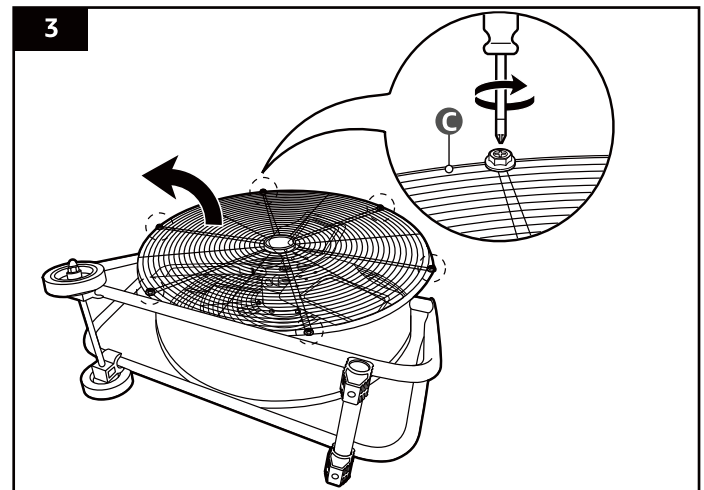

2. Wipe the fan blades (E) with a soft, slightly damp cloth.
3. Reinstall and secure the front grille (C) with the previously taken off screws.

7.3 Fuse replacement

 
⚠ WARNING Risk of electric shock!

To prevent electric shock, disconnect the product before replacing the fuse.

⚠ WARNING Risk of fire!

- ▶ Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.
- ▶ Replace fuse only with 5 Amp, 125 Volt fuse.

1. Grasp plug and remove from the receptacle or other outlet device. Do not disconnect by pulling on cord.
2. Slide the fuse cover on the power plug (F) open.
3. Use a small screwdriver to carefully pry the fuse out of the compartment by its metal ends (Fig. 4).

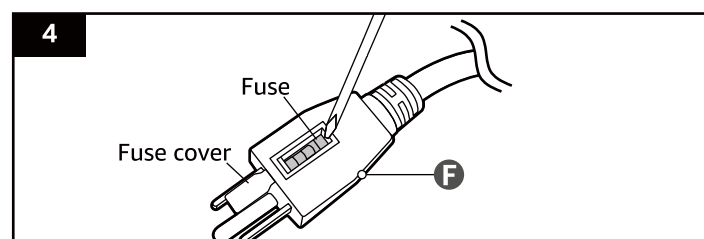

4. Place a new 5 A, 125 V fuse into the compartment.
 5. Slide the fuse cover on the power plug (F) closed.
- The fan shall not be modified by users, such as by adding supplemental filters to fans.

⚠ WARNING

 
PREVENT ELECTRIC SHOCK

This product has a cord with 3-prong grounding-type plug (A) which is the 3-slot grounded receptacle (A2). DO NOT remove the grounding prong (A1) if only a 2-slot receptacle (B) is available.

For connecting 3-prong grounding-type plug to 2-slot receptacle, use an ADAPTER (C). The grounding lug (C1) extending from the adapter must be connected to a permanent ground with the Metal Screw (D) such as a properly grounded outlet box (E).

The adapter should not be used if a 3-slot grounded receptacle is available.


DO NOT DEFEAT THE SAFETY PURPOSE OF EITHER A GROUNDED PRONG OR A GROUNDING LUG.

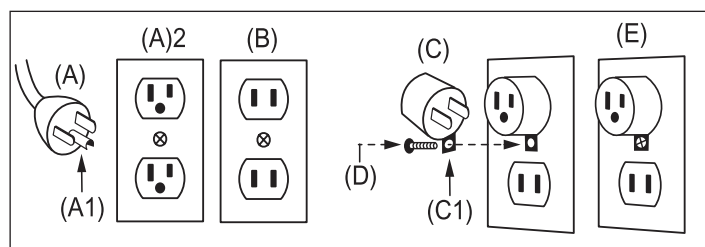

Adapter is not included


7.4 Transport

 To maneuver the product, lift up the product using the handle (D) and push the product around using the wheels (Fig. 5).

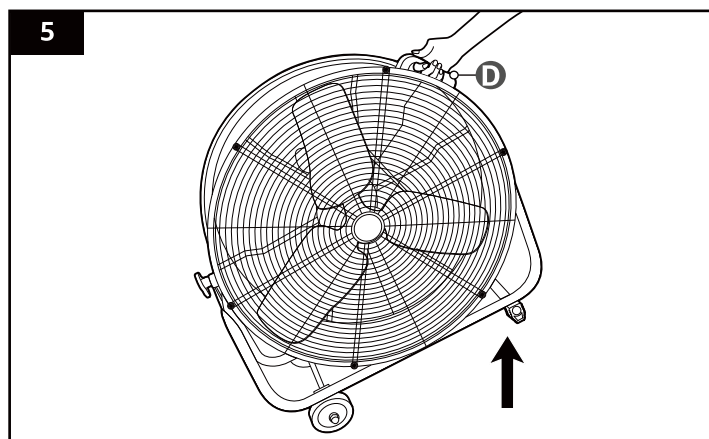

7.5 Storage

 Wrap the power cord on the cord storage hooks on the rear grille (B) (Fig. 6).

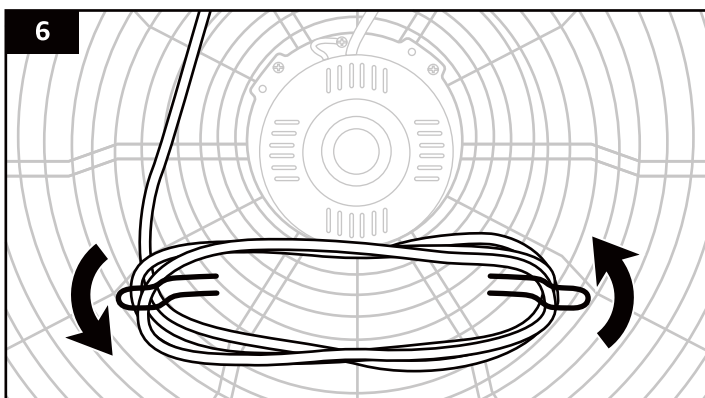

Store the product in its original packaging in a dry area. Keep away from children and pets.

7.6 Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair center.

8. Frequently Asked Questions

Question	Solution
Why does the product not switch on?	Check if the plug is connected to the socket outlet. Use voltage tester to verify if the socket outlet is powered.
The fuse in the power plug (F) is blown. What should be done?	Use a flat screwdriver to open the fuse cover. Remove the fuse and replace with the same type. Refit the cover.
How to stop the product from vibrating?	▶ Place the product on a level surface. ▶ Refit and properly screw in the grilles so as not to vibrate.

9. Specifications

Model number	DF650-SP/ DF2624-SP
Rated voltage	120 V AC, 60 Hz
Fan speed	1150 rpm
Current consumption	1.9 A
Fan airflow at low	5550 CFM
Fan airflow at high	10250 CFM
Cord type	SJT
Cord length	70.8" (180 cm)

10. Feedback and Help

We would love to hear your feedback. Please consider leaving a rating and review through your purchase orders. If you need help with your product, log in to your account and navigate to the customer service.