


HICFM

USER MANUAL AND OPERATING INSTRUCTIONS

READ & SAVE THESE INSTRUCTIONS

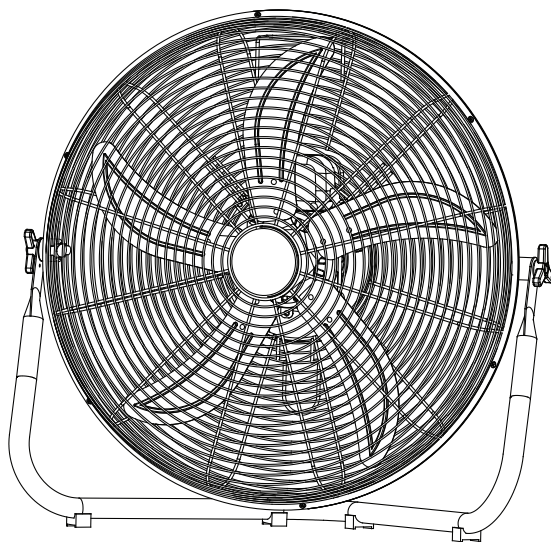

20 IN. HIGH-VELOCITY FLOOR FAN

120V / 60Hz, 1.35 A

ITEM NO.: FAN-C20, FAN-C20X


MODEL NO.: SFC1-500B3



If you have any questions or comments
about this or any product,
please e-mail our customer service by
inquiry@hicfm.com

www.hicfm.com

PACKAGE CONTENTS

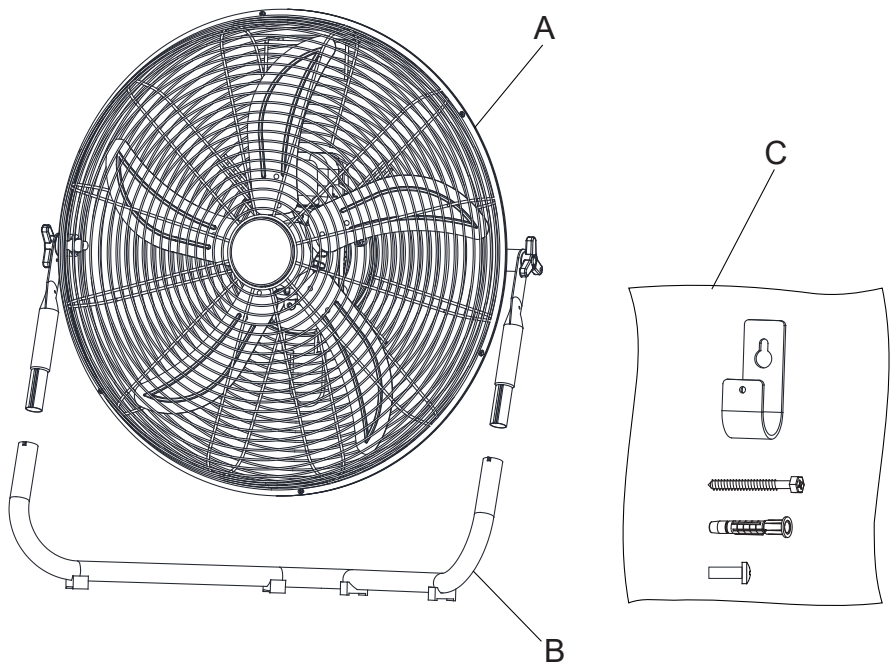

Part	Description	Quantity
A	Fan head	1
B	Bracket	1
C	Part list	1

PARTS LIST

AA X1	BB X1	CC X1	DD X1
			
mounting bracket	ST6*60 Wall Screw	φ8*50 Plastic anchor	M5*30 Screw

SAFETY INFORMATION

WARNING


1. Read and save these instructions. Do not operate fan unless you have read these instructions.
2. Unplug the fan before moving it or performing maintenance. Do not touch the fan when your hands are wet.
3. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
4. Unplug the fan when it is not in use.
5. DO NOT unplug the fan by pulling the cable cord. Unplug by holding the plug and pulling.
6. DO NOT use the fan when there is damage to the cable cord or plug. If the supply cord is damaged, it has to be replaced by the manufacturer, its service agent or similarly qualified persons.
7. To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).
8. DO NOT use the fan close to fires.
9. DO NOT insert your hand or other objects into the grille or the movable parts.
10. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
11. Do Not Use An Extension Cord With This Fan.
12. To Reduce The Risk Of Fire Or Electric Shock Do Not Use With An Extension Cord.

CAUTION


1. Unplug the fan from the socket and clean it with a soft cloth.
2. DO NOT immerse the fan.
3. Fit the guard onto fan before starting up the fan.
4. This fan is not intended for use by people (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the fan by a person responsible for their safety. Supervise children to ensure they do not play with the fan.
5. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions(follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

ASSEMBLY INSTRUCTION

1. Press the buttons (1) on each side of the upper base of the fan (A).

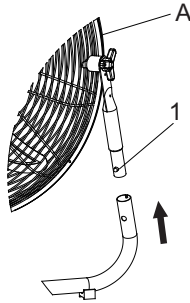


2. Insert the upper bracket(2) onto the base bracket (B) until the buttons snap into place in the base bracket (B).

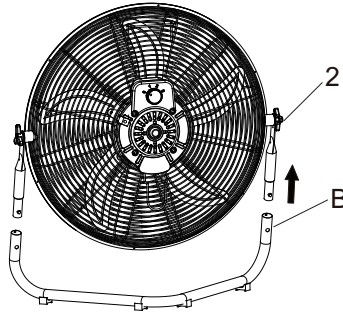

OPERATION INSTRUCTION

1. Place the fan on a safe, flat surface where it can not fall or be pulled by the cord.
2. Adjust the desired speed by rotating the switch knob at the back of fan.


0 Stop 1 Low 2 Medium 3 High

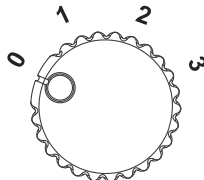

3. Tilt the fan head up or down for desired direction of air flow.

WALL-MOUNT INSTRUCTION

1. Mark the desired hole location by using the wall bracket, and then drill hole.

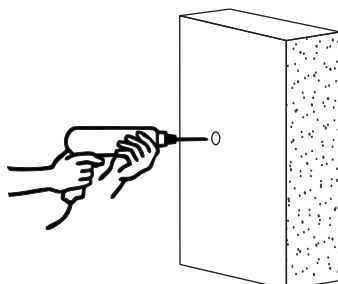


2. For concrete wall installation:

After drilling, insert the wall anchor and tap them flush with the wall, install the bracket to the wall by securing the bolt.

Then hand the fan to the bracket.

AA X1	BB X1	CC X1	DD X1
 mounting bracket	 ST6*60 Wall Screw	 φ8*50 Plastic anchor	 M5*30 Screw

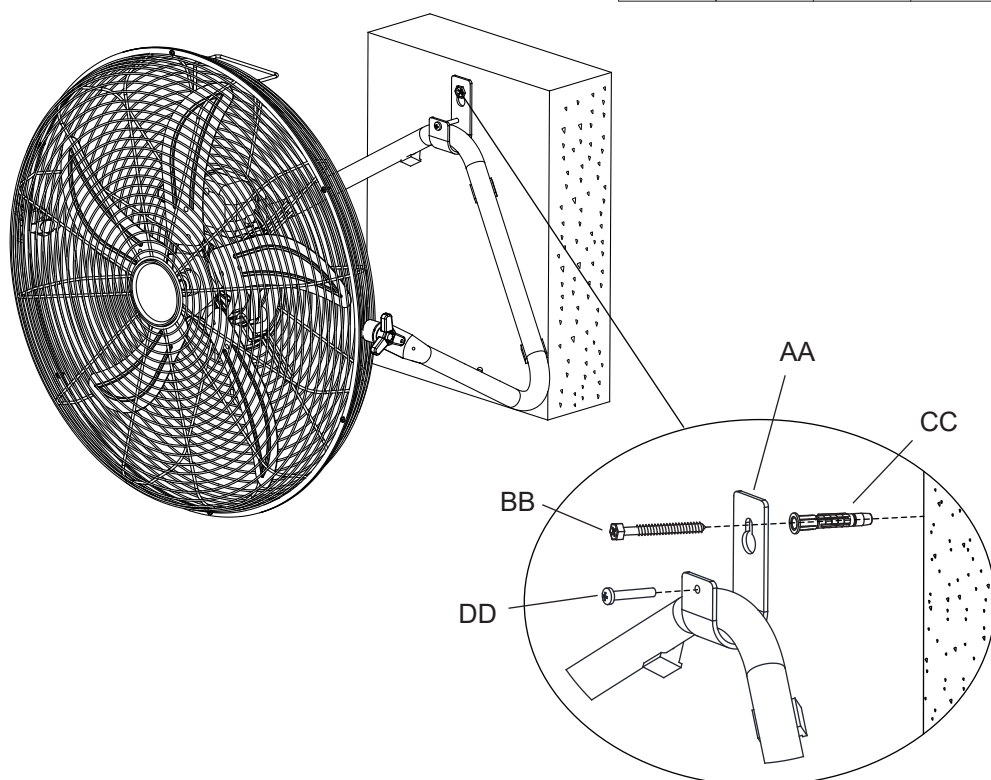


WALL-MOUNT INSTRUCTION

3. For wall stud installation:

After drilling the smaller diameter pilot hole, position the bracket and screw the bolt into the wall until they are secured.

Then hand the fan to the bracket.

AA X1	BB X1	DD X1
 mounting bracket	 ST6*60 Wall Screw	 M5*30 Screw

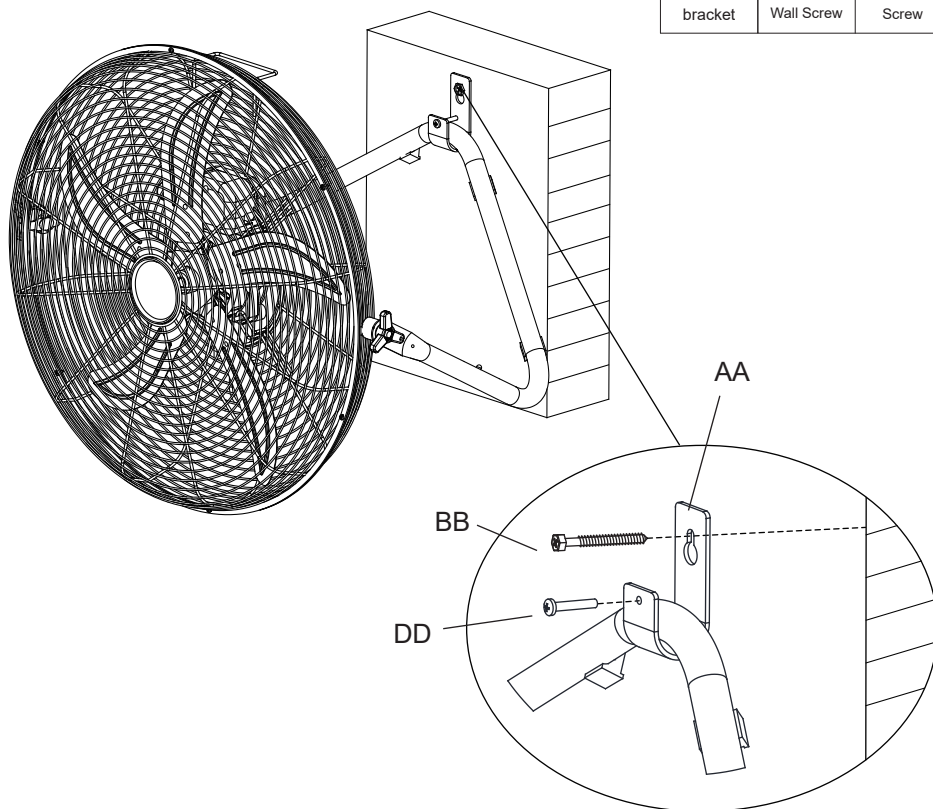


CARE AND MAINTENANCE

Unplug the appliance before cleaning. Don't use any water for cleaning metal surfaces. Slightly moisten a cloth and then wipe off the surfaces of the fan. In order to remove dust from the grill, use a vacuum cleaner or remove the front grill by removing the securing screws on the edge of the grill. After cleaning, remount the grill. After doing this, fasten the screws on the edge of the grill.

MAINTENANCE

This plug is a safety feature that contains a safety device (fuse). If your replaceable fuse (5 Amp) blows, follow these instructions to replace the fuse.

1. Unplug your fan, grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Slide open the fuse cover (3) at the side of the plug by using your thumb or a flat screwdriver.
3. Remove the fuse (4) carefully.
4. Install a new 5 Amp fuse (4) and ensure it is secured in place.
5. Slide back the fuse cover (3) completely.

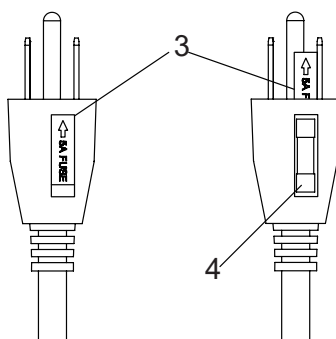


1-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from manufacturing defects in the material and workmanship under normal use for a period of one year after the date of purchase by the original purchaser.

This warranty does not cover transit damages. This warranty does not apply to damages from accident, misuse, alteration of any kind to the fan or where the connected voltage is more than above the nameplate voltage. This warranty does not apply to the finish on any portion of the product. Servicing performed by unauthorized persons shall render the warranty invalid. The warranty is not responsible for damages of any kind, including accident and consequential damages. Some states do not allow the exclusion or limitation of the incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

REPLACEMENT PARTS LIST

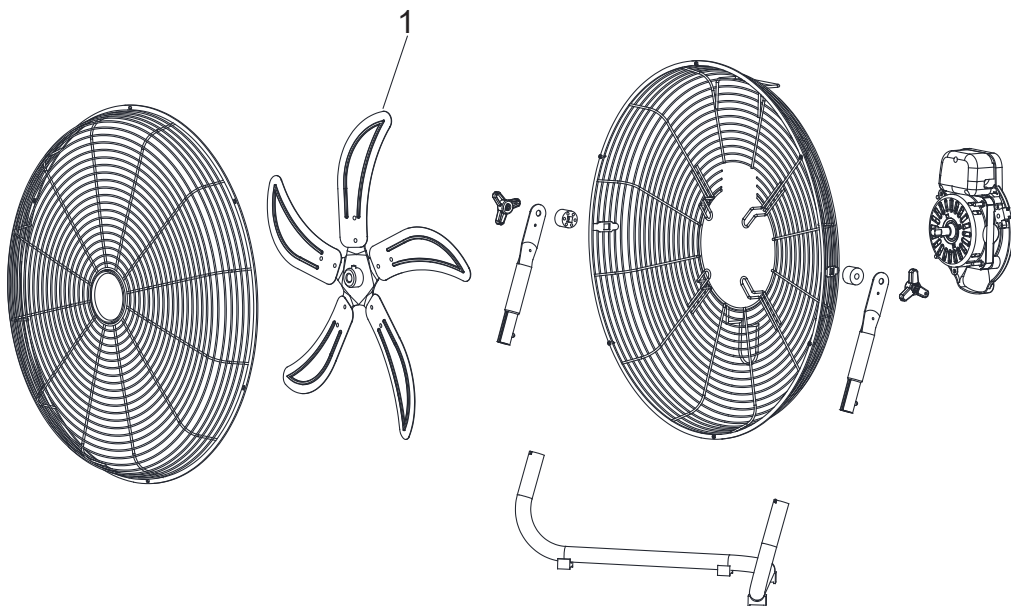

PART	DESCRIPTION	PART #
1	Blade	FAN-C20-01, FAN-C20X-01