

Use & Care Guide

Kenmore[®]

Desk Fan & Heater Combo

Model: KM-60079-BK

Customer Support
support@kenmorehomecomfort.com
www.kenmorehomecomfort.com



Table of Contents

Before Using Your New Fan Heater	2
Important Safety Instructions	2-3
California Proposition 65	3
Specifications	3
Parts and Features	4
Operating Instructions	4-5
Security and Protection	5
Maintenance and Cleaning	6
Disposal and Environmental Protection	6
Limited Warranty	7

Before Using Your New Fan Heater

The following instructions are essential for proper assembly and operation. Please keep these instructions for future reference. Always refer to the technical data on the product, subject to technical alterations.

Please read the instructions carefully.

Important Safety Instructions



WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using this heater, follow basic safety precautions including the following:

- WARNING: Please read the following instructions for safety before use. Improper use may result in fire, property damage, personal injury, or death. DO NOT use the product with incompatible components or alter the product in any way. Make sure to use the heater according to the following safety instructions and guidelines.
- Use the fan heater only as described in this guide.
- This fan heater is for household use only.
- This fan heater is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If used near children and/or pets, close supervision is necessary.
- Never leave the fan heater unattended while it is in use. Always turn the fan heater to the OFF position and unplug it from the electrical outlet when not in use.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- This fan heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces. If provided, use handles when moving the heater, or move when the heater fan has cooled.
- Connect the fan heater to a single phase AC supply of the voltage specified on the rating plate.
- Do not locate the fan heater immediately below an electrical socket outlet.
- Do not run the cord under carpeting and do not cover the cord with throw rugs, runners, or similar objects. Place cord away from high traffic areas and where it will not be tripped over.
- Do not use the fan heater with a damaged cord or plug, blade, safety cover, or after the heater malfunctions, has been dropped, or damaged in any manner.
- Return fan heater and any damaged parts under a warranty repair, if applicable.
- Avoid the use of an extension cord as this may overheat and cause a risk of fire.
- Be sure that no other appliances are in use on the same electrical circuit as your fan heater, as an overload can occur.
- The cord should not be placed near the hot surface of the appliance.
- Do not wrap the cord around the fan heater fan immediately after use.
- Use the fan heater on flat, dry surfaces only.
- Do not use this fan heater in the immediate surroundings of a bath, a shower, or a swimming pool. Never locate the fan heater where it may fall or be knocked into a bathtub, standing water, or other water container.
- Do not immerse any part of the fan heater in water.
- Do not allow the interior to get wet as this could create a hazard.
- Do not use any cleaning chemicals such as detergents and abrasives.
- Make sure that no pieces of packing material have been left between the elements of the fan heater. It may be necessary to pass over the appliance with a vacuum cleaner.

Important Safety Instructions, con't

- Do not put any object into any ventilation or exhaust opening of fan heater. To prevent a possible fire, do not block air intakes or exhaust openings in any manner.
- Do not use the fan heater on soft surfaces, like a bed, where openings may become blocked or fan heater fan may fall over.
- Keep all flammable materials e.g. furniture, pillows, bedding, papers at least 3 feet from the front of the fan heater and avoid contact with the sides and rear.
- Do not place this fan heater near flammable surfaces or substances. Keep flammable surfaces and substances at least 3.3 feet from the front and avoid contact with the sides and rear.
- Use the fan heater in a well-ventilated area.
- Do not use the fan heater in a room smaller than 53 square feet.
- Do not use the fan heater in any areas where gasoline, paint, or other flammable liquids are stored, e.g. garages or workshops, as there can be hot, arcing or sparking parts inside the fan heater.

California Proposition 65



WARNING

The use of this appliance can expose you to chemicals, including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

El uso de este electrodoméstico puede exponerte a productos químicos, incluidos el plomo y compuestos de plomo, que según el Estado de California son conocidos por causar cáncer y defectos de nacimiento u otros daños reproductivos. Para obtener más información, visita www.P65Warnings.ca.gov.

L'utilisation de cet appareil peut vous exposer à des produits chimiques, y compris du plomb et des composés de plomb, qui sont connus par l'État de Californie pour causer le cancer et des anomalies congénitales ou d'autres dommages reproductifs. Pour plus d'informations, rendez-vous sur www.P65Warnings.ca.gov.

Specifications


Product Description	Desk Fan & Heater Combo
Model Number	KM_60079-BK
Rated Voltage	AC 120 V ~ 60 Hz
Rated Power	1500W
Assembled Dimensions	10.23 x 8.18 x 13.89"

Parts and Features



Choking Hazard!

Packing material is not a toy. Do not allow children or pets to play with the packing material. It is a choking hazard.

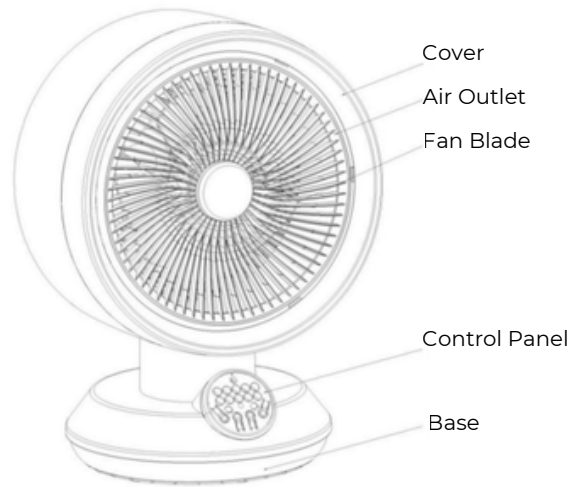

Operating Instructions

Step 1. Check the machine before starting

- Check whether the power cord is in good condition.
- Before accessing the power supply, please ensure that the power supply inlet is AC 100-120V 60Hz.

Step 2. Place the machine on a flat surface

- Placing the machine on an uneven surface may trigger the tip switch and disable the heater fan's heating function.

Step 3. Power Supply

- Plug the fan heater into the wall socket. The power indicator lights up when the fan heater is plugged in, whether or not it is turned on.
- DO NOT use with power extension cords and power strips.

Step 4. Operating the Fan Heater

Press the  button to power on the fan heater.

Press the  button to start the fan/heater and to switch 4 functions. The following lights will correspond to function:
fan low  fan high. , heating low (750W)  heating high (1500W) 

Temperature Setting: For Heating Function Only

Choose  to go into heating mode. Press the  button to select the temperature: 70° F, 80° F, and 85° F.
For example, when the temperature is set at 85° F, the fan heater will automatically shut down when the ambient temperature reaches 85° F. When the ambient temperature is below 85° F, the unit will turn on automatically.

Press  to activate OSCILLATION. Press it again to cancel oscillation.

Press  to turn off the unit.

After powering off, unplug the power cord and wait for the fan heater temperature to drop before storing.

Operating Instructions, Con't

INSTRUCTIONS FOR THE REMOTE CONTROL

*The instructions are the same for the use of the remote control.



⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH OF CHILDREN. • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Replace the battery with 1 "CR2025" button cell battery and dispose of the used battery properly and in accordance with local law and ordinances.
- The nominal battery voltage of the "CR2025" button battery is 30V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 158°F or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep away from children.

Security & Protection

1. Overheat Protection

- If the temperature inside the fan heater is too high due to the ambient environment or improper use, the thermostat will cut off the power and the fan heater will stop working.
- When the internal temperature of the fan heater cools down, the fan heater can be returned to normal use.

2. Overturn Protection

- When the fan heater falls over, the guard cuts off the power.
- When the fan heater is positioned upright, the fan can be returned to normal use.
- The fan heater does not turn off when it is picked up and will only turn off automatically if it is tipped over.
- OVERTURN PROTECTION IS INSENSITIVE ON SOFT SURFACES SUCH AS CARPETS. PLEASE **DO NOT** PLACE THE UNIT ON SOFT SURFACES WHEN IN USE.

Maintenance and Cleaning

- **Your appliance must be switched OFF via the main power supply and unplugged before you proceed with cleaning.**
- Clean the housing with a lightly damp cloth, a vacuum cleaner, or a dusting brush.
- Never use flammable or abrasive cleaning agents to clean the appliance.
- Never immerse the unit in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period, it must be protected against excessive dust and dirt. Please store in a dry place away from sunlight and dirt.
- In case of malfunction, do not try to repair the unit yourself, it may result in a fire hazard or electric shock.

Disposal and Environmental Protection

- Dispose of the product at the end of its lifetime according to relevant legal regulations.
- Electrical products such as electrical appliances, energy-saving lamps, and (rechargeable) batteries marked with a crossed-out garbage can not be disposed of with household waste.
- Dispose of the product at a specialized waste disposal site.



Limited Warranty

Equity Sales & Marketing, Inc., ("ESM") warrants this product against defects in workmanship or material for a period of 1 year from the date of purchase for residential, non-commercial use. This is the Limited Warranty against manufacturing defects. This warranty is valid only in the United States. For California residents, this warranty commences on the delivery date of product to the consumer, instead of the date of purchase. The Kenmore Brand is used under license. Direct all claims for warranty service to www.kenmorehomecomfort.com.

THIS WARRANTY SHALL NOT APPLY to any products or parts thereof which have been damaged by acts of nature, accidents, negligence, commercial use, tampering, misuse or abuse, or which have been altered or modified (including removal of the serial number) or repaired by an unauthorized person or service center. Misuse includes, among other things, connection to improper voltage supply. Further, this warranty does not cover cosmetic damage to the product.

THIS WARRANTY SHALL NOT APPLY to wheels, casters, or accessories since their life depends upon the amount of use.

THIS WARRANTY SHALL NOT APPLY to a product exposed to liquids, or used in wet, rainy, or humid environments.

THIS WARRANTY SHALL NOT APPLY to a product with exhausts or ventilation that have been obstructed.

THIS WARRANTY SHALL NOT APPLY to a product used in a manner contrary to any of the sections of the Use and Care Guide.

FOR REPAIR OR REPLACEMENT the inoperative machine must be delivered with shipping and delivery charges prepaid together with the receipt, bill of sale, or receipted invoice which is evidence of the purchase date (or delivery date for California residents) to place of purchase. ESM will either repair or replace, at its selection, all defective machines during the warranty period.

This limited warranty is the sole and exclusive warranty for the ESM product. No employee, agent, dealer, or other person is authorized to alter this warranty or make other warranty on behalf of ESM.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY TO THE CONSUMER. ESM SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. ESM'S LIABILITY UNDER NO CIRCUMSTANCES WILL EXCEED THE CONTRACT PRICE FOR THE PRODUCT OR PARTS FOR WHICH LIABILITY IS CLAIMED.

The foregoing obligations are in lieu of all other obligations and liabilities including negligence and state ESM's entire exclusive liability and the purchaser's exclusive remedy. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions do not apply to you in those states.

For more information visit: www.kenmorehomecomfort.com

Kenmore and the Kenmore logo are registered trademarks of Transform SR Brands LLC and are used under license. Product distributed by Equity Sales & Marketing, Inc., Bentonville, AR 72712. Made in China.

