


毛巾桶说明书英文-130x190mm-2021-9-1

INSTRUCTION MANUAL

WARMER BUCKET

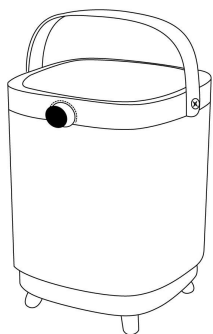

MODEL: MJ01



Description

1. The appearance adopts the pearl white, gray, wood grain and other patterns.
2. Light weight and can move at home
3. The lid can be separated
4. Simple and clear indicator light
5. Can be placed smoothly on ceramic tiles, porcelain, ceramics, and other floors.

| | |
|--------------|---------------|
| Model Number | MJ01 |
| Voltage | 120V |
| Frequency | 60Hz |
| Power | 450W |
| size | 335*335*520MM |



Important safeguards

- | The product is for household use only
- | The item should be used only as intended
- | Check item carefully before use. Do not switch on heater with defects or damaged cord.
- | Placing of the item in water is forbidden.
- | Plug in the item only to AC source.
- | The appliance should be connected to the same voltage as pointed on the rating label and package
- | The heater could be plugged in only grounded socket.
- | Do not use non-standard power supply.
- | Before plug in the heater, make sure that it is switched off.
- | Do not use item outdoors.
- | Protect the product from impacts of the sharp corners, high humidity.
- | Do not touch heater with wet hands.
- | If there is water on the surface of the heater, plug it out immediately.
- | If the heater falls in water, plug it out immediately. It is forbidden to put hands in the water.
- | Before next use the item should be checked by specialist.
- | Always plug the item out after use, before cleaning or if you find the defects.
- | The heater can't be carried by the cord.
- | When you switch off the heater keep your hand on the plug and pull it, do not pull the cord.

2

- | Do not wrap the cord around the appliance after the use.
- | Flatten smoothly the cord when you do not use the heater.
- | The cord could be changed only in service center.
- | Only original spare parts could be used for repair.
- | This appliance is not intended for use by persons(including children) with reduced physical,sensory or metal capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Safety instructions

- | It is recommended to heat pure cotton materials, do not heat chemical fiber towels or chemical fiber clothes, or other high temperature materials

Before use

- | Take the heater out of the box
- | Remove the packing material
- | Check the product perfection

Performance and use methods of the product

- | The product is available in four timing settings (15,30,45, or 60 minutes)
- | It warms up quickly in a minute and warms the inner towel in 6-10 minutes
- | It holds up to two 40 "X 70" oversized bath towels, bathrobes, blankets, pajamas, etc
- | Timed power outage
- | It adopts three layers of functional protection; with temperature sensor, self-reset thermostat, and overheated temperature fuse.

Cleaning

- | Before cleaning the item wait when it cools down and plug out
- | Do not use abrasives and solvents. Wipe the product with soft wet cloth
- | It is necessary to remove dust from the surface regularly
- | Washing the item and placing it in water is forbidden!
- | If you are going not to use heater for long time, wipe it surface and put the item in color box.
- | It should be placed in dry ventilated room. Avoid high humidity and mechanical impact on the item


Attention: never leave heater unattended!

The importer retains his right to make changes in appearance and completeness of the item without preliminary notification to the customer.

The item is for household use only.

3

Attention! The manufacturer does not assume any liability for any damage caused directly or indirectly by not following this instruction manual, general safety rules, or interference in the construction of the product

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

4