 


PATIO BOSS

**ELECTRIC OUTDOOR
HEATER**

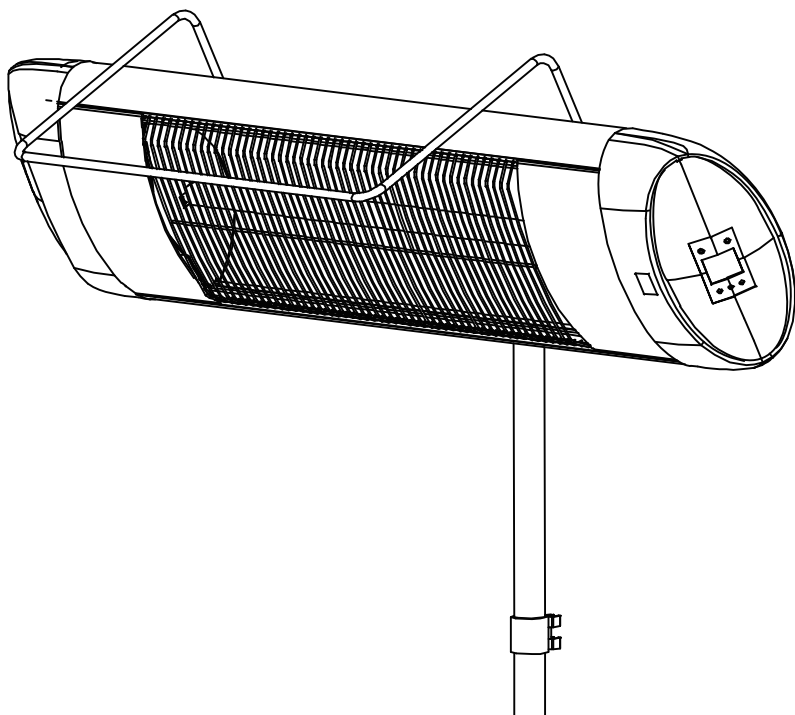 


ELECTRIC OUTDOOR HEATER

NX-1500AR

PRODUCT USE GUIDE

ELECTRIC OUTDOOR HEATER OWNER'S MANUAL

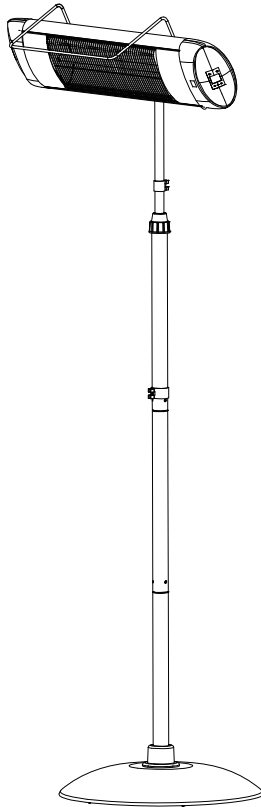

Thank you for choosing our Electric Outdoor Heater. This user manual will provide you with valuable information necessary for the proper care and maintenance of your new product.

Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new product.

INTRODUCTION

Please take a few minutes to read
this manual carefully.

Proper maintenance and operation of this
machine can provide better service.

TABLE OF CONTENTS

About PATIOBOSS electric outdoor heater	5
Features	5
Specifications	5
Product Contents	6
Unit Diagram	7
Important Instructions	8
Unit Setup - Floor Stand	9-10
Unit Setup - Wall/Ceiling Mount	11
Control Panel/Remote Diagrams	12
Using PATIOBOSS electric outdoor heater	13
Maintenance/Cleaning/Storage/Troubleshooting	14
Warranty	15

ABOUT PATIOBOSS ELECTRIC OUTDOOR HEATER

Thank you for your PATIOBOSS electric outdoor heater. This heater provides consistent warmth to outdoor spaces using carbon infrared heating technology, warming your friends and family directly instead of just heating the surrounding air.

PATIOBOSS electric outdoor heater can be mounted using easy-to-install bracket, or it can be placed on an adjustable iron stand for mobility. Either way, the silent and odorless heating element is a safe distance from children and pets.

For optimum comfort, three different levels of heat can be produced with almost no warm-up time. A 24-hour timer allows for specific shut-off time selection, and all features can be adjusted using the included remote control. PATIOBOSS electric outdoor heater is durable, lightweight, maintenance-free, and can connect to your standard household electrical outlet.

FEATURES

- High Efficiency Carbon Fiber Heating Element
- 3 Power Modes
- Shut-Off Timer
- 360° Tip-Over Safety
- Floor Stand and Wall Mounting Options

SPECIFICATIONS

Model Number:	NX-1500AR
Power Input:	120VAC/60Hz 15A
Power Usage:	500W/1000W/1500W
Heat Output:	5100 BTU
Unit Dimensions:	7.6" H x 30.0" W x 3.6" D
Unit Weight:	5.7 lb
Stand Dimensions:	42.8" - 71.5" H x 19.7" W x 19.7" D
Stand Weight:	14.7 lb
Warranty:	1 Years

PRODUCT CONTENTS

- 1 - Owner's Manual
- 1 - PATIOBOSS electric outdoor heater
- 1 - Remote Control (Batteries Not Included)
- 1 - Telescoping Stand
- 1 - Stand Base
- 3 - Cord Clips
- 1 - Grille Guard



Thread Diameter is denoted in mm by the first number. (i.e. M5*12 = 5mm diameter)
Screw Length is denoted in mm by the second number. (i.e. M5*12 = 12mm length)

1 - Mounting Bracket 1



1 - Mounting Bracket 2



2 - Large Cord Clip



1 - Small Cord Clip



1 - Base Cover



3 - ST4*35 Screws



4 - Wing Nuts



3 - Wall Anchors



4 - M6*35 Screws



4 - M5*12 Screws



 
4 - M6*30 Screws



6 - M5*6 Screws




UNIT DIAGRAM

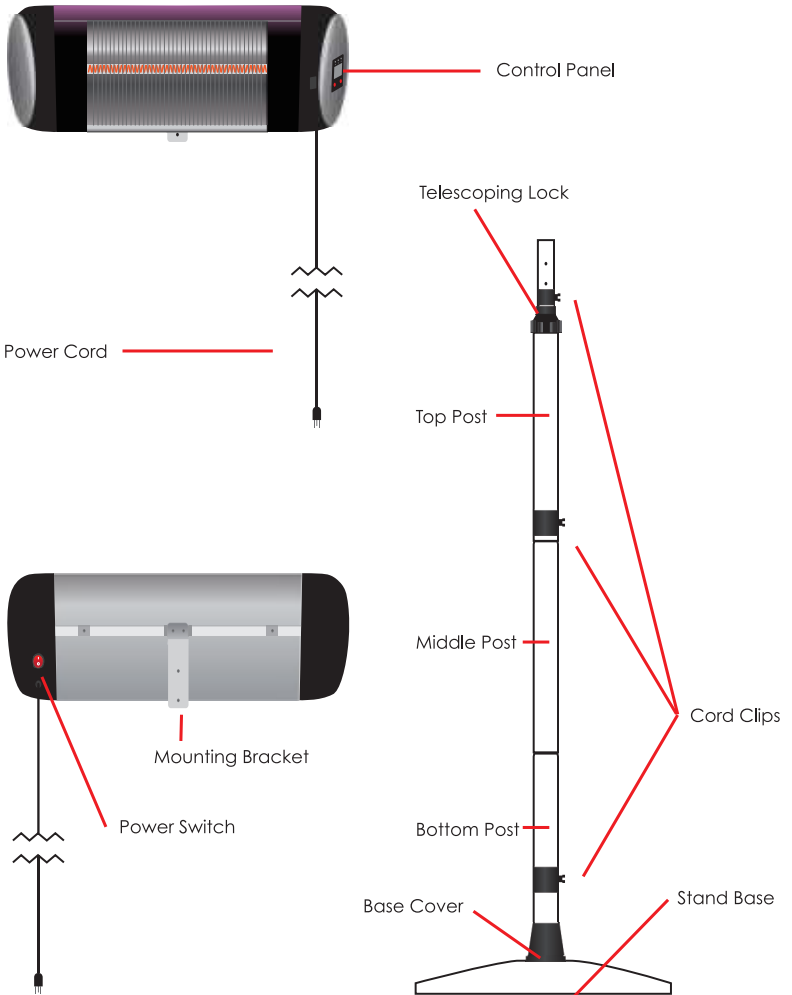

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

 - Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use. (This item may be omitted if the heater is provided with a clock-operated switch).
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Connect to properly grounded outlets only.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- SAVE THESE INSTRUCTIONS
- This heater is for use on 120 volts. The cord has a plug as shown at (A) in the figure below. An adapter as shown at C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

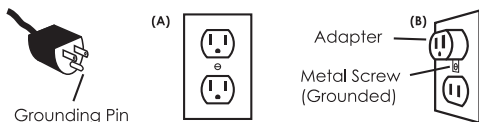


UNIT SETUP - Floor Stand




INSPECT THE UNIT FOR DAMAGE BEFORE SETUP OR USE.

 
1. Begin by connecting the Bottom Post (Post with a Flat Base) to the Base, using the provided Four (4) M6*30 Screws.

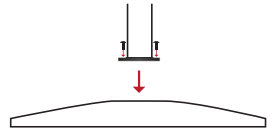

 
2. Slide the Base Cover over the connected post to cover the screws and then slide One (1) Large Cord Clip over the post.

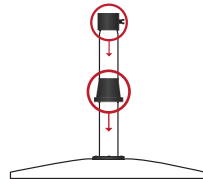

 3. Place the Middle Post (Optional for extra 17.5" height) onto the Bottom Post and fasten them together using Three (3) M5*6 Screws on the sides. Slide the remaining (1) Large Cord Clip over the post.

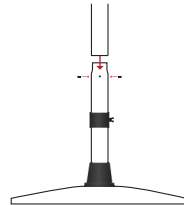


 4. Place the Large and Small Cord Clips on the Top Post then place the Post onto the Middle Post (or Bottom Post if you want a lower height) and fasten them together using Three (3) M5*6 Screws on the sides.

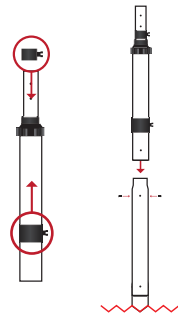


UNIT SETUP - Floor Stand

 
5. Use Two (2) M6*35 Bolts and Two (2) Wing Nuts to combine Top of Bracket 1 (Long End) to the Bottom of Bracket 2 (Short End) .



 
6. Use Two (2) M6*35 Screws and Two (2) Wing Nuts to install the Front of Bracket 2 (Long End) to the rear of the Telescoping Post.

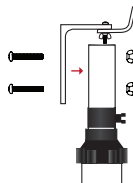

 
7. Use Two (2) M5*12 Screws to install Bracket 1 (Short End) to the rear of the Heater Body.

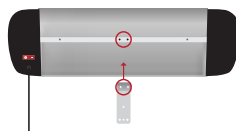

 8. Use the Two (2) remaining M5*12 Screws to mount the Grille Guard to the rear of the Heater Body. The Grill Guard should extend over the front of the unit.

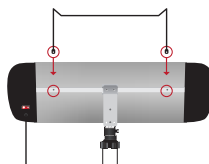

 9. Loosen the Telescoping Lock and slide the pole and unit up or down to your desired height, then re-tighten the Telescoping Lock.

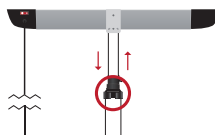

UNIT SETUP - Wall/Ceiling Mount



FOR YOUR SAFETY, READ ALL IMPORTANT INSTRUCTIONS (PAGE 7) AND USAGE (PAGE 13) BEFORE USING YOUR PUREHEAT PATIO.



 
HEATER MUST BE MOUNTED **HORIZONTALLY** OR THE TIP OVER SAFETY SWITCH WILL ENGAGE AND THE UNIT WILL NOT OPERATE.

1. Ensure the desired mounting location can fit the unit in a horizontal orientation and is near an outlet but free from electrical cables, communication lines, and pipes that could be damaged by excessive heat.


2. If needed, pre-drill your wall and insert 3 Wall Anchors. Use Bracket 2 as a template for hole placement.




3. Use Two (2) M6*35Bolts and Two (2) Wing Nuts to combine Top of Bracket 1 (Long End) to the Bottom of Bracket 2 (Short End) .



 4. Use (3) ST4*35 Screws and fasten the Mounting Bracket to the Wall in a vertical orientation. Use the top hole and the outside holes on the bottom.

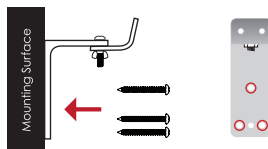


 5. Use Two (2) M5*12 Screws to install the Mounting Bracket to the rear of the Heater Body.

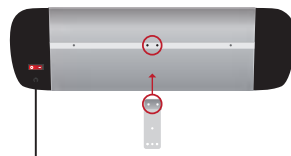


CONTROL PANEL/REMOTE DIAGRAMS

 Control Panel

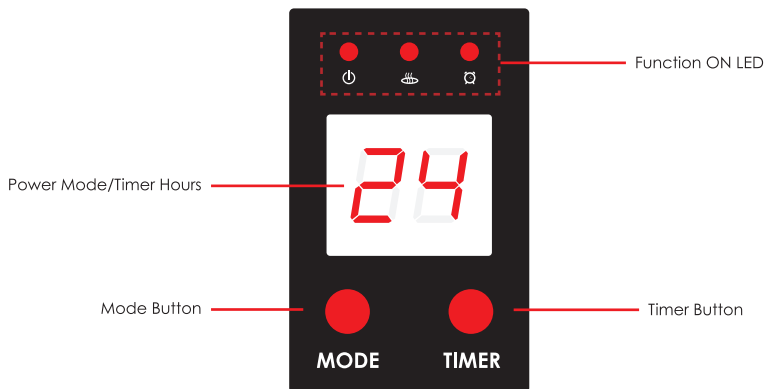

Remote

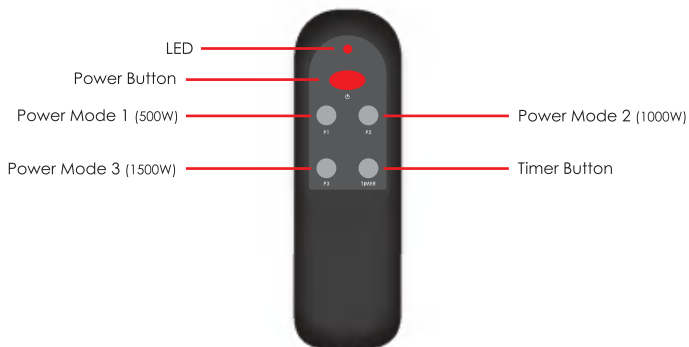 

USING PATIOBOSS ELECTRIC OUTDOOR HEATER



READ ALL IMPORTANT INSTRUCTIONS (PAGE 5) BEFORE USING YOUR PATIOBOSS ELECTRIC OUTDOOR HEATER

Power

PATIOBOSS electric outdoor heater starts in Standby Mode when first turned on. The unit has power but is not actively heating.



To turn the unit on, toggle the Power Switch to " - ".

Modes

Changing the Power Mode increases the Heat Output.

P1 is the Lowest Heat Output Mode and P3 is the Maximum Heat Output Mode.

P1 Press the Mode Button once to change to Power Mode 1 (500W).

P2 Press the Mode Button again to change to Power Mode 2 (1000W).

P3 Press the Mode Button a third time to change to Power Mode 3 (1500W).

Pressing the Mode Button once more puts the unit in Standby Mode again.

Timer

While the unit is active, a timer can be set to turn the unit OFF after a desired amount of hours.

Press the Timer Button to change the amount of hours before the unit will shut off. The time will increase in 1 Hour Increments, up to 24 Hours.

MAINTENANCE AND CLEANING

Maintenance:

 
Attention! Careful and regular maintenance of infrared Heater is required to attain a long and efficient operation of your appliance.

- 1-Check the cleanliness of the reflector and IR-filament at least once a month. If necessary, apply cleaning and maintenance instructions.
- 2-The number of checks may be increased considering the amount of the dust in the environment.
- 3-Check the deformation of the reflector, wire and frame visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 4-Check the power cable and plug visually while cleaning the appliance. In case of any deformation, consult a qualified technician.
- 5-It is recommended to change the reflector every 2 years for more efficient operation.

Cleaning:

Attention! Regular and careful cleaning helps your heater operate for longer years and more efficiently.

- 1-Unplug your power cable for your safety before cleaning your appliance.
- 2-Take out the front grid wire through the inlets on the frame using a slotted screwdriver.
- 3-Make sure that the power is off for your safety. Power cable plug must be unplugged.
- 4-The reflector and filament must be cleaned with a soft cloth, a smooth brush or cool or dry air. The cloth may be damp but never too wet and the cleaner should not include any chemical.
- 5-Refrain from using cleaning material likely to damage the reflector (cleanser etc.).
- 6-Insert the wire grid using a slotted screwdriver.

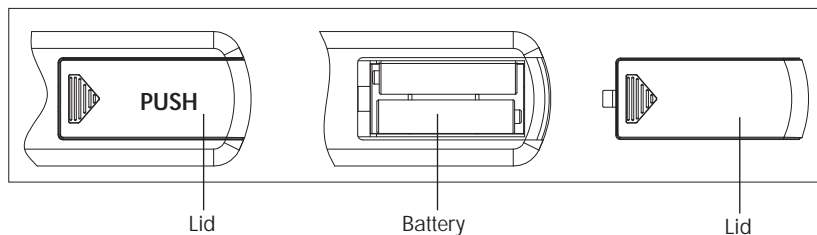

Storage

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.



This symbol on the product or its packaging indicates that the appliance cannot be treated as normal domestic trash, but must be handed in at a collection point for recycling electric and electronic appliances.

Your contribution to the correct disposal to the product protects the environment and the health of your fellow men. Health and the environment are endangered by incorrect disposal. Further information about recycling of this product can be obtained from your local town hall, your refuse collection service, or in the store at which you bought the product.

PATIO BOSS

E-mail: service@apatioboss.com