


**OPERATING MANUAL  
ORBITAL SANDER**

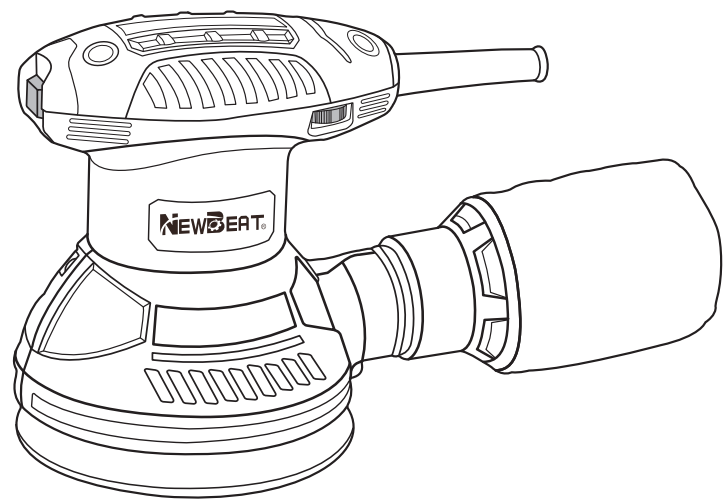

**NBT-OS-125**

**SPECIFICATIONS**

|                 |              |
|-----------------|--------------|
| Rated Voltage   | 220-240V     |
| Rated Frequency | 50/60Hz      |
| Rated Power     | 320W         |
| No-load Speed   | 0-12000r/min |
| Pad Size        | 125x125mm    |

MADE IN CHINA



Read through carefully and understand these instructions before use.

ORBITAL SANDER

**SAFETY INSTRUCTIONS**

**▲ WARNING!**

Read all instructions Failure to follow all in structions listed below may result in electric shock, fire and/or serious injury. The term "power tool" in all of the warnings listed below refers to your mains-operated (corded) power tool.

**•WORK AREA**

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.Distractions can cause you to lose control.

**•ELECTRICAL SAFETY**

- Power tool plugs must match the outlet.Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators.There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying,pulling or unplugging the power tool. Keep cord away from heat, oil, sharp

1

**WARRANTY POLICY**

CONGRATULATIONS for becoming a proud owner of NEWBEAT power tool(s). It is warranted to be free of defects from workmanship and materials for the period of SIX MONTHS from the date of original purchase.  
This warranty covers the normal operation of the products and excludes damage caused by:  
A) Accident, negligence, abuse and improper use;  
B) fire, flood and natural calamities;  
C) unauthorized repairs and alterations;  
D) wrong voltage/held voltage fluctuation;  
E) entry into machine of water, slurry, dust, etc.;  
F) normal wear and tear;  
G) seal, carbon brush and other spare parts that easy to be worn and broken;  
H) rough transportation after sale;  
I) improper or lack of maintenance as indicated in the Operation Instructions;  
J) not using our company original spare parts & accessories as stipulated.  
WARRANTY STRICTLY FOR WORKMANSHIP AND MATERIAL ONLY.  
To ensure the effectiveness of this warranty, the following particulars must be entered on the Warranty Card on the date of purchase. Dealer's stamp, the date of purchase, the particular of buyer.  
PLEASE KEEP THIS WARRANTY CARD SAFE WITH YOU. WARRANTY WILL NOT BE PROVIDED WITHOUT THIS WARRANTY CARD. This warranty is neither Assignable nor Transferable. Should any trouble develop during this six months period, return the COMPLETE tool, together with the warranty card and purchase bill of the related machine, to where it was bought for repair.  
Note: The contents of this warranty card may be changed without prior notice and we reserves the authority for final interpretation.

**WARRANTY CARD**



MADE IN CHINA

USER MANUAL

edges or moving parts.Damaged or entangled cords increase the risk of electric shock.  
e) When operating a power tool outdoors,use an extension cord suitable for outdoor use.Use of a cord suitable for outdoor use reduces the risk of electric shock.

**•PERSONAL SAFETY**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating powertools may result in serious personal injury.
- Use safety equipment. Always wear eye protection.Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in.Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on.A wrench or a key to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times.This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair,clothing and gloves away from moving parts.Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction

2

ORBITAL SANDER

and collection facilities, ensure these are connected and properly used. Use of these devices can reduce dust related hazards.

**•POWER TOOL USE AND CARE**

- Do not force the power tool. Use the correct power tool for your application.The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off.Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts,breakage of parts and any other condition that may affect the power tools operation.If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean.Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc., in accordance with these instructions and in the manner intended forthe particular type of power tool, taking into account the working conditions and the work to be performed.

3

Return receipt

**WARRANTY CARD**

DEALER'S NAME AND ADDRESS: \_\_\_\_\_

Please fill all the details and return the warranty registration card within 7 days from the date of purchase to the Dealer's address mentioned above. Unregistered warranty card is not applicable for any warranty service.

MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

NAME: \_\_\_\_\_ DATE OF PURCHASE: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

Customer copy

**WARRANTY CARD**

MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_

DEALER'S STAMP & SIGNATURE: \_\_\_\_\_