

24 INCH DRUM FAN
— FQT-60A —
PRODUCT USE GUIDE

INTRODUCTION

Thank you for choosing our fan.
This owner's manual will provide you with valuable
information necessary for the proper care and
maintenance of your new product.
Please take a few minutes to read it.

TABLE OF CONTENTS

SECTION 1	
IMPORTANT INSTRUCTIONS	PAGES 3-4
SECTION 2	
TECHNICAL PARAMETERS	PAGES 4
PRODUCT DIAGRAM	PAGES 4
PACKAGE INCLUDES	PAGES 5
SECTION 3	
ASSEMBLY INSTRUCTIONS	PAGES 5-7
OPERATION INSTRUCTIONS	PAGES 8
SECTION 4	
STORAGE MAINTENANCE GUIDELINES	PAGES 8

IMPORTANT INSTRUCTIONS

 
PLEASE READ CAREFULLY-ALWAYS MANTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE.

1. Check that the mains voltage corresponds with the rating of the appliance before operating.
2. To protect against electric shock. Do not immerse cords plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts.
6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
10. To disconnect- remove the plug from the outlet. Do not pull the plug out by the cord.
11. Do not use this product for anything other than its intended use. This appliance is for household use only.
12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
13. Do not use the appliance without the protective grille.
14. Do not attempt to force the grille to make the fan turn or stop.
15. Never put objects into the grille when the appliance is connected to the mains.
16. It is not advisable to expose people (esp. Babies or other people) to a continuous cold air stream for a long time.

TECHNICAL PARAMETERS

Model No.	FQT-60A
Item Name	DRUM FAN
Rated Voltage	120V (60Hz)
Rated Power	320W
3 Mode Fan Speeds	Low / Medium / High
Max Oscillation	360 Degrees
Fan Blade Diameter	24 inch
Package Size	27.2"x8.07"x7.0 inch

PRODUCT DIAGRAM

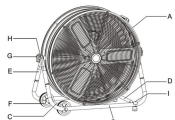

A — Product Body*1	D — Fixed Crossbeam*1	G — Plum Knob*2
B — U-shaped Rod*2	E — Support Frame*4	H — Silicone Gasket*2
C — Wheel Crossbeam*1	F — Wheel*2	I — Crossbeam Screw*2

 
Note: For the convenience of transportation, two sets of plum knobs and silicone gaskets will be locked on the main body of the product. Please dismantle in advance when assembling the product.

PACKAGE INCLUDE




ASSEMBLY INSTRUCTIONS

Step 1: Rotate and remove the two plum knobs and silicone gasket on the product.



 
Step 2: Install the two support frames as the figure shows. Repeat once, and install the other side.

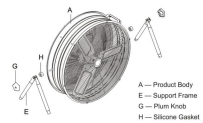


Step 3: Rotate and remove the screws and gasket on the left and right sides of the wheel crossbeam.



 Step 4: Install the two U-shaped rods and wheels as the figure shows.




 Step 5: Fasten the fixed crossbeam with screws.



Step 6: Remove the four screws on the support frames, put the support frames on the U-shaped rods, and lock it with the screws.

 
NOTE: If the angle of the support frame is not enough, loosen the plum knob to adjust.

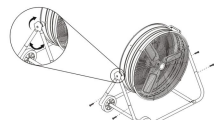

OPERATION INSTRUCTIONS

1. Plug the power cord into 120V the volt AC wall outlet.
2. You can turn the switch to 1, 2, or 3 to select low / medium / high speed (Figure A).
3. You can loosen the plum knobs and adjust the vertical oscillation of the fan, max 360 degrees (Figure B).

 NOTE: After the product body angle is adjusted to 180°, the handle will rotate to the bottom of the fan. If you want to use the handle, please adjust it by another 180°.

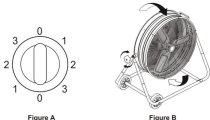

STORAGE & MAINTENANCE GUIDELINES

1. Turn the control OFF and unplug the fan before cleaning.
2. Use only a soft damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the Motor Housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blade, remove the front grille and wipe the blade and grille.
6. Store the fan in its original box or cover the fan to protect it from dust.
7. Store it in a cool and dry place.