



Operation and Maintenance Manual

# 120R Rocking Piston Oil-less Pumps



A UNIT OF IDEX CORPORATION

Dear Customer:

Thank you for purchasing this Gast product. It is manufactured to the highest standards using quality materials. Please follow all recommended maintenance, operational, and safety instructions and you will receive years of trouble free service.

**! WARNING**



PLEASE READ THIS MANUAL COMPLETELY BEFORE INSTALLING AND USING THIS PRODUCT.  
SAVE THIS MANUAL FOR FUTURE REFERENCE AND KEEP IN THE VICINITY OF THE PRODUCT.

**TABLE OF CONTENTS**

Product Use, Criteria, and Purpose .....	3
Mounting .....	4
Plumbing .....	4
Accessories .....	4
Motor Control .....	4
Electrical Connection .....	4
Extension Cords .....	4
Operation .....	5
Start Up .....	5
Maintenance .....	6
Shut Down Procedures .....	6
Service Kit Installation .....	6
Parts and Ordering Information .....	8
Troubleshooting Chart .....	9
Warranty Policy .....	10

## PRODUCT USE CRITERIA, AND PURPOSE

- Pump only clean, dry air.
- Operate at 32°F to 104°F [0°C to 40°C].
- Protect unit from dirt and moisture.
- Do not pump flammable or explosive gases or use in an atmosphere that contains such gases.
- Protect all surrounding items from exhaust air. This exhaust air can become very hot.
- Corrosive gases and particulate material will damage unit. Water vapor, oil-based contaminants, or other liquids must be filtered out.
- Consult your Gast Distributor/Representative before using at high altitudes.
- This pump is oil-less and requires NO lubrication.
- Pump surfaces can become hot during operation. Do not touch.

Your safety and the safety of others is extremely important.

We have provided many important safety messages in this manual and on your product. Always read and obey safety messages.



This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. The safety alert symbol and the words “DANGER” and “WARNING” will precede all safety messages. These words mean:

### DANGER

You **will** be killed or seriously injured if you don't follow instructions.


### WARNING

You **can** be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the safety instructions are not followed.

## INSTALLATION

### WARNING

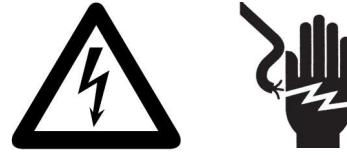

#### Electrical Shock Hazard

**Disconnect electrical power at the circuit breaker or fuse box before installing this product.**

**Install this product where it will not encounter water or other liquids.**

**Install this product where it will be weather protected.**


**Electrically ground this product.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

**Correct installation is your responsibility.** Make sure you have the proper installation conditions and that installation clearances do not block air flow.

### WARNING

**Blocking air flow over the product in any way can cause the product to overheat.**

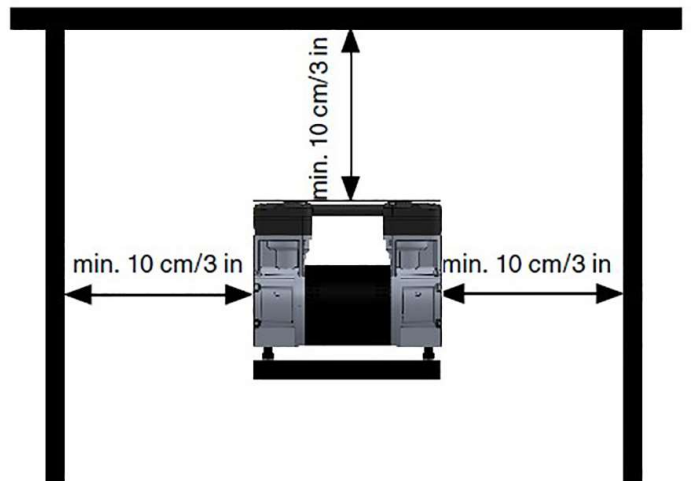

## MOUNTING

This product can be installed on a horizontal surface. Mounting the product to a stable, rigid operating surface and using supplied shock mounts will reduce noise and vibration. This product is provided with vibration mounts and adjustable mounting foot. To adjust mounting pattern, loosen vibration mounts to and slide mounting bracket to desired location. Secure vibration mounts to body and mounting bracket before attaching pump to application.

*Optional mounting orientation is available. Consult Factory or Distributor for details.*

## PLUMBING

Remove plugs from the IN and OUT ports. Connect with pipe and fittings that are the same size or larger than the product's threaded ports. Be sure to connect the intake and exhaust plumbing to the correct inlet and outlet ports. Ports will not support plumbing.

## ACCESSORIES

The product's external intake and exhaust muffler will provide adequate filtration in most applications. Check filters periodically and replace when necessary. Consult your Gast Distributor/ Representative for additional filter recommendations.


Install relief valves and gauges at inlet or outlet or both, to monitor performance. Check valves may be required to prevent back streaming through the pump.


## MOTOR CONTROL

**It is your responsibility to contact a qualified electrician and assure that the electrical installation is adequate and in conformance with all national and local codes and ordinances. The metal capacitor must be grounded.**

Determine the correct overload setting required to protect the motor (see motor starter manufacturer's recommendations). Select fuses, motor protective switches or thermal protective switches to provide protection. Fuses act as short circuit protection for the motor, not as protection against overload. Incoming line fuses must be able to withstand the motor's starting current. Motor starters with thermal magnetic overload or circuit breakers protect motor from overload or reduced voltage conditions.

The wiring diagram supplied with the product provides required electrical information. Check that power source is correct to properly operate the dual-voltage motors.


**WARNING**



**Electrical Shock Hazard**

**This product must be properly grounded.**


**Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.**

**If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation that is green or green with yellow stripes is the grounding wire.**

**Check the condition of the power supply wiring.**

**Do not permanently connect this product to wiring that is not in good condition or is inadequate for the requirements of this product.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

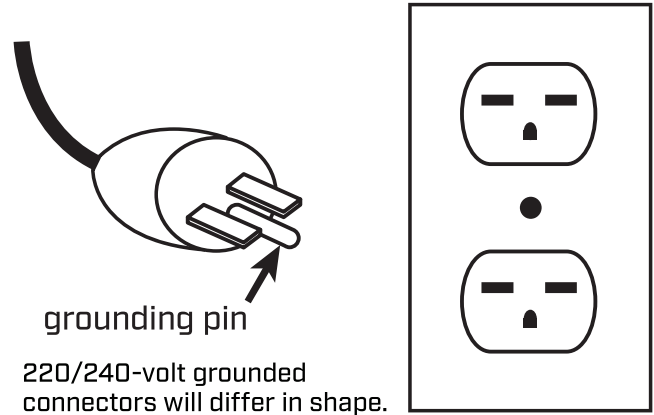

### Model with a Power Supply Cord

This product must be grounded. For 220/240-volt circuits connect power supply cord grounding plug to a matching grounded outlet. Do not use an adapter. (See above diagram.)

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product may be equipped with a power supply cord having a grounding wire with an appropriate grounding plug.

The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances

**Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are not sure whether the product is properly grounded. Do not modify the plug provided. If it will not fit the outlet, have the proper outlet installed by a qualified electrician.**

### Model that is Permanently Wired

This product must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding terminal or lead on the product.

Power supply wiring must conform to all required safety codes and be installed by a qualified person. Check that supply voltage agrees with that listed on product nameplate.

### Extension Cords

Use only a 3-wire extension cord that has a 3-blade grounding plug. Connect extension cord plug to a matching 3-slot receptacle. Do not use an adapter. Make sure your extension cord is in good condition. Check that the gage wire of the extension cord is the correct size wire to carry the current this product will draw.

An undersized cord is a potential fire hazard and will cause a drop in line voltage resulting in loss of power causing the product to overheat. The following table indicates the correct size cord for length required and the ampere rating listed on the product nameplate. **If in doubt, use the next heavier gage cord. The smaller the gage number, the heavier the wire gage.**

### Minimum gage for extension cords

Amps	Volts	Length of cord in feet									
		240v	50	100	200	300	400	500	600	800	1000
0-2		18	18	18	16	16	14	14	12	12	
2-3		18	18	16	14	14	12	12	10	10	
3-4		18	18	16	14	12	12	10	10	8	
4-5		18	18	14	12	12	10	10	8	8	
5-6		18	16	14	12	10	10	8	8	8	
6-8		18	16	12	10	10	8	6	6	6	
8-10		18	14	12	10	8	8	6	6	4	
10-12		16	14	10	8	8	6	6	4	4	
12-14		16	12	10	8	6	6	6	4	2	
14-16		16	12	10	8	6	6	4	4	2	
16-18		14	12	8	8	6	4	4	2	2	
18-20		14	12	8	6	6	4	4	2	2	

## OPERATION

### **WARNING**

#### **Injury Hazard**

**Install proper safety guards as needed.**

**Keep fingers and objects away from openings and rotating parts.**

**When provided, motor terminal covers must be in place for safe operation.**

**Product surfaces become very hot during operation, allow product surfaces to cool before handling.**

**Air stream from the product may contain solid or liquid material that can result in eye or skin damage, wear proper eye protection.**

**Wear hearing protection. Sound level from motor may exceed 70 dBA.**


**Failure to follow these instructions can result in burns, eye injury, or other serious injury.**


It is your responsibility to operate this product at recommended pressures or vacuum duties and room ambient temperatures. **Do not start against a vacuum or pressure load.**

### Start Up

If motor fails to start or slows down significantly under load, shut off and disconnect from power supply. Check that the voltage is correct for motor and that motor is turning in the proper direction. Check the plug, cord and switch for damage. If so equipped, the thermal protection switch has tripped, the motor can restart after cooling.

## MAINTENANCE


**WARNING**

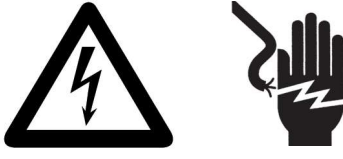


 
**Electrical Shock Hazard**

**Disconnect electrical power supply before performing maintenance on this product.**

**If product is hard-wired into system, disconnect electrical power at the circuit breaker or fuse box before performing maintenance on this product.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**


**WARNING**



**Injury Hazard**

**Product surfaces become very hot during operation, allow product surfaces to cool before handling.**

**Air stream from the product may contain solid or liquid material that can result in eye or skin damage, wear proper eye protection.**

**Clean this product in a well-ventilated area.**

**Failure to follow these instructions can result in burns, eye injury, or other serious injury.**

**It is your responsibility to:**

- **Regularly inspect and make necessary repairs to product in order to maintain proper operation.**
- **Make sure that pressure is released from product before starting maintenance.**

Check intake and exhaust filters after first 500 hours of operation. Clean filters and determine how frequently filters should be checked during future operation. This one procedure will help to assure the product's performance and service life.

1. Disconnect electrical power supply to unit.
2. Vent all air lines.
3. Remove filter cover.
4. Check filter element. Replace filter if element is covered with contamination or shows signs of increasing differential pressure.
5. Reinstall filter element and filter cover.

Check that all external accessories such as relief valves and gauges are attached to cover and are not damaged before re-operating product.


## SHUT DOWN


**It is your responsibility to follow proper shutdown procedures to prevent product damage. NEVER ADD OIL TO THIS OIL-LESS PUMP.**

Proper shutdown procedures must be followed to prevent pump damage. Failure to do so may result in premature pump failure. Gast Manufacturing Rocking Piston Oil-Less Pumps are constructed of ferrous metals or aluminum which are subject to rust and corrosion when pumping condensable vapors such as water. Follow the steps below to assure correct storage and shutdown between operating periods.

1. Disconnect plumbing.
2. Operate product for at least five minutes without plumbing.
3. Run at maximum vacuum for 10 to 15 minutes.
4. Repeat step 2.
5. Disconnect power supply.
6. Plug open ports to prevent dirt or other contaminants from entering product.

## SERVICE KIT INSTALLATION


**WARNING**



**Electrical Shock Hazard**

**Disconnect electrical power supply before performing maintenance on this product.**

**If product is hard-wired into system, disconnect electrical power at the circuit breaker or fuse box before performing maintenance on this product.**

**Vent all air lines to release pressure or vacuum.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

**Gast will NOT guarantee field-rebuilt product performance. For performance guarantee, the product must be returned to a Gast Authorized Service Facility.**

Gast offers the following Service Kits for the 120R pump.

Description	Kit Number	Service Interval
120R Preventative Maintenance Kit	K1027	1000 hours or one year
120R Service Kit	K1028	2500 Run Hours
120R Capacitor Replacement Kit	K1029	Five years
120R Capacitor Cover	K1030	As needed
120R Spare Parts Kits	K1031	As needed
120R Side Mount Bracket Kit	K1032	As needed
Reducing Bushing 3/8 to 1/4	UK6502	As needed
120R Sound Shield Service Kit	K1056	2500 Run Hours
120R Sound Shield Preventative Maintenance Kit	K1058	1000 hours or one year


1. Disconnect electrical power to pump.
2. Disconnect air supply and vent all air lines to release pressure or vacuum.
3. Consult individual kit instruction to install components

**Check that all external accessories such as relief valves and gauges are not damaged before operating product.**

If pump still does not produce proper vacuum or pressure, send unit to a Gast Authorized Service Facility for repair.

# EXPLODED PRODUCT VIEW

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	N800NX	MOTOR	1
	STATOR (N800NX)		1
	ROTOR (N800NX)		1
2	APR08B	BODY (LARGE BRG. THRU)	4
3	APR08A	BODY (SMALL BRG. TAPPED)	2
4	BRG1501	BRG 6006 FCST	2
5	VPA1500	VALVE PLATE ASSEMBLY	1
	VPL1500	VALVE PLATE	1
	5485150	VALVE VALVE	2
	4392145	PHCS M5 X 0.8 X 8.0 TORX TAPITTE	2
	VRF1500	VALVE RETAINER	1
	5485152	LIMITER	1
6	VPA1501	VALVE PLATE ASSEMBLY	1
	VPL1500	VALVE PLATE	1
	5485150	VALVE VALVE	2
	4392145	PHCS M5 X 0.8 X 8.0 TORX TAPITTE	2
	VRF1500	VALVE RETAINER	1
	5485152	LIMITER	1
7	BC1104	HEX NUT - 1/4-20	4
8	FAC1500	FAN COVER	2
9	SCR1500	SHCS. #10-32 X 2 3/4" LONG	8
10	ORC1500	O-RING	2
11	HDC1500	HEAD	1
12	FMB1500	FOOT MOUNTING BRACKET	2
13	A1825	SHOCK MOUNT (M6 X 1/4-20)	4
14	BB448	HHCS. 1/4-20 X 3/8" LONG	4
15	BA504	PIPE PLUG. 3/8" NPT	2
16	CRA1500	CONNECTING ROD SUB-ASSEMBLY	2
	CNR1500G	CONNECTING ROD	1
	BRG1500	BRG 6006 FCST	1
	ECC1500G	ECCENTRIC	1
	6289560	CUP	1
	4392350	PHCS M8 X 1.25 X 35.0 UHFB TORX	1
	CRP1500	RETAINER PLATE	1
	CYL1500	CYLINDER. 80mm (3.15)	1
17	FAN1500	FAN B-LADE	1
18	FAN1501	FAN B-LADE	1
19	ORC1501	O-RING	2
20	FIL1500	FILTER	1

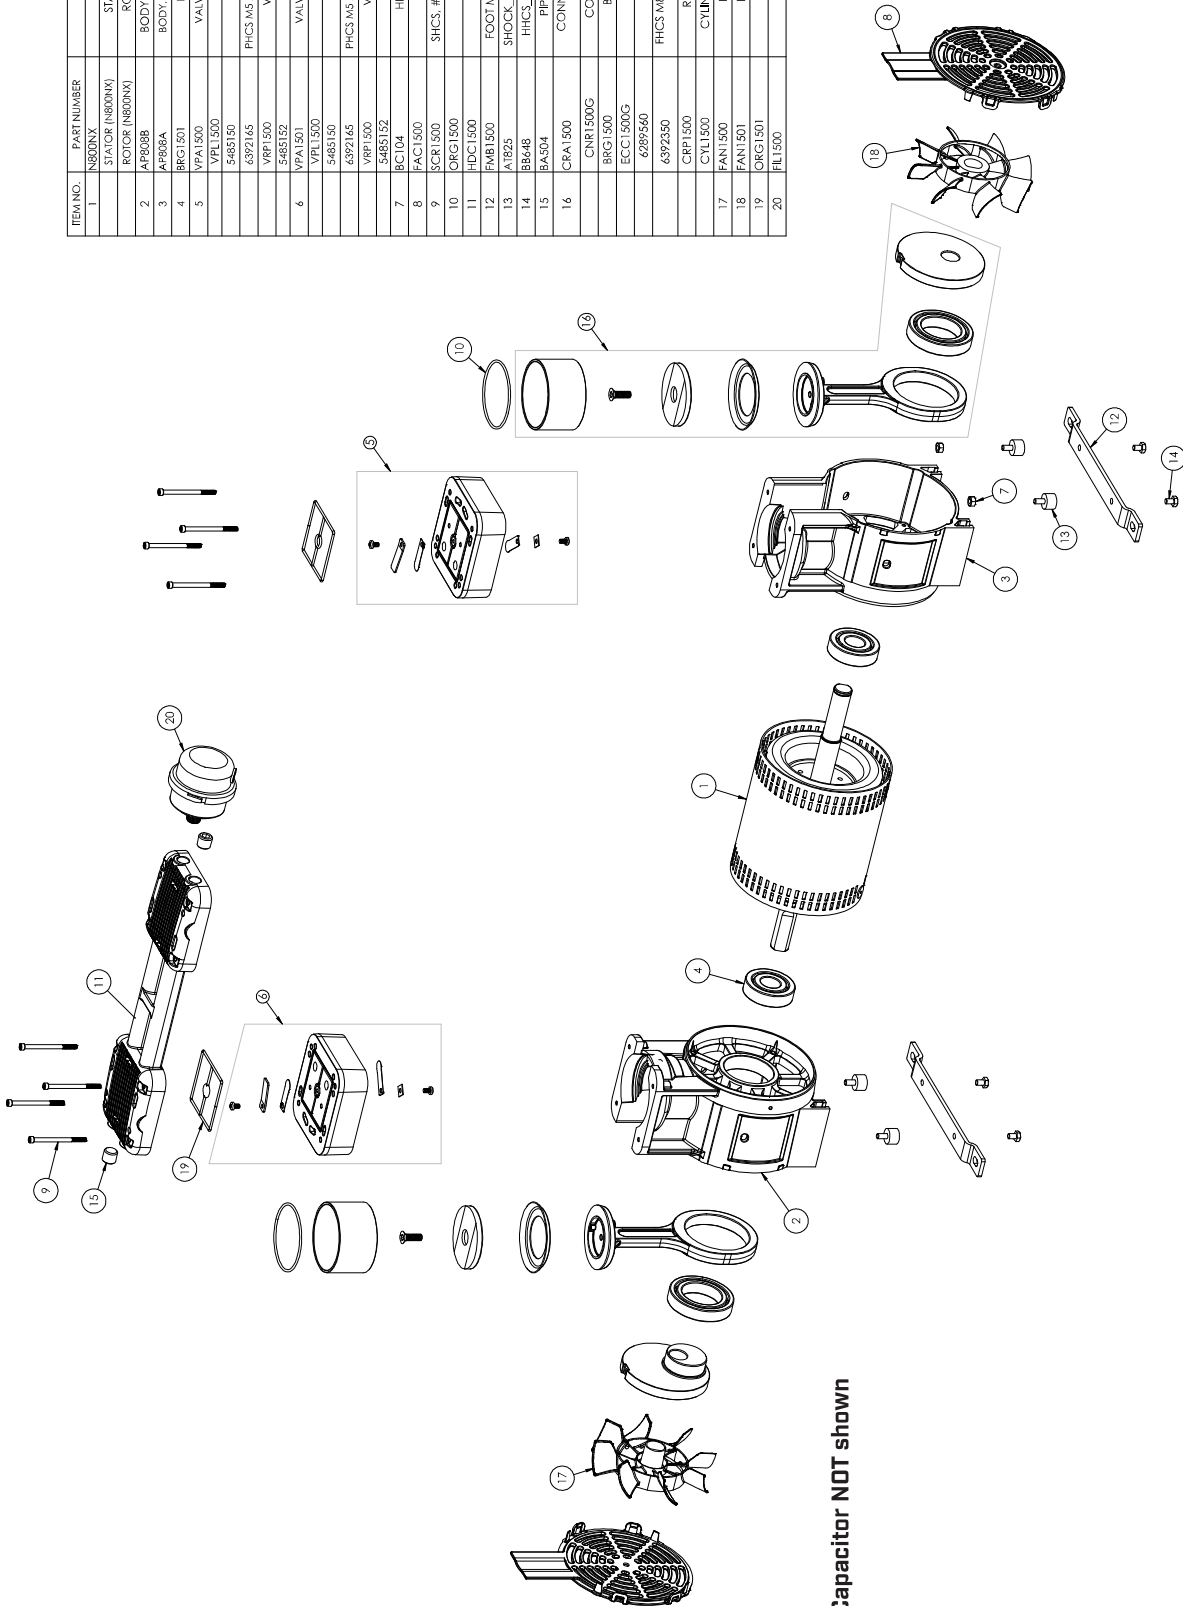

Capacitor NOT shown



## WARRANTY

Gast finished products, when properly installed and operated under normal conditions of use, are warranted by Gast to be free from defects in material and workmanship for a period of twelve (12) months from the date of purchase from Gast or an authorized Gast Representative or Distributor. In order to obtain performance under this warranty, the buyer must promptly (in no event later than thirty (30) days after discovery of the defect) give written notice of the defect to Gast Manufacturing Incorporated, PO Box 97, Benton Harbor Michigan USA 49023-0097 or an authorized Service Center (unless specifically agreed upon in writing signed by both parties or specified in writing as part of a Gast OEM Quotation). Buyer is responsible for freight charges both to and from Gast in all cases.

This warranty does not apply to electric motors, electrical controls, and gasoline engines not supplied by Gast. Gast's warranties also do not extend to any goods or parts which have been subjected to misuse, lack of maintenance, neglect, damage by accident or transit damage.

THIS EXPRESS WARRANTY EXCLUDES ALL OTHER WARRANTIES OR REPRESENTATIONS EXPRESSED OR IMPLIED BY ANY LITERATURE, DATA, OR PERSON. GAST'S MAXIMUM LIABILITY UNDER THIS EXCLUSIVE REMEDY SHALL NEVER EXCEED THE COST OF THE SUBJECT PRODUCT AND GAST RESERVES THE RIGHT, AT ITS SOLE DISCRETION, TO REFUND THE PURCHASE PRICE IN LIEU OF REPAIR OR REPLACEMENT.

GAST WILL NOT BE RESPONSIBLE OR LIABLE FOR INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, however arising, including but not limited to those for use of any products, loss of time, inconvenience, lost profit, labor charges, or other incidental or consequential damages with respect to persons, business, or property, whether as a result of breach of warranty, negligence or otherwise. Notwithstanding any other provision of this warranty, BUYER'S REMEDY AGAINST GAST FOR GOODS SUPPLIED OR FOR NON-DELIVERED GOODS OR FAILURE TO FURNISH GOODS, WHETHER OR NOT BASED ON NEGLIGENCE, STRICT LIABILITY OR BREACH OF EXPRESS OR IMPLIED WARRANTY IS LIMITED SOLELY, AT GAST'S OPTION, TO REPLACEMENT OF OR CURE OF SUCH NONCONFORMING OR NON-DELIVERED GOODS OR RETURN OF THE PURCHASE PRICE FOR SUCH GOODS AND IN NO EVENTS SHALL EXCEED THE PRICE OR CHARGE FOR SUCH GOODS. GAST EXPRESSLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE WITH RESPECT TO THE GOODS SOLD. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTIONS SET FORTH IN THIS WARRANTY, notwithstanding any knowledge of Gast regarding the use or uses intended to be made of goods, proposed changes or additions to goods, or any assistance or suggestions that may have been made by Gast personnel.

Unauthorized extensions of warranties by the customer shall remain the customer's responsibility.

CUSTOMER IS RESPONSIBLE FOR DETERMINING THE SUITABILITY OF GAST PRODUCTS FOR CUSTOMER'S USE OR RESALE, OR FOR INCORPORATING THEM INTO OBJECTS OR APPLICATIONS WHICH CUSTOMER DESIGNS, ASSEMBLES, CONSTRUCTS OR MANUFACTURES.

This warranty can be modified only by authorized Gast personnel by signing a specific, written description of any modifications.

### **Gast Manufacturing**

2300 M-139 Highway  
Benton Harbor, MI 49023  
Ph: 269-926-6171  
Fax: 269-927-0808  
www.gastmfg.com

### **Gast Group Limited**

**c/o IDEX Trading (Shanghai) Co., LTD**  
Room 3502-3505  
No. 1027 Chang Ning Road,  
Zhaofeng Plaza  
Shanghai, China 200050  
Phone +86-21-52415599  
Fax +86-21-52418339

### **Gast Group Ltd.**

Unit 11, The I O Centre  
Nash Road  
Redditch, B98 7AS  
United Kingdom  
Phone +44 (0)1527-504040  
Fax +44 (0)1527-525262



A UNIT OF IDEX CORPORATION