




I C E B O X

MINI FRIDGE COOLER/WARMER

INSTRUCTION MANUAL

CATALOG NUMBER

 IBMF4

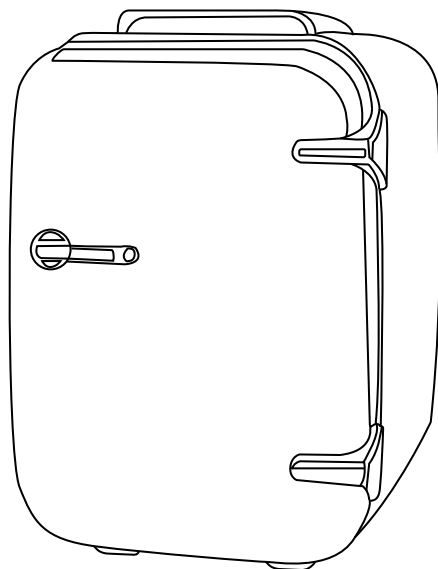

PRODUCT REGISTRATION

Thank you for purchasing our **ICEBOX** product. This easy-to-use manual will guide you in getting the best use of your Mini Fridge.

Remember to record the model and serial numbers. They are on a label on the back of the product.

Staple your receipt to your manual.
You will need it to obtain warranty service.

Model number

Serial number

Date of purchase

SAFETY INFORMATION



DANGER

DANGER - Immediate hazards which **WILL** result in severe personal injury or death



WARNING

WARNING - Hazards or unsafe practices which **COULD** result in severe personal injury or death



CAUTION

CAUTION - Hazards or unsafe practices which **COULD** result in minor personal injury

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances, basic safety precautions should be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE UNIT

1. Read all of the instructions before using this appliance.
2. This Mini Fridge must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
3. Never unplug the Mini Fridge by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
4. Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
5. Unplug the Mini Fridge before cleaning or before making any repairs.
NOTE: If for any reason this product requires service, we strongly recommend that a certified technician performs the service.
6. If the Mini Fridge is not being used, we recommend to remove the door and leave the shelves in place. This will reduce the possibility of danger to children.
7. This Mini Fridge should not be recessed or built-in an enclosed cabinet. It is designed for freestanding installation only.
8. Do not operate Mini Fridge in the presence of explosive fumes.
9. Do not store foods in Mini Fridge as interior temperature may not be cool enough to prevent spoilage.
10. This unit is intended for portable use only; it is not designed to be built-in or recessed — this would interfere with the unit's air dissipation system, and could cause a fire or other safety hazard.
11. Use only with the supplied power adapters. If the cord becomes worn or damaged, discontinue use.
12. Never allow the mini fridge to be immersed in water or other liquid. This will void the warranty.

 
 
 
SAFETY INFORMATION

13. To reduce the risk of damage to cigarette lighter connector and cord, pull by cigarette lighter rather than cord when disconnecting charger.
14. Make sure cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
15. Not operate charger if it has received the sharp blow been dropped or otherwise damaged in any way. Take it to a qualified service person.
16. Do not disassemble charger. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
17. To reduce risk of electric shock, plug charger before attempting any maintenance or cleaning turning off controls will not reduce this risk.

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

SET UP & USE

PARTS & FEATURES

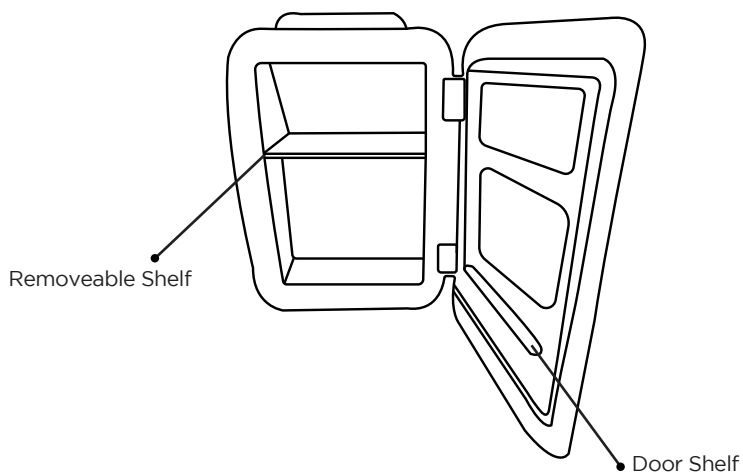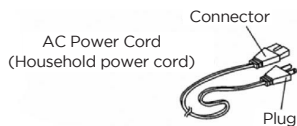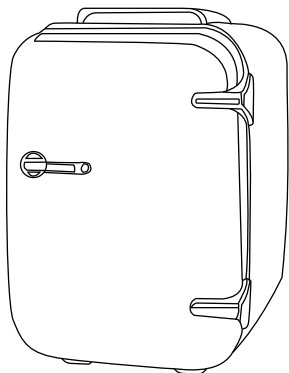


SAFETY INFORMATION

ELECTRICAL REQUIREMENTS

AC Power cord



 DC 12V car adapter

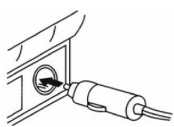

AC Power cord

The Mini Fridge comes with a detachable non-polarized plug for Household Use (AC 120V).

Avoid the use of an extension cord because of potential safety hazards under certain conditions. Have a qualified electrician or serviceman to install an outlet near the appliance.

DC 12V car adapter

 
The Mini Fridge comes with a DC power cord to use the car engine as a power source.

Do not attempt to modify the plug or adapter in any way.

SAFETY INFORMATION

OPERATING INSTRUCTIONS

Operating Panel

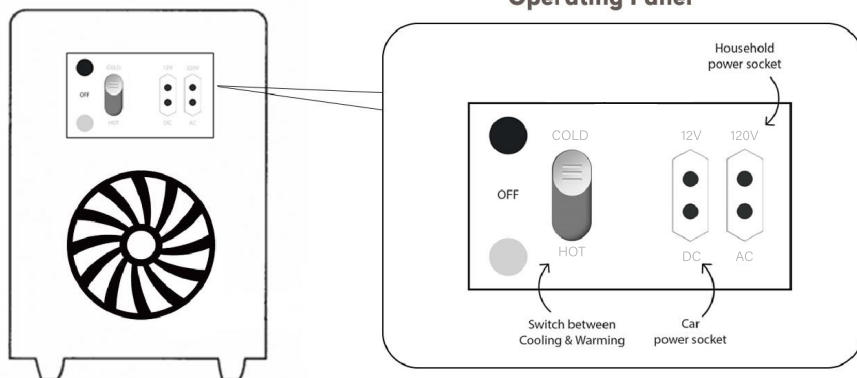

The unit must be properly assembled in accordance with assembly instructions before it is used. Make sure the switch on the back of the unit is in the OFF position prior to making the connections.

Connect the cord to the Mini Fridge

For home use, connect the AC power cord to the port in the back of the unit labeled 120V. Plug the other end into a wall outlet.

If you are using the DC 12V car adapter, connect it to the port in the back of the unit labeled 12V. Plug the other end in the car cigarette lighter socket.

It is suggested to start the car before connecting the Mini Fridge in order to make sure the car battery is charged.

NOTE: It is recommended to keep the mini fridge plugged in while driving in order to maintain cooling or heating.

The mini fridge will operate from the car battery when the car is not running but it is not recommended to do this for an extended period of time. This could drain the car battery.

If your car doesn't have a feature to automatically cut off power to the cigarette lighter when the battery is low, monitor the car battery.

Turn on the Mini Fridge by moving the switch on the back of the unit to either the COLD or HOT position. The corresponding indicator light will illuminate.

The power switch should be but in the OFF position for a minimum of 5 minutes before changing the cooling or warming operating mode.

NOTE: The unit should be operated in a well-ventilated area. Since the cooling performance is dependent on the ambient temperature, operating in warm environments may not yield satisfactory cooling results.

Make sure the switch is in the OFF position before disconnecting from power supply.

CLEANING AND CARE

CLEANING AND MAINTENANCE

 **WARNING:** Be sure to disconnect from the power supply before cleaning.

 **CAUTION:** Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

- General:**
- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution to wipe down your Mini Fridge.
 - Keep cords and cigarette lighter sockets clean at all times. Small tobacco or dirt particles in the socket or the plug may affect performance.
 - The motor fan and control panel vent should be cleaned periodically. While the unit is unplugged, clean around the vents using a soft bristle brush remove all hair dirt or dust that may have accumulated.
 - Rinse with clean warm water and dry with a soft cloth.
 - Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrate detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and / or discolor your Mini Fridge.

TROUBLESHOOTING & WARRANTY

BEFORE YOU CALL FOR SERVICE

IF THE UNIT FAILS TO OPERATE:

- A) For home use, check to make sure the AC power cord is securely connected to the port in the back of the unit labeled 120V. Make sure the other end is plugged into a wall outlet. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- B) If using the DC 12V car adapter, check to make sure it is securely connected to the port in the back of the unit labeled 12V. Make sure the other end is plugged in the car cigarette lighter socket.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE MINI COOLER YOURSELF

IMPORTANT

DO NOT RETURN THIS PRODUCT TO THE STORE

If you have a problem with this product, please contact the W Appliance Co. Customer Satisfaction Center at 855-855-0294.

**DATED PROOF OF PURCHASE, MODEL # AND SERIAL #
REQUIRED FOR WARRANTY SERVICE**

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the unit still does not work properly, W Appliance Co. contact customer service center or the nearest authorized service center. Customer must never troubleshoot internal components.

TROUBLESHOOTING & WARRANTY

SYMPTOMS	POSSIBLE CAUSE	SOLUTIONS
The Mini Fridge does not work.	The Mini Fridge is not properly connected to a power source. If plugged into a wall outlet there could be a power failure or a circuit breaker was activated.	Make sure the Mini Fridge is properly connected to the power source. and the unit is set to either the Cold or Hot setting in the back of the unit. Make sure there is power coming from the outlet by plugging in another appliance. Check the circuit breaker and reset if necessary.
Mini Fridge is not reaching the desired temperature	The Mini Fridge is placed too close to a heat source. The door is opened too frequently or for a long period of time.	Keep the Mini Fridge away from sunshine or other heat sources. The temperature of the Mini Fridge set to COLD is approximately 16 - 20 degrees Fahrenheit, lower than the ambient or room temperature. Close the door tightly and do not open the door too frequently or for a long period of time.
Condensation forming in the Mini Fridge	This is likely from the contents of the stored items.	This is normal, dry the inside with a soft cloth.

LIMITED WARRANTY

LIMITED WARRANTY

Any repair, replacement, or warranty service, and all questions about this product should be directed to W Appliance Co at **855-855-0294** from the USA or Puerto Rico.

W Appliance Co warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of **1 year (12 months) for labor/1 year (12 months) for parts (manufacturing defects only)**. W Appliance Co agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period.

Exclusions: This warranty does not apply to the below:

1. If the appearance or exterior of the product has been damaged or defaced, altered or modified in design or construction.
2. If the product original serial number has been altered or removed or cannot be readily determined.
3. If there is damaged due to power line surge, user damage to the AC power cord or connection to improper voltage source.
4. If damage is due to general misuse, accidents or acts of God.
5. If repair attempts are done by unauthorized service agents, use of parts other than genuine parts or parts obtained from persons other than authorized service companies.
6. On units that have been transferred from the original owner.
7. On products that have been purchased as refurbished, like new, second-hand, in a "As-Is" or "Final Sale" terms.
8. To products used in a commercial or rental setting.
9. To products used in settings other than ordinary household use or used other than in accordance with the provided instructions.
10. To damages for service calls for improper installations.
11. Transportation and shipping costs associated with the replacement of the unit.
12. Service calls to instruct you how to use your product.
13. Service calls to repair or replace the house fuse, reset the circuit breaker or correct the wiring in the house.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; W Appliance Co. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Obtaining Service: To obtain service, product literature, supplies or accessories please call **855-855-0294** to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

W Appliance Co does not warrant that the appliance will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. W Appliance Co has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of W Appliance Co. W Appliance Co reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us at **855-855-0294**.

W Appliance Co.
1356 Broadway
New York, NY 10018

Imported by W Appliance, Inc., 1356 Broadway, New York, NY 10018