



KINGJOY
M080P

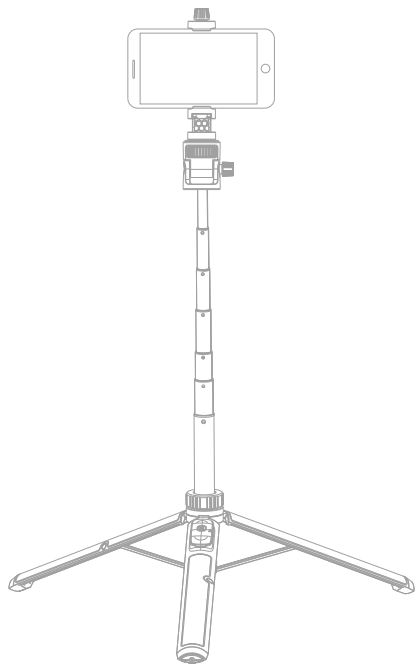


Please read the instructions carefully before use,
and keep them properly for future reference.


Product illustration

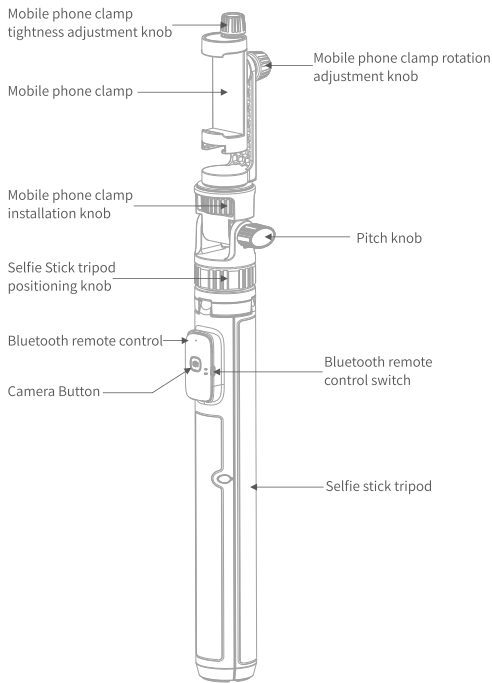

Manual Instruction

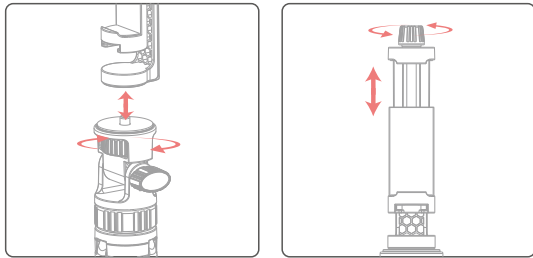


1. Connect the mobile phone clamp with the 1/4" screw hole on the selfie stick tripod, and secure it with the mobile phone clamp installation knob below.
2. Adjust the clamping to fix or release the phone by adjusting mobile phone clamp tightness adjustment knob.

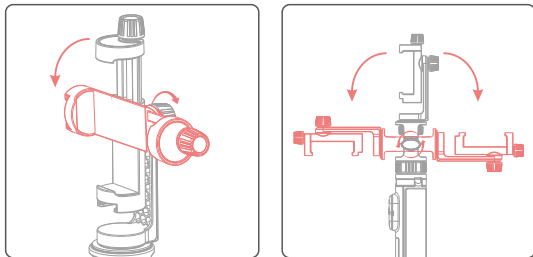

3. Release the mobile phone clamp rotation adjustment knob, which can switch the mobile phone clamp between horizontal and vertical shooting. Ensure to lock it after adjusting to the required angle.
4. Loosen the pitch knob to allow the device to shoot at a 180° pitch angle. Ensure to lock it after adjusting to the required angle.

Manual Instruction

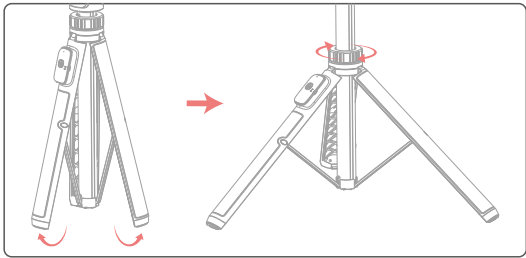

5. Extend the three support legs of the tripod from the bottom using your hands. Next, press the tripod down to the desired position. Secure it by rotating the positioning knob.

Bluetooth Remote Control



1. Push the switch to "ON" and press and hold the camera button for 3 seconds to turn it on. After powering on, the LED light starts flashing green.
2. Bluetooth pairing: Set the Bluetooth page on the mobile phone to search the device name "KINGJOY" for pairing. After successful matching, the LED light turns off.
3. Take photos: Short press the camera button to take photos by using paired device.
4. The Bluetooth remote control has a memory function and automatically matches the paired mobile phone when it is turned on.
5. Push the switch to "OFF" to turn it off

Guarantee

Thank you for purchasing KINGJOY ! To provide you perfect after-sales services, please read carefully and keep the card properly.KINGJOY products are warranted against defects in workmanship under normal use for a periodof one (1) year from the date of original purchase. Freight and other expenses for repair shall be borne by the buyer. Warranty card must fill in the product name, date of purchase, and stamped with the dealer seal. You must present this card when there is a warranty claim. Please keep this card, no supplement for any card lost.

User Name		Telephone	
Address			
Product Name		Product Model	
Purchasing Date		Model No	
Purchasing Address		Seller	
Dealer Signature		User Signature	

1. The warranty is only for the product body and the component is not covered by the warranty.
2. Not free for repair with the following circumstances, that needs to implement reasonable chargeto repair:
 - a. Warranty card is lost or exceeds the expiration date.
 - b. Damage or tampered by improper handling and used (such as broken, water, corrosion, etc.)
 - c. Self-demolition (repair) products, or unauthorized repair;
 - d. Due to floods, fires, earthquakes and other irresistible factors caused by failure or damage;
3. Limited warranty, for consequential and incidental damages is expressly disclaimed and shall notexceed the purchased price paid.
4. If unknown, please consult our company.

CERTIFICATE

This product is strictly inspected to meet the
standards and allowed to be sold.

Checker: _____

