

OPERATING INSTRUCTIONS

WARNING:

Make sure the plug fits tightly in the outlet. To prevent overloading, do not plug the fan into a circuit that is servicing other electrical needs.

Adjusting Fan Speed

1. Plug the fan into a properly grounded outlet.
2. Pull the chain down repeatedly to cycle through **Low** speed → **MED** speed → **HIGH** speed → fan **OFF**.

Adjusting Airflow Direction

1

Oscillation (Horizontal)
To activate oscillation mode, press the button on the motor until you hear a clear clicking sound. Pull up to stop oscillating.

2

Tilt Angle (Vertical)
Loosen the position screw, adjust to your desired angle and then re-tighten the screw.

CLEANING

WARNING: Unplug from electrical supply source before cleaning.

1. Use soft damp cloth then wipe with dry cloth.
2. Do not use harmful cleaners to paints or plastics.
3. Do not bend the blades.

RATING:

ILG8EOSC18: 120V~ 60Hz, 1.0A, 115W
ILG8EOSC20: 120V~ 60Hz, 1.0A, 120W

Warranty

This fan comes with a 1-YEAR LIMITED COMPONENT WARRANTY. If your unit does not appear to be working properly, please contact our service center by calling 1-800-317-1688. Prior to your call, we encourage you to visit our service-related website www.ilivingusa.com for troubleshooting tips and service instructions if needed

Warranty Information



Register your product at our website:
Or visit iLivingUSA.com/register-product

Feedback



Love it ? Help us make the product more for you.

Let us know with a customer review.
Please visit: <https://www.amazon.com/review/review-your-purchases#>

At iLiving USA, we are committed to bringing top quality products to our customers.

iLIVING USA
860 Mahler Road
Burlingame, CA 94010
Tel: 1-800-317-1688
Email: service@ilivingusa.com

Like us on Facebook: <https://www.facebook.com/ilivingusa/>


Follow us on Twitter: @iLIVINGUSA

Check out our website: www.ilivingusa.com



OUTDOOR OSCILLATING
WALL MOUNT FAN

MODELS:
ILG8EOSC18
ILG8EOSC20

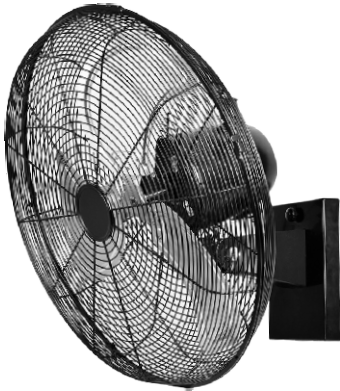

READ AND SAVE THESE INSTRUCTIONS

OWNER'S MANUAL

Please read the instructions carefully before use

2026.01

READ AND SAVE THESE INSTRUCTIONS

VERY IMPORTANT SAFETY INFORMATION:

- This fan is suitable for outdoor use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use an extension cord with this fan.
- To reduce the risk of injury to persons, install wall mounting fan at least 2.1m (7 feet) above the floor.

WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer).

CAUTION: To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting device.

DANGER: Do not submerge motor in water or allow motor to be exposed to water. Personal injury and/or death could result. Never handle the fan or motor with wet hands or when standing on wet or damp surface or in water. Fatal electrical shock could occur.

WARNING: Electric shock hazards—may cause severe personal injury or death. For your safety, turn off the electrical power supply before installing, moving, or servicing your fan to avoid any possible electrical shock hazards. Never make adjustments to the fan when in power is on.

WARNING:

Do not under any circumstances remove the power plug's ground prong or ground fault unit. For your personal safety, the fan must be grounded. The fan is equipped with a power supply with ground fault circuit interrupting device. Removal or tampering of power cord will void warranty. Never use an extension cord to connect the fan to an outlet. All installations must be made into a grounded outlet. UNPLUG THE FAN WHEN NOT IN USE.

WARNING: To reduce the risk of fire or electrical shock, do not use this fan with any solid state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

PACKAGE CONTENTS

Part	Description	Quantity
A	Front Grille	1
B	Rear Grille	1
C	Spanner	1
D	Fan Blade	1
E	Screw/Washer/Sealing washer (ST5x58)	1
F	Oscillation Knob	1
G	Fan Head	1
H	Fan Base	1
I	Wall Bracket	1
J	Set Knob(M4x22)	1
K	Screw/Washer(ST6x50)	2
L	Anchors(10x50)	2

ASSEMBLY INSTRUCTION

- Before mounting to the wall, make sure that the wall to be mounted can support the fan.
- Make sure that the wall fan is mounted properly and securely before plugging into an electrical outlet.

1

Install oscillation knob
Attach the oscillating knob into the square shaft with screw, pay attention to the square hole of oscillating knob should be fully set into the square shaft.

2

Install Wall Bracket
Mark two mounting holes, drill the holes and hammer the anchors in. Secure the wall bracket onto the wall with the screws.

3

Install Fan Base
Hang the fan base on the wall bracket.

4

Fix fan base
Secure with the set knob, fix the fan base.

5

Prepare Fan Base
Unscrew the position screw and pivot bolt with washers and nut.

6

Install Fan Head
Attach the fan head to the base. Secure with the pivot bolt, washers, spring washer and nut.

7

Fix Fan Head
Adjust to your desired angle and secure with the position screw.

8

Install Rear Grille
1. Unscrew the four screws preinstalled on the fan head.
2. Situate the rear grille onto the fan head with the screw hole right at the bottom.
3. Tighten the four screws to secure the rear grille cover tightly.

9

Install Fan Blades
Install the blades onto the shaft till the screw fits into the slot on the shaft. Tighten the screw. NOTE: Install in the correct direction of the fan blade.

10

Install Front Grille
1. Unlock all grille clips, attach the front grille with hook clip centered.
2. Secure the bottom with the screw and lock the remaining grille clips.