


物料编码	109070501093016
版次	v1

此页不要印刷，只作说明

A010L series



Portable Air Conditioner Owner's Manual






READ AND SAVE THESE INSTRUCTIONS

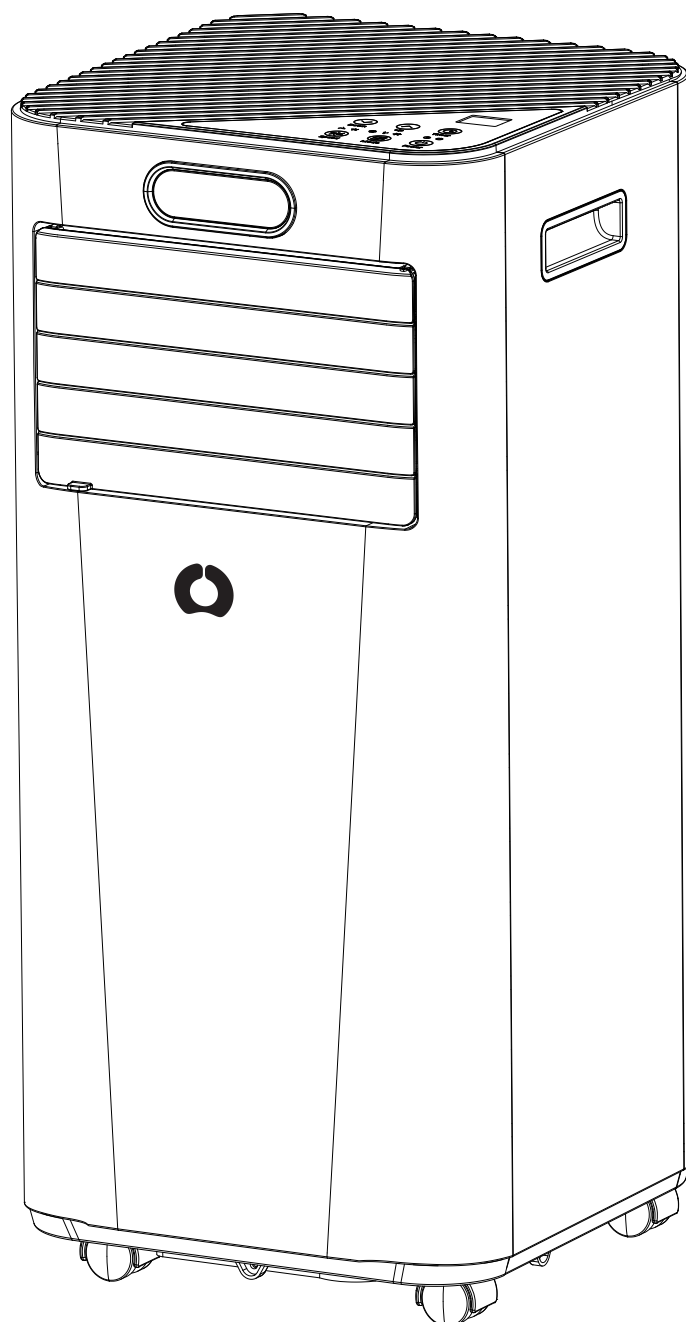

(With
R32
refrigerant)

If you have any questions, please contact
airorigservice@163.com

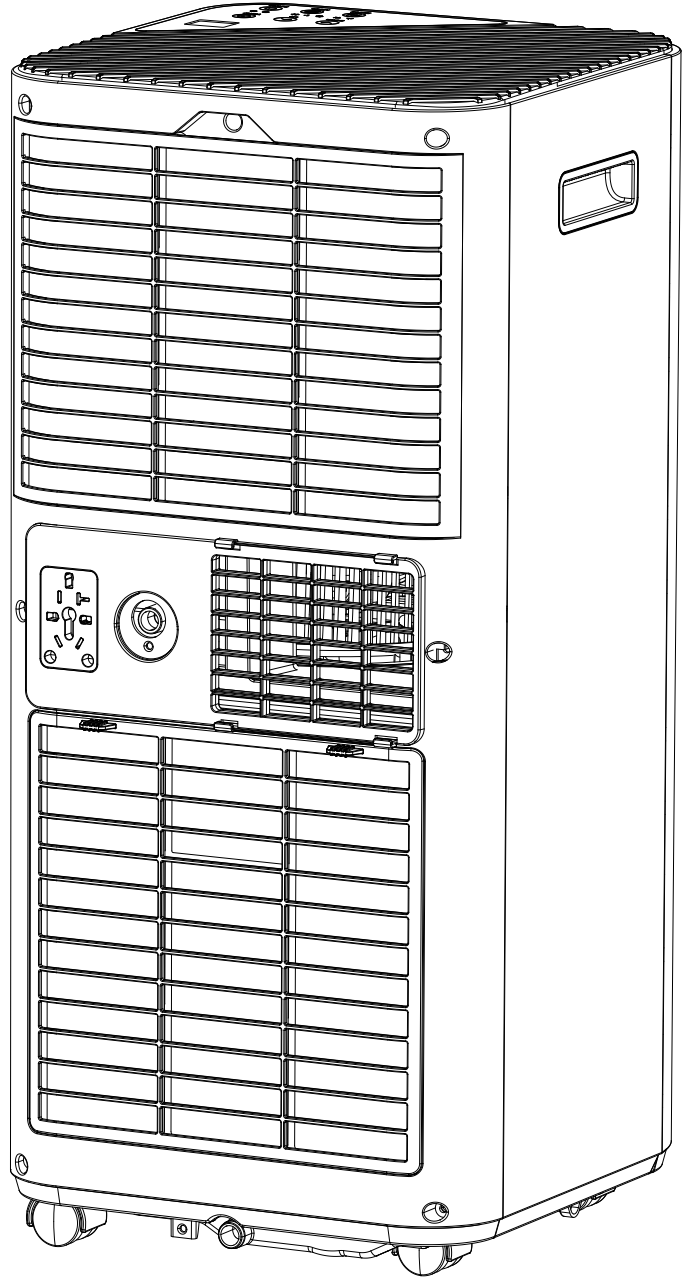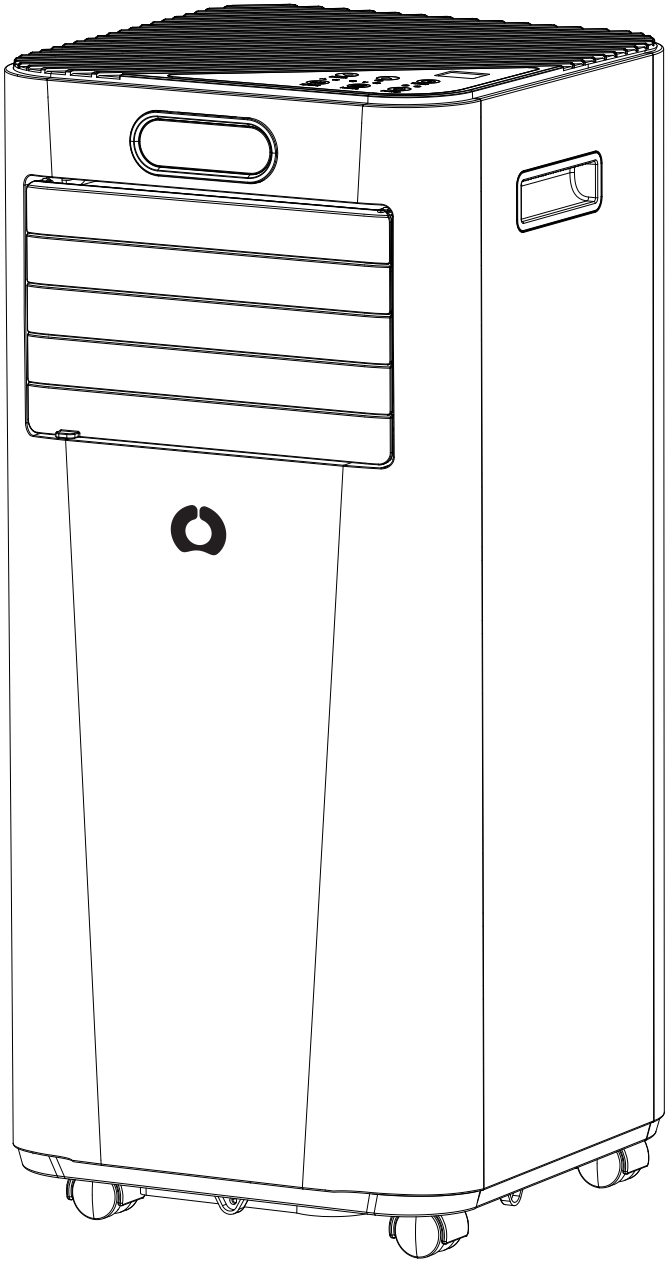

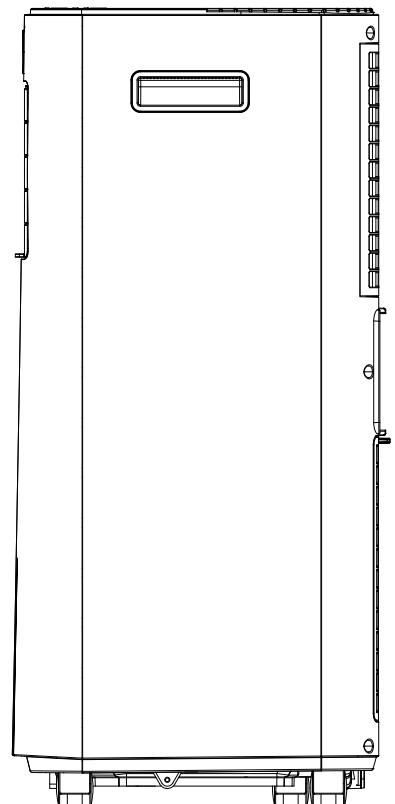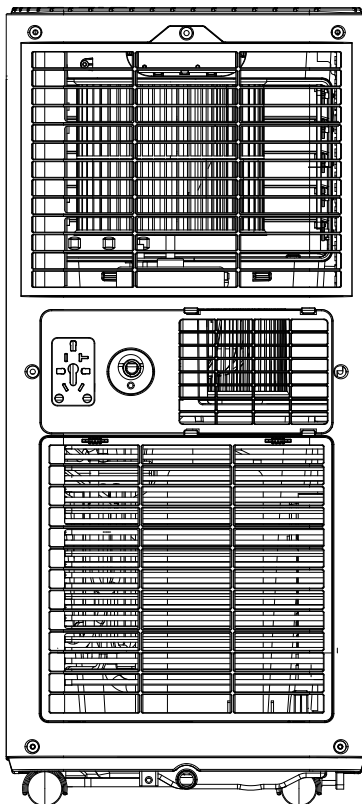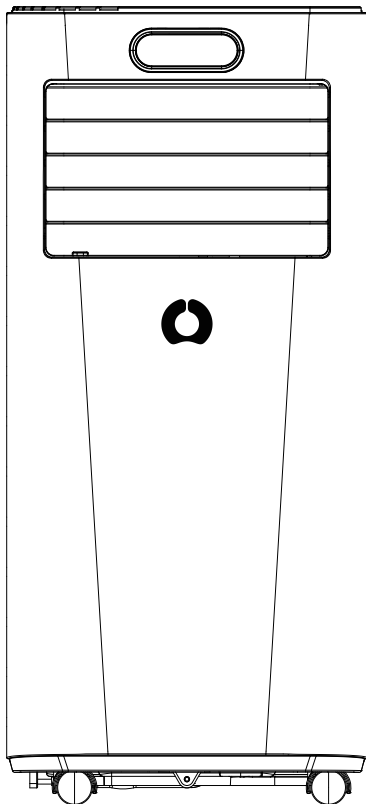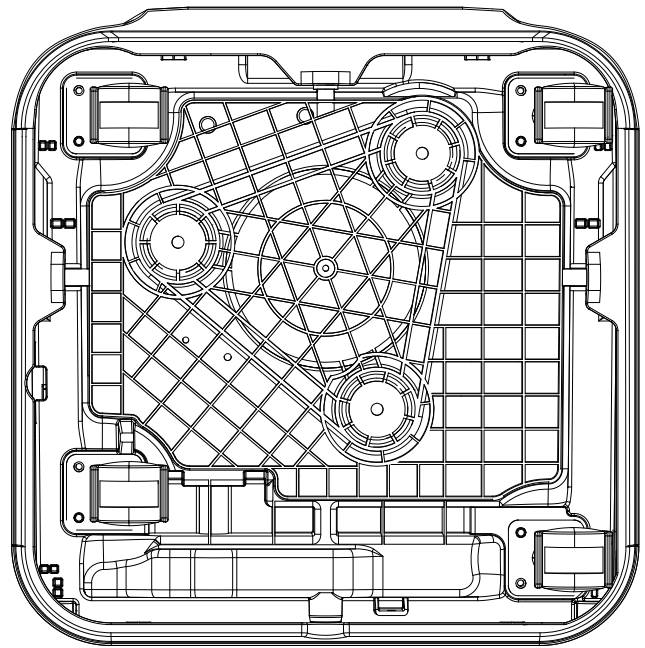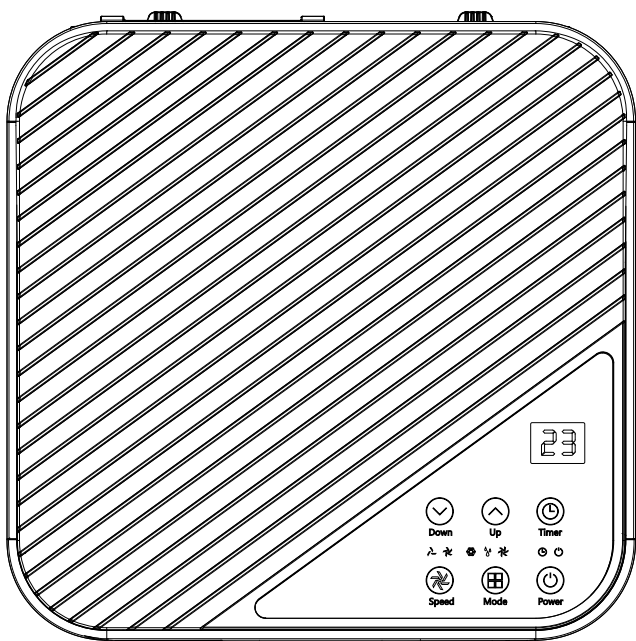

CONETENT

BEFORE YOUR BEGIN	02
FOR YOUR SAFETY	04
PRODUCT OVERVIEW	08
INSTALLATION	10
OPERATION	14
CLEANING AND CARE	19
TROUBLESHOOTING	21
DECOMMISSIONING	22

BEFORE YOU BEGIN

PRODUCT DESCRIPTION

Our powerful portable air conditioners are great cooling solutions for single rooms, creating a comfortable atmosphere in your space. It also has ventilation and dehumidifying function for circulating air and removal of moisture. They're self-contained systems that do not require any permanent installation allowing you to move to the space in which it is most needed, They're commonly used in kitchens, temporary-resided, computer rooms, garages, and many other places where installation of Air-conditioner Outdoor Unit is limited.

The environmentally friendly R32 is used as the refrigerant. R32 has no damaging influence on the ozone layer (ODP), a negligible greenhouse effect (GWP) and is available worldwide. Because of its efficient energy properties, R32 is highly suitable as a coolant for this application. Special precautions must be taken into consideration due to the coolant's high flammability.

SYMBOLS FROM THE UNIT AND USER MANUAL



This unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with a fire or heating part, it will create harmful gas and there is a risk of fire.



Read the USER MANUAL carefully before operation.



Further information is available in the USER MANUAL, SERVICE MANUAL, and the like.



Service personnel is required to carefully read the USER MANUAL and SERVICE MANUAL before operation.

BEFORE YOU BEGIN

THE FOLLOWING SHOULD ALWAYS BE OBSERVED FOR SAFETY

- This appliance is intended to be used by an expert or trained user in shops, in light industry and on farms, or for commercial use by persons.
- This appliance can be used by children over the age of 8 and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The unit is designed only for use with R32 gas as the designated refrigerant.
- The refrigerant loop is sealed. Only a qualified technician should attempt to service!
- **Do not** discharge the refrigerant into the atmosphere.
- R32 is flammable and heavier than air.
- It collects first in low areas but can be circulated by the fans.
- If R32 gas is present or even suspected, do not allow untrained personnel to attempt to find the cause.
- The R32 gas used in the unit has no odor.
- The lack of smell does not indicate a lack of escaped gas.
- If a leak is detected, immediately evacuate all persons from the store, ventilate the room and contact the local fire department to advise them that a R32 gas leak has occurred.
- **Do not** let any persons back into the room until the qualified service technician has arrived and that technician advises that it is safe to return to the room.
- No open flames, cigarettes or other possible sources of ignition should be used inside or in the vicinity of the units.
- Component parts are designed for R32 gas and non-ignition and non-sparking. Component parts shall only be replaced with identical repair parts.



FAILURE TO ABIDE BY THIS WARNING COULD RESULT IN AN EXPLOSION, DEATH, INJURY AND PROPERTY DAMAGE.

FOR YOUR SAFETY

WARNING

- Please read the operating instructions carefully before using your dehumidifier for the first time.
- To reduce the risk of fire, electric shock or injury to persons or property

OPERATIONAL PRECAUTIONS

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be disconnected from its power source during service.
- Always operate the unit from a power source of equal voltage, frequency and rating as indicated on the product identification plate.
- Always use a power outlet that is grounded.
- Unplug the power cord when cleaning or when not in use.
- **Do not** operate with wet hands. Prevent water from spilling onto the unit.
- **Do not** immerse or expose the unit to rain, moisture or any other liquid.
- **Do not** leave the unit running unattended.
- **Do not** tilt or turn over the unit.
- **Do not** unplug while the unit is operating.
- **Do not** unplug by pulling on the power cord.
- **Do not** use an extension cord or an adapter plug.
- **Do not** put objects on the unit.
- **Do not** climb or sit on the unit.
- **Do not** insert fingers or other objects into the air outlet.
- **Do not** touch the air inlet or the aluminum fins of the unit.
- **Do not** operate the unit if it is dropped, damaged or showing signs of product malfunction.

FOR YOUR SAFETY

- **Do not** clean the appliance with any chemicals.

Ensure the unit is far away from fire, inflammable, or explosive objects.

The unit shall be installed in accordance with national wiring regulations.

- **Do not** use means to accelerate the defrosting process or to clean, other than those recommended by the manufacture.
 - The appliance shall be stored in a room without continuously operation sources (for example: open flames, an operating gas appliance or an operating electric heater).
 - The appliance shall be stored so as to prevent mechanical damage from occurring.
 - **Do not** piece or burn, even after use.
 - Be aware that refrigerants may not contain an odour.
 - Pipe-work shall be protected from physical damage and shall not be installed in an unventilated space, if that space is smaller than 4 m².
 - Compliance with national gas regulations shall be observed.
 - Keep any required ventilation openings clear of obstruction.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

WARNING

- Any person who is involved with working on or breaking into a refrigerant circuit should hold a currently valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry-recognized assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer, Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

If you don't understand something or need help, please contact the dealer services.

FOR YOUR SAFETY

SAFETY PRECAUTIONS ON SERVICING

Please follow these warnings when to undertake the following when servicing an appliance with R32.

Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of flammable gas or vapor being present while the work is being performed.

General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the work space shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

No ignition sources

No person carrying out work in relation to a refrigeration system that involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repair, removal and disposal, during which flammable refrigerant can possibly be released into the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

FOR YOUR SAFETY

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which there refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant-containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Checks to electrical devices

Repair and maintenance of electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include:

- Those capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- That there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.



WARNING

Install the unit in rooms that exceed 4 m².
Do not install the unit in a place where inflammable gas may leak.



NOTE

The manufacturer may provide other suitable examples or may provide additional information about the refrigerant.

PRODUCT OVERVIEW

FEATURES

- High Capacity in a compact size with fan, cooling and dehumidifying function.

- Temperature setting and display

- LED Digital display

- Electronic control with built-in timer, sleep mode

- Self-evaporating system for better efficient

- Auto shut off when tank full

- Automatic restart in the event of power outage

- Auto defrosting function at low ambient temperatures


- Remote control

- 2- speed fan

- Casters for easy mobility


PRODUCT OVERVIEW

PRODUCT DIAGRAM

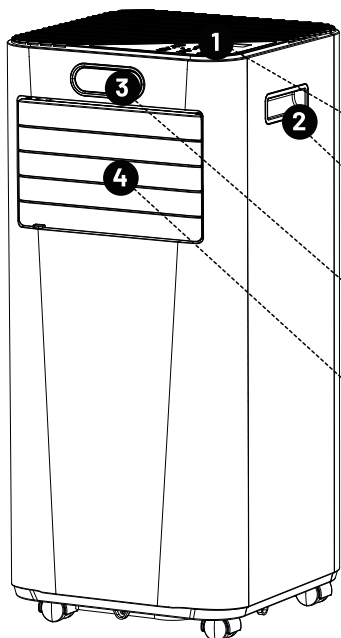

- ❶ Control Panel
- ❷ Handle
- ❸ Front Display
- ❹ Air Outlet with Adjustable Louver

- ❺ Air Inlet with Air Filter
- ❻ Air Exhaust
- ❼ Drainage Hole
- ❽ Caster

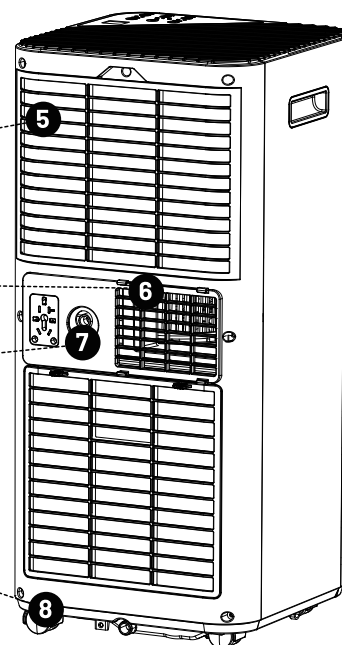


Note:

The appearance is only for reference. Please see the real product for detailed information.


- Unpack the carton and take the appliance and accessories out.
- Check the device after unpacking for any damage or scratches ont.

•Accessories:

1. Exhaust hose × 1




4. Remote control × 1



2. Hose connector × 1



5. Window kit × 1



3. Window kit adapter × 1



6. Drain hose × 1



INSTALLATION

PRECAUTIONS BEFORE USE

● **Allow the unit to set upright for at least 24 hours before start up.**

● **Do not operate in close proximity to walls, curtains, or other objects that may block air in let and outlet. Keep the air inlet and outlet free of obstacles.**

● **Never install the unit where it could be subject to:**

01. Heat sources such as radiators, heat registers, stoves or other products that produce heat.
02. Direct sunlight
03. Mechanical vibration or shock
04. Excessive dust
05. Lack of ventilation, such as cabinet or bookcase
06. Uneven surface


INSTALLATION

ATTACH THE EXHAUST HOSE

The air conditioner requires being vented outside so that the exhaust air can escape the room which coming from the appliance contains waste heat and moisture. Do not replace or extend exhaust hose which will result in decreased efficiency, even worse shut down the unit due to low backpressure.


Step 1:

Extend each side of the telescopic hose a little and put two white plastic kits on each side of the telescopic hose

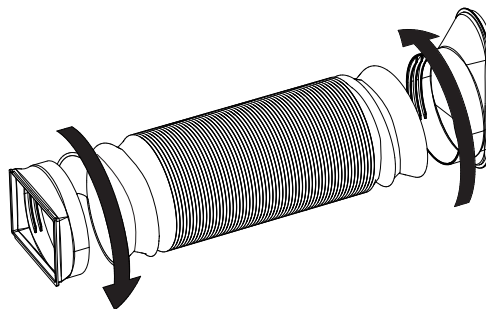

Step 2:


Put the window extension baffle together with screws, the screws do not need to be tightened first so that the baffle is in a free stretching state, adjust the baffle to meet the size of the window, tighten the fixing screws.

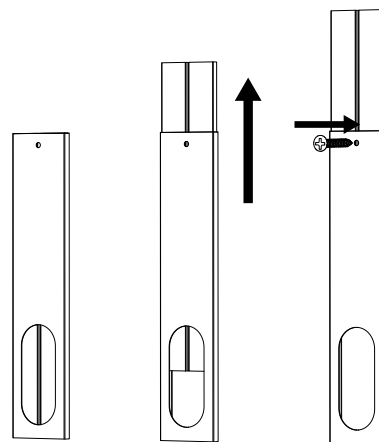

(Side with holes facing down)

Step 4:


Attach the four white plastic parts to the air vents on the back of the machine.

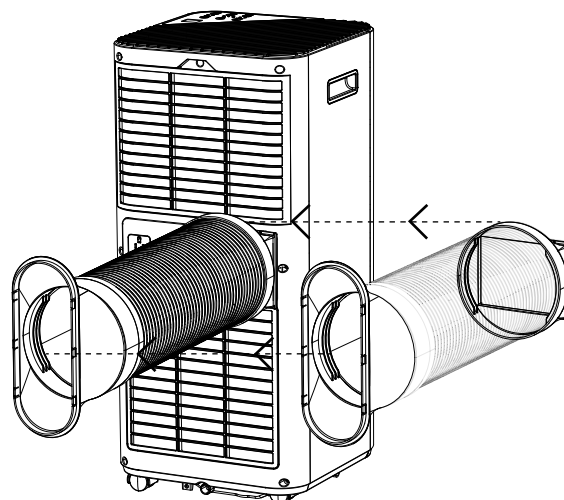

INSTALLATION


Step 5:

Install the long white plastic parts into the corresponding holes of the window kit. Adjusting the length of the flexible exhaust hose, and avoid bends in the hose. Then place AC near an electrical outlet.

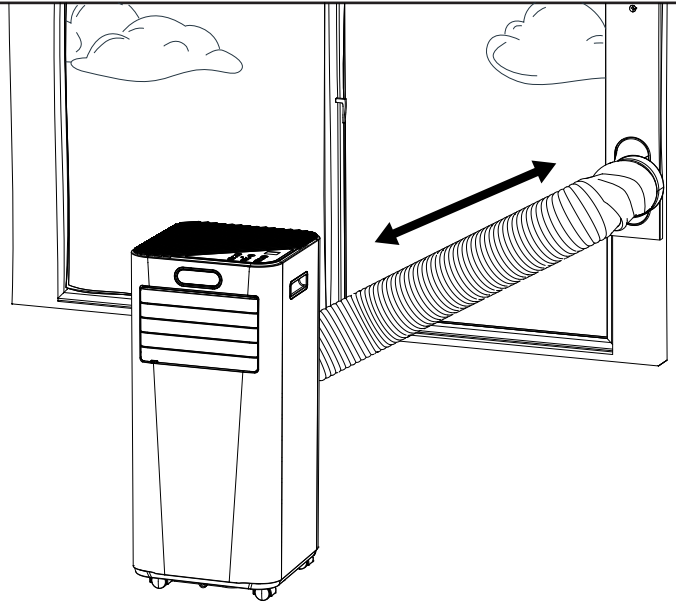


Step 6:

Install the drain hose to the upper drain, place a water basin and place the drain hose in the water basin to store water damage.

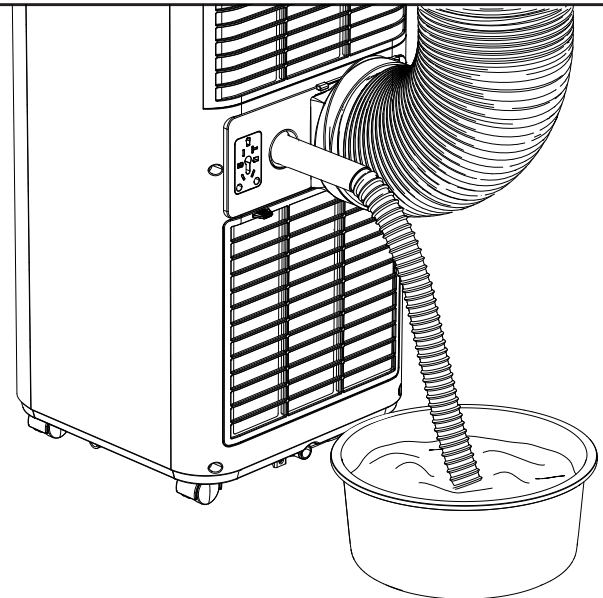


Step 7:

Adjust the louver at the air outlet, and then switch on the unit.

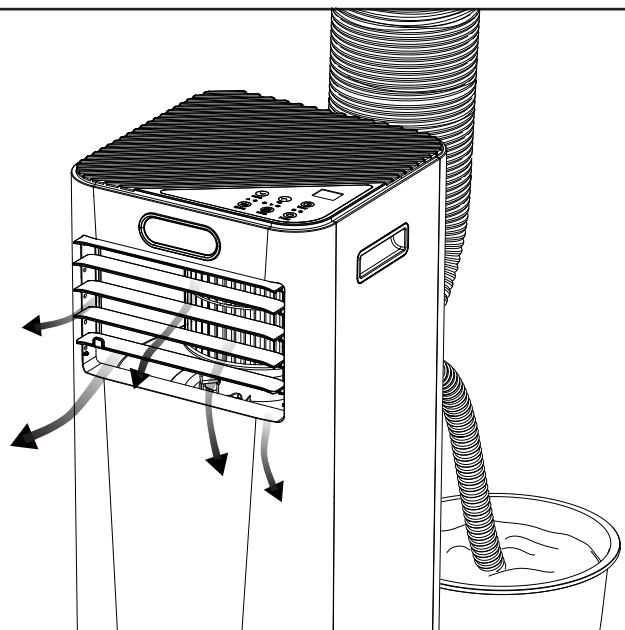

INSTALLATION


PLACE CORRECTLY

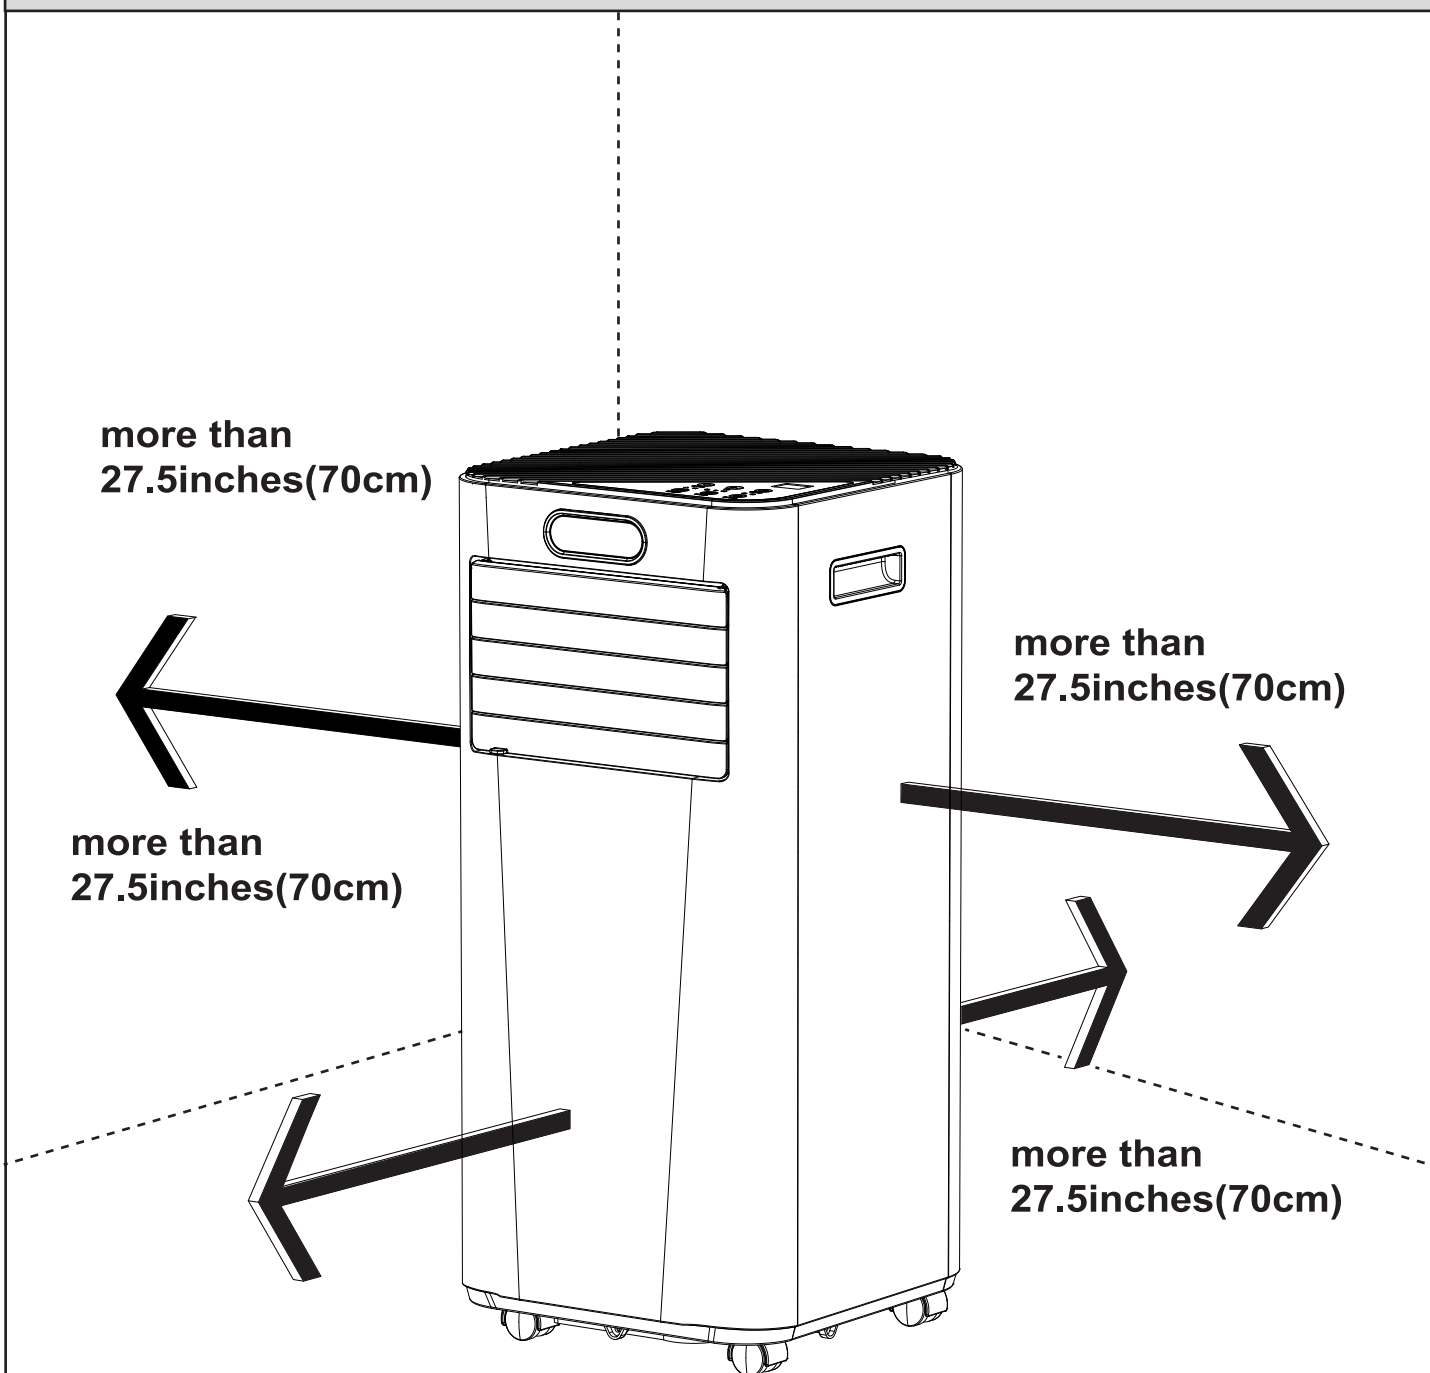









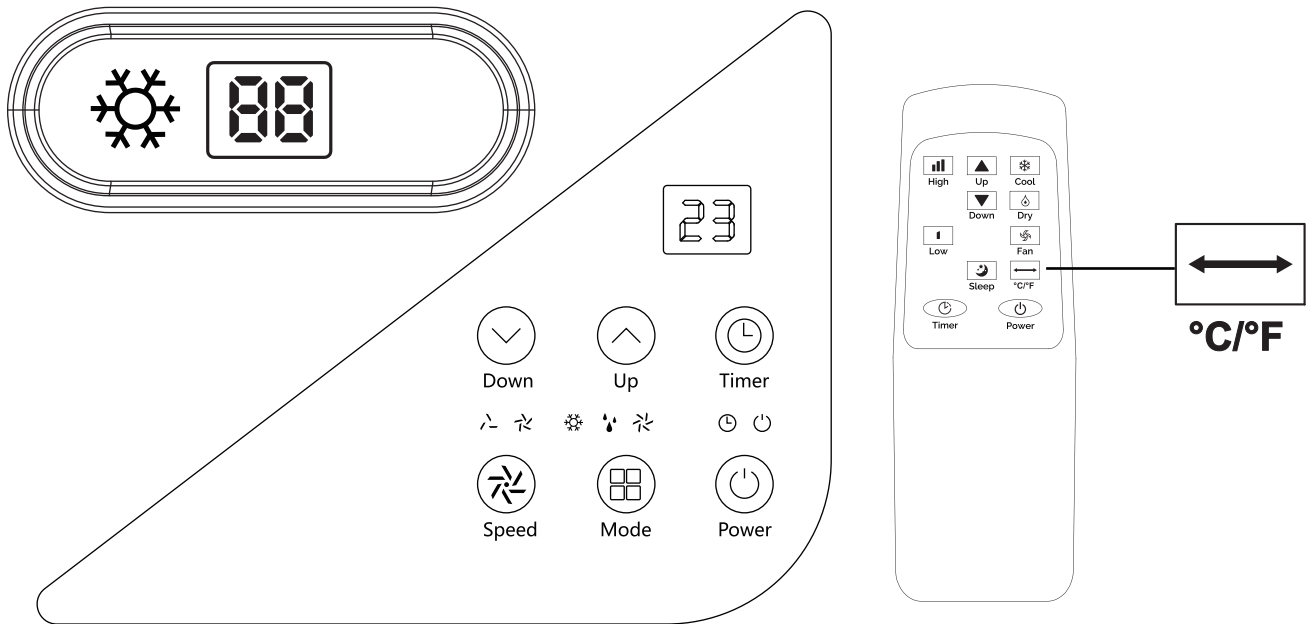



- Place the unit on a firm, level surface in an area with at least 70cm of free space around it to allow for proper air circulation.

OPERATION

CONTROL PANEL AND DISPLAY



 <p>Power Press to switch the machine on or off.</p>	 <p>Mode Mode button press to switch the operation mode between fan, cooling and dehumidifier.</p>
 <p>Speed Press to switch the fan speed between HIGH and LOW.</p>	 <p>Down Decreasing the desired temperature or timer setting.</p>
 <p>UP Increasing the desired temperature (16°C (60.8°F) -32°C (89.6°F)) or timer setting.</p>	 <p>Timer Sets a time for the unit to automatically start or stop.</p>
 <p>Display</p>	 <p>Fan Speed Indicator Indicate the High/Low fan speed.</p>
 <p>Mode Indicator Indicate the machine operating mode(Cooling, Dehumidifier or Fan).</p>	 <p>Indicator Display the Power/Time on.</p>
 <p>Cooling Mode Indicator Display the Cooling mode.</p>	 <p>Display Window 16°C (60.8°F) -32°C (89.6°F).</p>

OPERATION

SETTINGS

Start-up and Shutdown

- Press POWER to turn the unit on.
- Press MODE button to select the desired operation mode.
- Press POWER again to turn off the power.

Operation mode

The unit have four operation modes: Cool, dehumidifier, fan, sleep.

A. Cooling your room

Select the cool mode to lower the temperature in your room.
Press MODE button repeatedly until the COOL indicator lights up.
Press Up/Down button to adjust the temperature which is displayed on the screen.
The temperature can be set between 16C (60.8°F) and 32C (89.6°F)
Press SPEED button repeatedly until the desired fan speed indicator lights up.
To control the direction of the air flow horizontally, please adjust the inner louver by hand.

Note: The air conditioner stops if the room temperature is lower than selected temperature.

B. Ventilating your room

- Press MODE button repeatedly until the FAN indicator lights up.
In ventilation mode the room air is circulated, but not cooled.
- Press SPEED button repeatedly to select the fan speed as desired.

C. Drying your room

Press MODE button on the control panel or remote control, the dehumidification indicator lights up. The fan speed is unable to select. User should connect the hose to the drain outlet at the bottom of the unit.

Note: In this mode, the fan speed switches over to low speed and cannot be selected.

D. Sleep mode

The sleep mode can be activated when in cool mode and heat mode.

• In cool mode

After 1 hour the preset temperature is increased by 1°C (1.8°F) , after another hour the preset temperature will again be increased by 1C (1.8°F) Then the temperature is kept constant for 10 hours. And all the indicators dim to dark. The fan speed may switch over to low speed for silent operating and cannot be selected.

• Lock

Long-pressing the Lock key about 3 seconds to active the child-lock function . And no key will be work at that function. Long-pressing that key for more 3 seconds to cancel this.

• Speed

Pressing this key to adjust low or high wind speed.

OPERATION

TIMER SETTING (1hour-2hours):

The timer has two ways of operation:

01.To turn off
(When power on)



Timer

02.Press Timer key
to turn on the timer
function.



Up



Down

03.Press Up/Down repeatedly
to set the delay OFF time.(For
example,if it displays 2h, it will
turn off after 2 hours)



04.Cancel timer

Press **Up /Down** repeatedly until the LED shows "00"

Note: when press **POWER** will also exit the timer setting



Up



Down

01.To turn on
(When power off)



Timer

02.Press Timer key
to turn on the timer
function.



Up



Down

03.Press Up/Down repeatedly
to set the delay ON time.(For
example,if it displays 2h, it will
turn off after 2 hours)



OPERATION

Automatic Defrost

At low room temperatures, frost may buildup at the evaporator during operation. The unit will automatically start defrosting and the POWER LED blinking. The defrost control sequence is as follows:

A. When the unit operates in the cooling operation, drying operation, the ambient temperature sensor senses the evaporator coil temperature is below -1°C (30.2°F), after the compressor will stop operating for 10 minutes or the coil temperature up to 7°C (44.6°F) the unit restart to cool operating mode.

B. When the unit operates in the heating operation, drying operation, once the coil temperature sensor senses the temperature of the evaporator is below 40°C (104°F) and the differential temperature between coil temperature and room temperature is below 19°C (66.2°F) after the compressor operation for 20 minutes, the unit start defrosting for 5 minutes and the power indicator blinking

Note: Please do not cut off the power during defrosting, defrost continuously for 10 minutes, and wait until the defrosting is finished, it will resume the working mode automatically.

Overload Protection

In the event of a power loss, to protect the compressor there is a 3-minute delay until the compressor restarting.


OPERATION

DRAINAGE


Self- evaporating system

The self-evaporating system uses the collected water to cool the condenser coils for better efficient performance. It is no need to empty the drainage tank in cooling operation except in heating operation, drying operation and high humidity conditions. The condensate water evaporates at the condenser and evacuated through the exhaust hose.

For continuous operation or unattended operating in drying and heating operation, please connect the attached drain hose to the unit. Condensate water can be automatically flow into a bucket or drain by gravity.

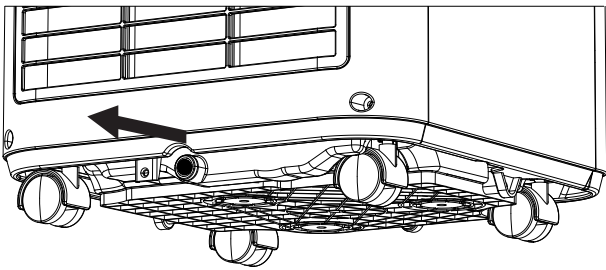

Remove the rubber sealing plug.

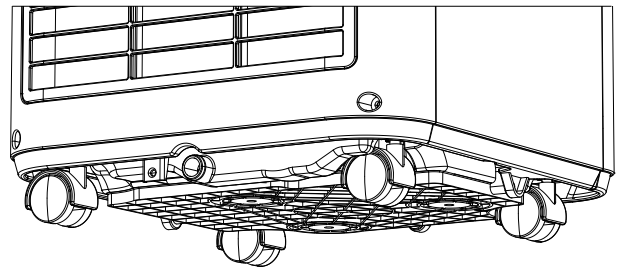

Continuous drain hose

- Switch off the unit before operating.
- Remove the plug of the water outlet opening, and keep it in safe area.
- Securely and properly connect the drain hose and make sure it is not kinked and clear of obstruction.
- Place the outlet of hose over a drain or bucket and ensure that water could freely flow out of the unit.
- Do not submerge the end of hose into water: otherwise it can cause "Air Lock" in the hose.

To avoid water spillage:


- As the negative pressure of condensate drain pan is large, tilt the drain hose downward toward the floor. It is appropriate that the degree of inclination should exceed 20 degrees.
- Straighten the hose to avoid a trap existing in the hose.

CLEANING AND CARE


CLEANING THE AIR FILTER (every two weeks)

Dust collects on the filter and restricts the airflow. The restricted airflow reduces the efficiency of the system and if it becomes blocked it can cause damage to the unit. The air filter requires regular cleaning. The air filter is removable for easy cleaning. Do not operate the unit without an air filter, or the evaporator may be contaminated.

1. Press POWER button to switch off the unit and unplug the power cord.
2. Remove the filter mesh from the unit.
3. Use a vacuum cleaner or brush to suck dust from the filter.
4. Turn the filter over and rinse the air filter under running water. Let the water run through the filter in the opposite direction of air flow. Set aside and allow the filter to air dry completely before reinstalling.

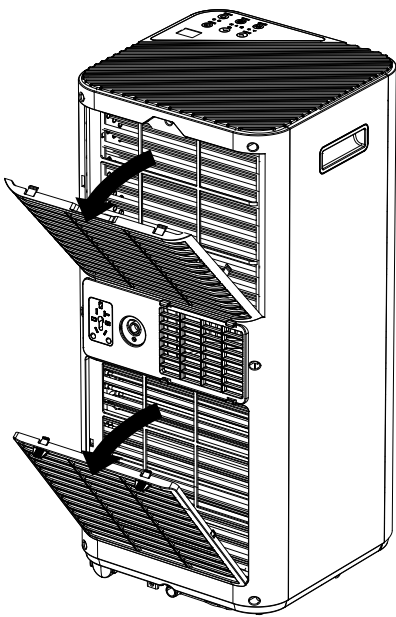

Pic1. Switch off the unit and remove the two air filters.

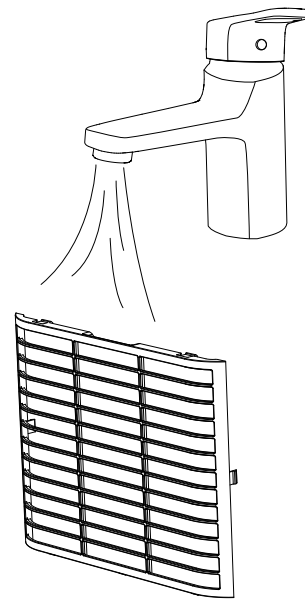

Pic2. Rinse the air filter under running water.

WARNING

Do not touch the evaporator surface with bare-hand, or could cause injury of your fingers.

CLEANING AND CARE

CLEANING UP OF REFRIGERANT

General Measures:

1. Gas/vapor heavier than air. May accumulate in confined spaces, particularly at or below ground level!
2. Eliminate every possible source of ignition.
3. Use appropriate personal protection equipment (PPE).
4. Evacuate unnecessary personnel, isolate, and ventilate area.
5. Do not get in eyes, on skin, or on clothing. Do not breathe vapors or gas.
6. Prevent entry to sewers and public waters.
7. Stop the source of the release, if safe to do so. Consider the use of water spray to disperse vapors.
8. Isolate the area until gas has dispersed. Ventilate and gas test area before entering.

Contact competent authorities after a spill.

TROUBLESHOOTING

Symptom	Inspection	Solution
The unit is not operating.	<ul style="list-style-type: none"> ●Check the power connection in securely. ●Check if the water level indicator lights up? ●Check the room temperature. 	<ul style="list-style-type: none"> ●Insert the power cord securely into the wall Outlet. Check the fuse or the circuit breaker. ●Empty the drain pan by remove the rubber plug ●The range of operating temperature is 5-35°C
The unit works with reduced capacity.	<ul style="list-style-type: none"> ●Check the air filter for dirt. ●Check if the air duct is blocked. ●Check if the room door or window is open. ●Check if the desire operating mode is selected and the temperature is properly set. ●The exhaust hose is detached. 	<ul style="list-style-type: none"> ●Clean the air filter as necessary. ●To clear the obstacle. ●Keep the door and window closed. ●Set the mode and temperature at proper set point according the manual (refer to page 16) ●Make sure the exhaust hose is securely attached.
Water Leakage	<ul style="list-style-type: none"> ●Overflow while moving the unit. ●Check if the drain hose is kinked or bends. 	<ul style="list-style-type: none"> ●Empty the water tank before transport. ●Straighten the hose to avoid a trap existing.
Excessive Noise	<ul style="list-style-type: none"> ●Check if the unit is securely positioned. ●Check if any loose vibrating parts. ●Noise sounds like water flowing. 	<ul style="list-style-type: none"> ●Place the unit on horizontal and firm ground. ●Secure and tight the parts. ●Noise comes from flowing refrigerant. This is normal
Error Code	Code Explanation	Solution
E0	<ul style="list-style-type: none"> ●Communication faults between main PCB and display PCB. 	<ul style="list-style-type: none"> ●Check the wire harness of the display PCB for damage.
E1	<ul style="list-style-type: none"> ●Ambient temperature sensor failure 	<ul style="list-style-type: none"> ●Check connection or replace it. To clean or replace the temperature sensor.
E2	<ul style="list-style-type: none"> ●Coil temperature sensor failures. 	<ul style="list-style-type: none"> ●Check connection or replace it. To clean or replace the temperature sensor.
Ft	<ul style="list-style-type: none"> ●Condensate water high level alarm. 	<ul style="list-style-type: none"> ●Empty the drain pan by removal the rubber plug.

DECOMMISSIONING

CLEANING UP OF REFRIGERANT

STORAGE

Long-Term Storage - If you will not be using the unit for an extended period of time (more than a few weeks) it is best to clean the unit and dry it out completely. Please store the unit per the following steps:

1. Unplug the unit and remove exhaust hose and window kit store with the unit.
2. Drain the remaining water from the unit.
3. Clean the filter and let the filter dry completely in a shaded area.
4. Re-install the filter at its position.
5. The unit must be kept in upright position when in storage.
6. Store the machine in a ventilated, dry, non-corrosive gas-free and safe indoor location.

ATTENTION:


The evaporator inside the machine has to be dried out before the unit is packed to avoid component damage and molds. Unplug the unit and place it in a dry open area for days to dry it out, Another way to dry the unit is turn on the machine, adjust it to low-wind ventilation mode, and maintain this state until the drainage pipe becomes dry, so as to keep the inside of the body in a dry state and prevent it from mildewing.

DISPOSAL

WARNING

Releasing refrigerant into atmosphere is strictly forbidden!

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain damaging your health and well-being.

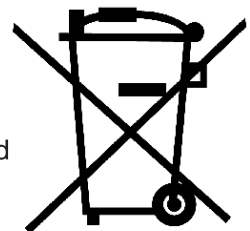

HOME PORTABLE AIR CONDITIONER

Take the heat out of summer