



Semi-Automatic Polypropylene Strapping Machine
Model: SM-101_Gen2.0, SM-101-DA_Gen2.0, SM-102

Distributed By:

Version 1.0
Last Updated: 6/3/21

Copyright © 2021 by Stephanie Hwang

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law. For permission requests, write to the publisher, addressed "Attention: Permissions Coordinator," at the address below.



Sealer Sales, Inc.
8820 Baird Avenue
Northridge, Ca 91324
www.sealersales.com

Printed in the United States of America



SAFETY INSTRUCTIONS

Read these safety instructions before operating or servicing your strapping machine.

- (1) Read the operating instructions and all of the signs on the machine carefully.
- (2) Wear eye or face, and hand protection. Do not wear loose clothing.
- (3) Keep hands or other parts of the body out of the strap chute area during operation.
- (4) The temperature of the heater plate is high up to 320 °C. Do not touch!
- (5) Do not insert strap in the guide while there is not a package on the operation table.
- (6) Do not replace any safety parts of different specifications.
- (7) Watch the springing force of spring when opening reels.
- (8) Shut off all electric power after machine operation or during machine servicing.
- (9) Do not use water or steam to clean the machine.
- (10) Keep this operation manual near your strapping machine. Refer to it often.

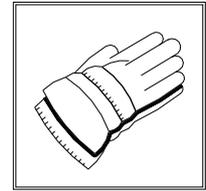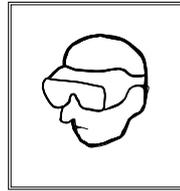

DO NOT TOUCH HEATER PLATE

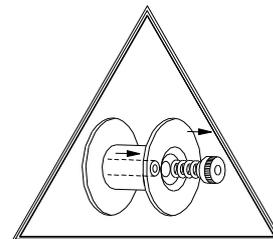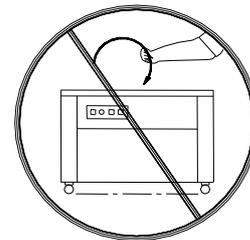

WATCH THE SPRING WHEN OPENING

TABLE OF CONTENTS

Introduction	2
Major components	2
Exterior Machine	4
Strapping Head	5
Installation	6
Operating Instructions	7
Principles of Operation	10
Service Adjustments and Clearances	16
Maintenance	18
Trouble Shooting	19
Parts List and Exploded Views	20
Electrical Schematic	47

MAJOR COMPONENTS

In figures 1 thru 4 the major components of the machine and the strapping head are shown in detail.

A detailed description of additional systems and specific components follows:

STRAP DISPENSER:

The dispenser supplies strapping material to the strapping head. It is located inside the cabinet on the lower left-hand side. A friction brake is provided to limit over-run of strap.

1. **GRIP**-The grip holds the lead end of the strap beneath the anvil while the remainder of the strap is being tensioned around the package.

STRAP FEED AND TENSION - Both feed and tension are achieved by two sets of gear rollers powered by an electric motor by means of a drive-belt and slip-clutch system.

An operator controlled adjustable timer controls the duration of strap feed. When the set time for feeding is up, the timer stops feeding strap. If additional feed is required beyond that determined by the timer setting, jog feed will be facilitated by pushing the "feed button on the operator's control panel.

3. **WELDING AND CUT-OFF**-Welding of the strap ends and cutting of the strap supply are facilitated in this process.
4. **PACKAGE RELEASE**-After a short weld cool period (necessary to avoid welded ends from popping open) the package is released.

(Note:) the afore mentioned functions: 1, 3 and 4 are driven by a cam shaft coupled to the drive system by means of an electromagnetic clutch which turns one full revolution per cycle.

HOT KNIFE. The "Hot knife" is centrally located at the front of the strapping head. Movement of the knife is controlled by a cam.

ELECTRICAL SYSTEM. An all new electrical system using solid state technology supplies continual power supply to the electrical components within the machine. Using simple to insert circuit boards provides for safe and fast maintenance free operation.

OPERATOR CONTROLS. The Electrical Control panel consists of the "Main power ON-OFF Switch," "Feed Length timer," "Reset Switch" and "Feed Length Switch" (Jog Feed).

INTRODUCTION

This manual contains safety, operating, and maintenance instructions for the Semiautomatic power Strapping Machine. This model is designed to strap packages with plastic strap 1/4" to 5/8" (6mm to 15mm) wide. The strap ends are joined by means of "hot-knife" welding process.

Model No. SM-101 Gen2.0

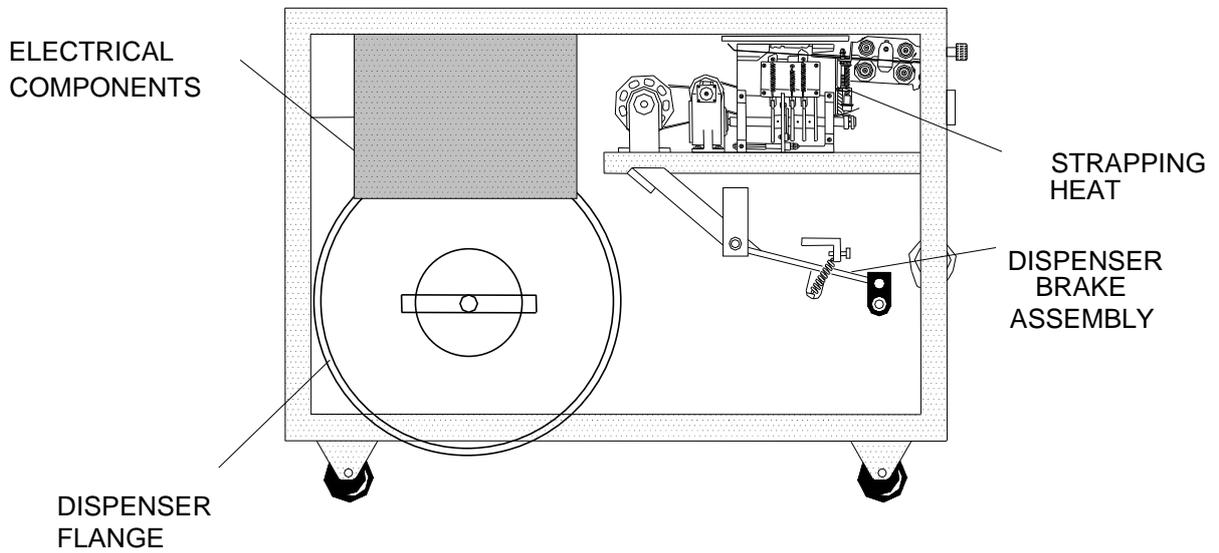
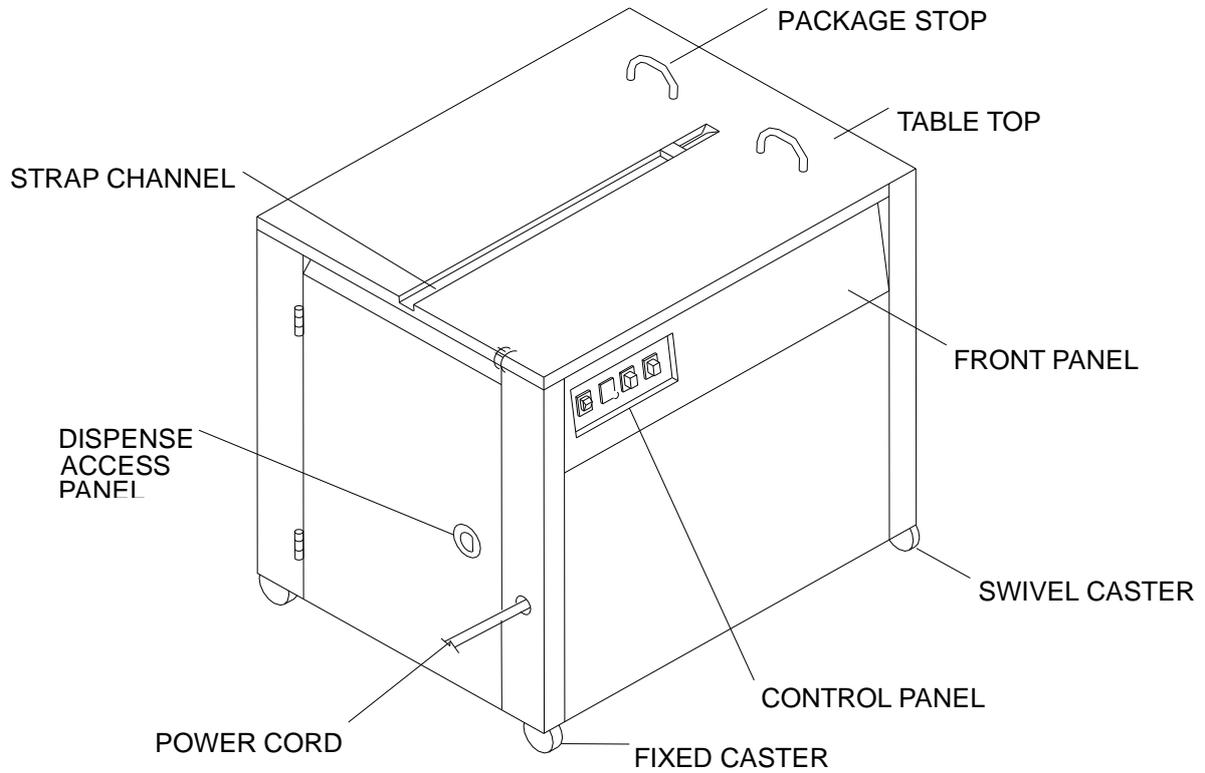


FIGURE 2. MAJOR COMPONENTS,FRONT VIEW

Model No. SM-102

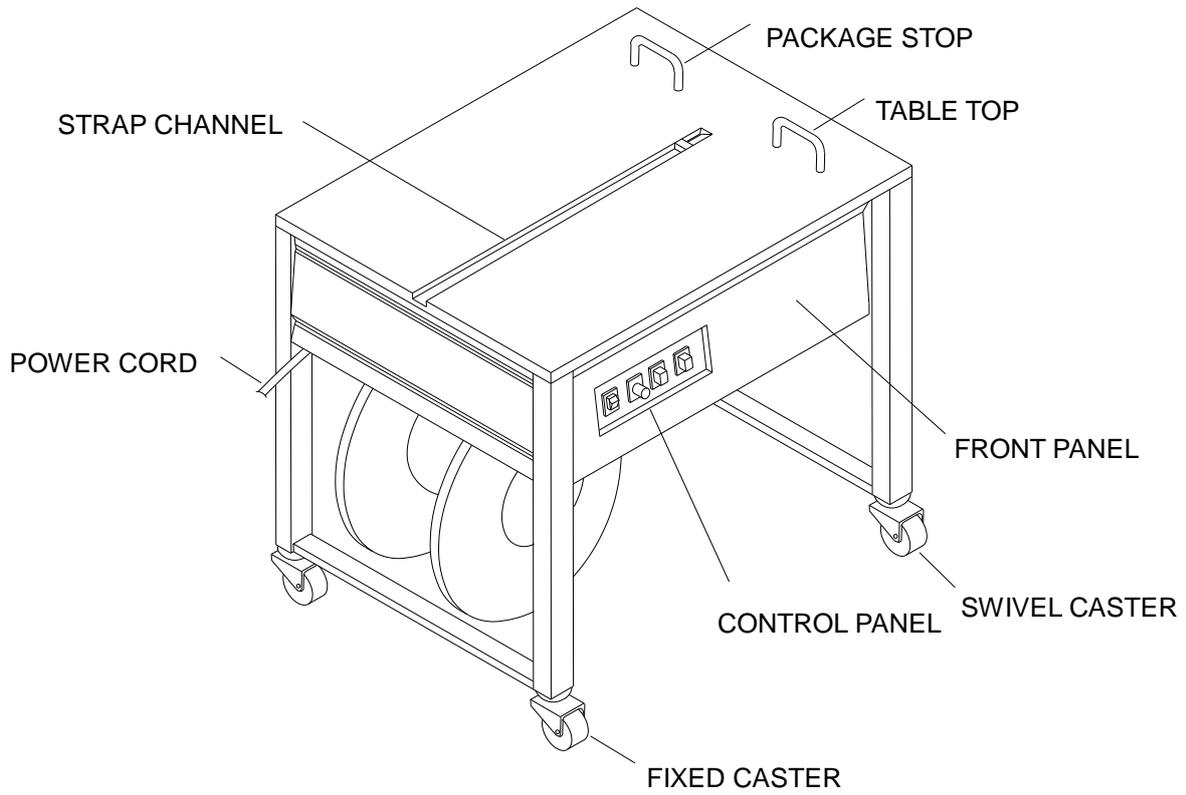


FIGURE 3 .MAJOR COMPONENTS,EXTERIOR

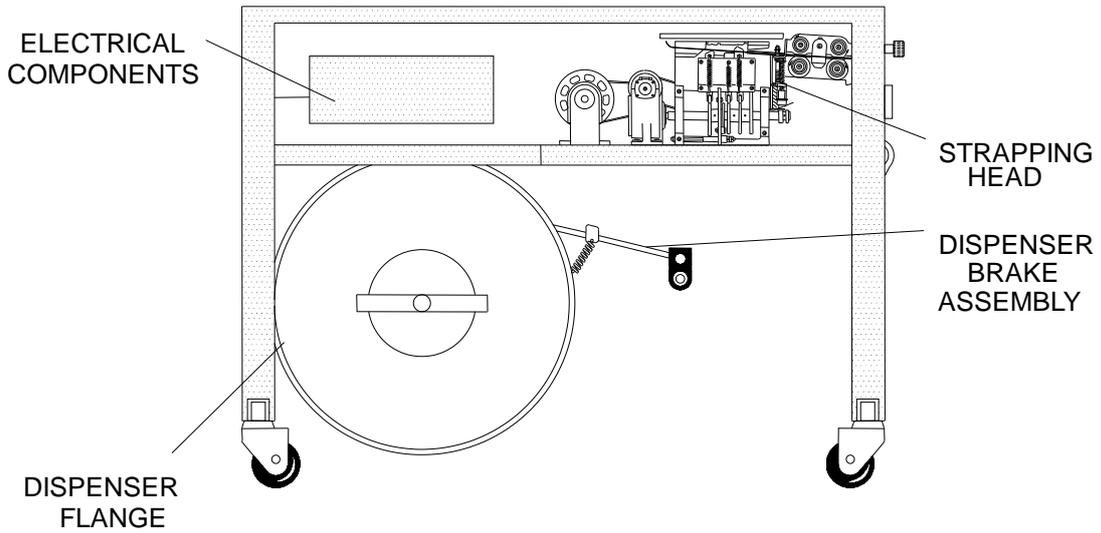


FIGURE 4 .MAJOR COMPONENTS,FRONT VIEW

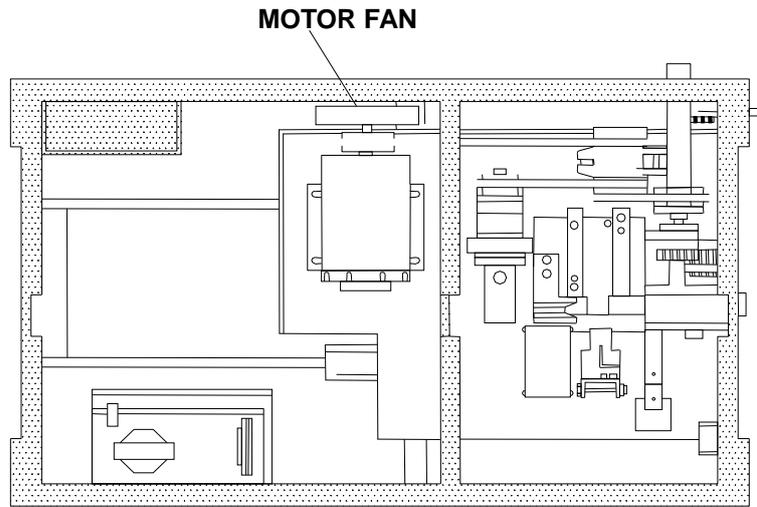


FIGURE 5 .MAJOR COMPONENTS,TOP VIEW

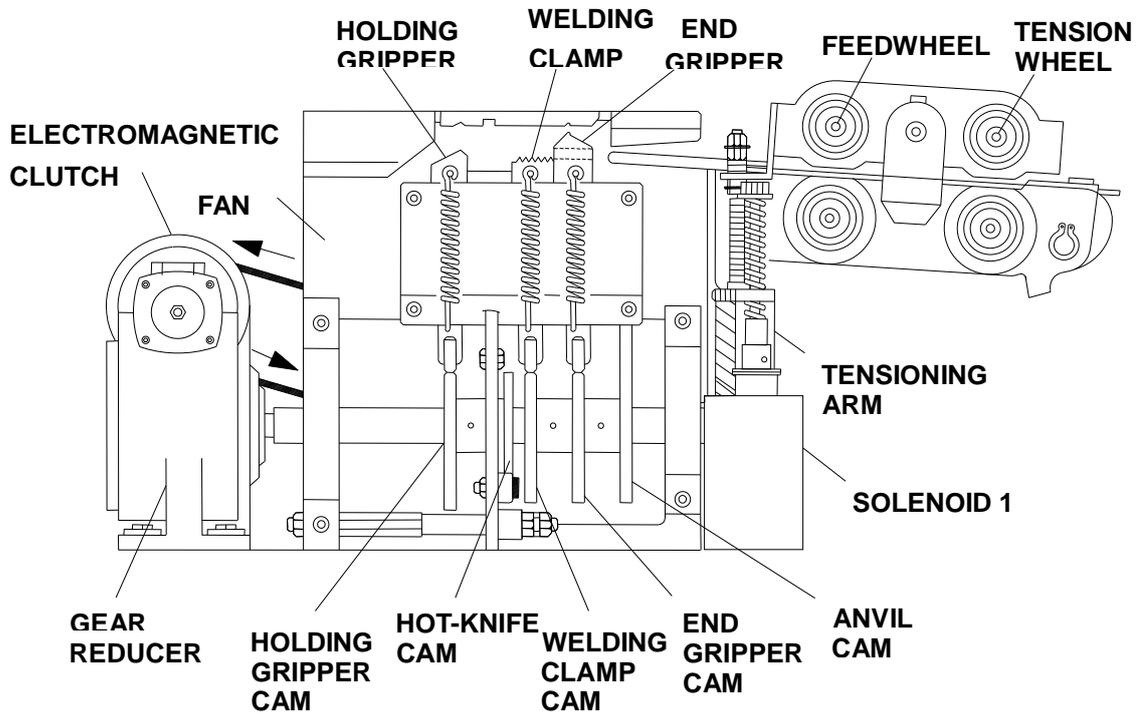


FIGURE 6 MAJOR COMPONENTS,STRAPPING HEAD

INSTALLATION

Installation of the SM-101 series strapping machine requires that the machine be uncrated, placed in its proper position and secured in place with the caster locks. Operation may begin once strap of the proper size is loaded and the power cord is plugged into the appropriate electrical outlet.

One set of tools and spare parts is packed with each machine for use in making adjustments and for replacement of parts as needed. Please compare your supplied tools with the following list:

Tools list

Phillips screwdriver

1 1/2" brush

8mm/10mm open end wrench

5mm Allen wrench

4mm Allen wrench





3mm Allen wrench

2.5mm Allen wrench

Lubricating oil

STRAP GUIDE (OPTIONAL)

1	660076	1/4" (6mm) strap guide, entry
1	660080	1/4" (6mm) strap guide, exit
1	660077	3/8" (10mm) strap guide, entry
1	660081	3/8" (10mm) strap guide, exit
1	660078	1/2" (13mm) strap guide, entry
1	660082	1/2" (13mm) strap guide, exit
1	660079	5/8" (15.5mm) strap guide, entry
1	660083	5/8" (15.5mm) strap guide, exit

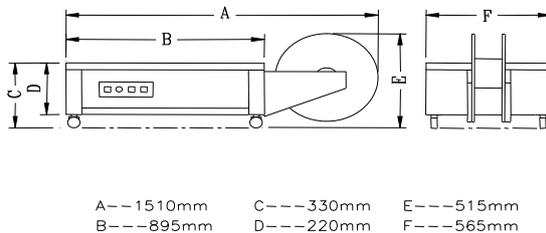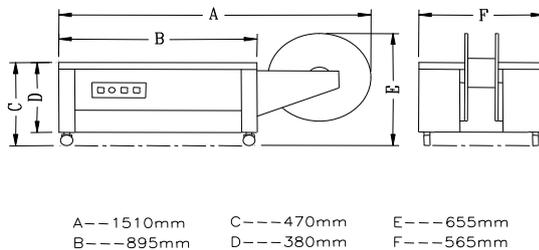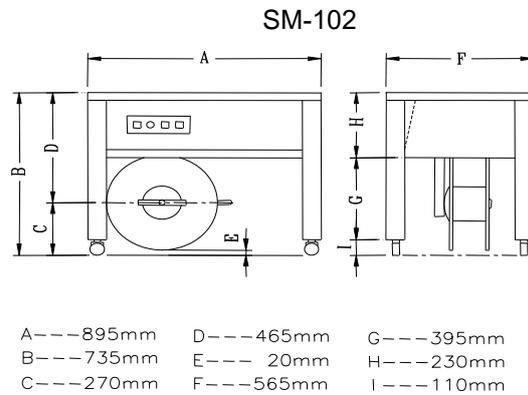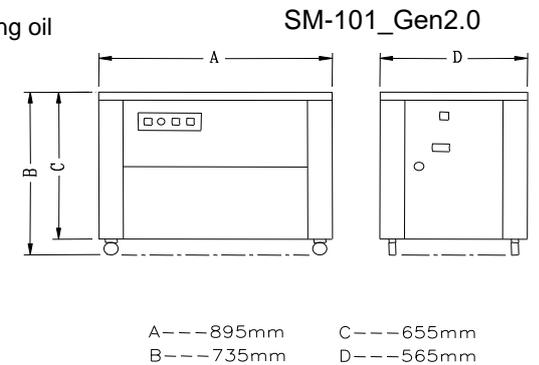

INSTALLATION DIMENSIONS AND CLEARANCES

OPERATING INSTRUCTIONS

OPERATOR'S CONTROLS

CONTROL PANEL. The control panel is located on the left-hand side of the front panel of the machine. Refer to Figure 9.

POWER SWITCH. A single pole, single set luminous push button glows when turned on. All electrical circuits and the electric motor are then energized. Pushing the "Power Switch" once more cuts off all power supply to the machine.

STRAP FEED LENGTH TIMER. Metered lengths of strap can be adjusted to automatically feed in a range of from 1" (25mm) to approximately 25 feet (7620mm).

RESET SWITCH. When pushed, the electromagnetic clutch is energized and the strapping head turns one complete revolution, stopping in the home position.

FEED LENGTH SWITCH. When pushed, additional strap is fed out into the strap channel. Strap feed will continue as long as the button is pushed.

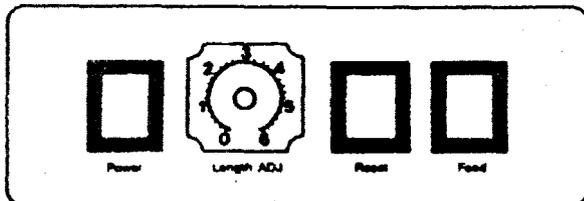


FIGURE 9. OPERATOR'S CONTROL PANEL

LOADING STRAP IN MACHINE

Refer to Figure 10 and proceed as follows:


1. **Withdraw** the dispenser assembly. Place the assembly as shown. (FIG. 10, P. 8)
2. Push down on the lock and turn to disengage from the roll pin that protrudes from the shaft.
3. Remove the lock and lift the right flange from the dispenser shaft.

COOLING TIME DIP-SWITCH ADJUSTMENT

The cooling time adjustment on your machine allows the user to adjust the cooling time to meet his strapping requirements. Please follow the steps below to adjust the cooling time of the heater.

Attention: Before making any dip-switch changes power **MUST** be OFF.

<p>Cooling time Shortest For very light tension</p>	
<p>Cooling time Medium Normal setting</p>	OR
<p>Cooling time Longest For high tension</p>	

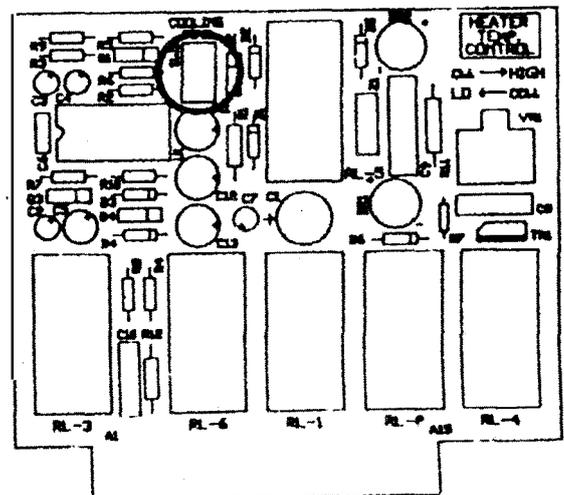

4. Place a coil of strap on the left flange allowing the shaft to poke through the plastic wrap. Pay-off must be from the top of the coil if the friction brake is to operate properly, as shown in Figure 11.
5. Replace the right flange and reinstall the lock.
6. At this time the securing straps can be removed from the coil of strap.
7. Place the dispenser assembly back into the rear-end of the machine. Make sure the assembly is placed in properly. The lock should be positioned to the right. This can be verified by noting that the drag arm of the friction brake contacts the left dispenser flange.
8. When installed, close the rear panel door.

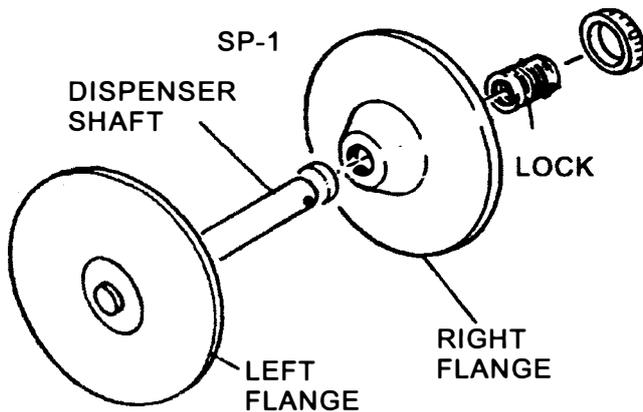


FIGURE 10. DISPENSER ASSEMBLY

THREADING STRAP THROUGH MACHING

1. The threading procedure involves routing strap from the dispenser and up through the strapping head. Refer to Figure 11 and proceed as follows:
Open the right-hand door and pull about 3 feet (1M) of strap from the coil.
2. Thread the strap through the looper (B), pass it under (C) and allow it to exit the cabinet. Close the right-hand door.
3. pull up on the strap, then insert the lead-end between the guide and roller (D).
4. Continue to push the strap through the head until it can be seen at point (E).

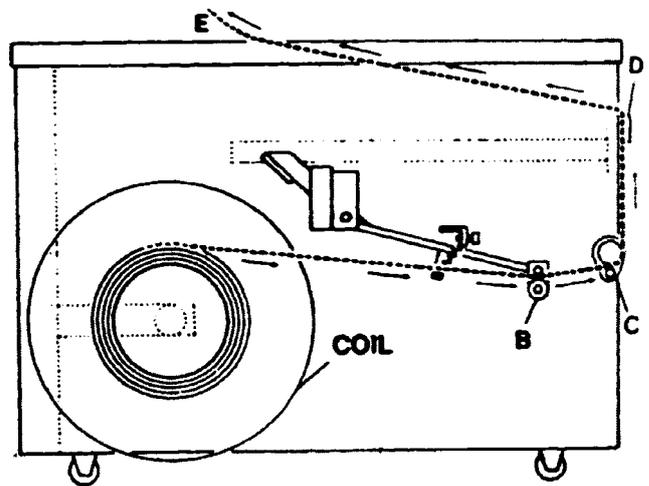


FIGURE 11. STRAP THREADING DIAGRAM

STRAPPING CYCLE

The machine is now ready for strapping a package. To operate the SP-1, proceed as follows:

1. Push the power switch to the "ON" position and allow the hot knife 5 seconds to reach operating temperature.
2. Place a package on the table top, directly above the sealing head. Allow the package to contact the two package stops.
3. Grasp the strap on the left side on the package, bring it over the package and insert the leadend into the strap closes LS1, the strap will be tensioned, welded and then released, all automatically. "CAUTION!!"
4. Remove the strapped package and note the length of the strap fed out for the next cycle. Adjust the timer as needed.
5. Note the condition of the weld and the tension of the tie on the package. If the condition of the weld or the level of tension is unsatisfactory, adjust the hot knife temperature or the tension level as needed. Ref: Operating Adjustments.

OPERATING ADJUSTMENTS

ADJUSTING TENSION

1. If tension adjustment is required, proceed as follows:
Loosen the locking knob at the right end of the machine.
2. Turn the knurled knob, located at the rear of the machine, clockwise to increase tension, counterclockwise to decrease tension.
3. When set to the desired tension level, tighten the locking knob.

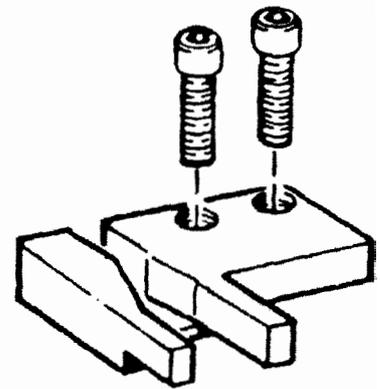


FIGURE 12. EXIT GUIDE

ADJUSTING HOT-KNIFE TEMPERATURE

If the weld appears to be only minimal, it may be that the temperature is improperly set. Make all corrections, in small increments, according to the following conditions:

RAISING HOT-KNIFE TEMPERATURE-If the weld appears to have insufficient heating, turn the hot-knife rheostat (item 19 on the PC board), in a clockwise direction.

LOWERING HOT-KNIFE TEMPERATURE-If the condition of the weld appears to have been over heated, turn the rheostat counter clockwise.

REPLACING STRAP GUIDES

Each machine is shipped with 4 sets of strap guides. The strap guide sizes supplied are for strap of 1/4" (5-6mm), 3/8" (10mm) 1/2" (13mm) and 5/8" (16mm) respective.

Note: Each set consists of an exit and re-entry guide. Ref: Fig. 12 & 13 for identification.

Fig. 14, shows the correct location of each guide. Be sure not to inter-mix the sets as feeding reliability will be affected.

Note: when installing the guides be sure not to over-tighten the mounting screws.

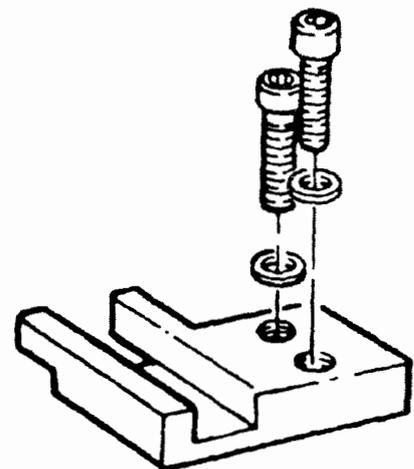


FIGURE 13. ENTRY GUIDE

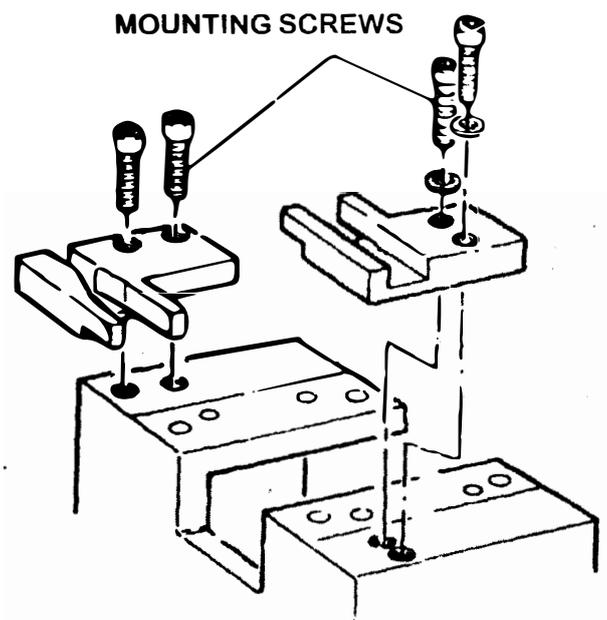


FIGURE 14. GUIDE LOCATION

PRINCIPLES OF OPERATION

GENERAL

The trapping cycle can be divided into three distinct operations:

- a. Grip and tension
- b. Weld, cut, and release
- c. Feed

The following descriptions refer to Figures 15 through 20. Note that both the mechanical and the control functions of the micro switches are described.

1. **NEUTRAL POSITION.** When the strap is initially threaded through the machine, it enters the head under the strap guide and over roller D, between two sets of feed and tension rollers and on through a slot in the end gripper. It then passes beneath anvil, over the welding clamp and holding gripper and out into the strap channel on the left-hand side of the table top where the operator has access to it.

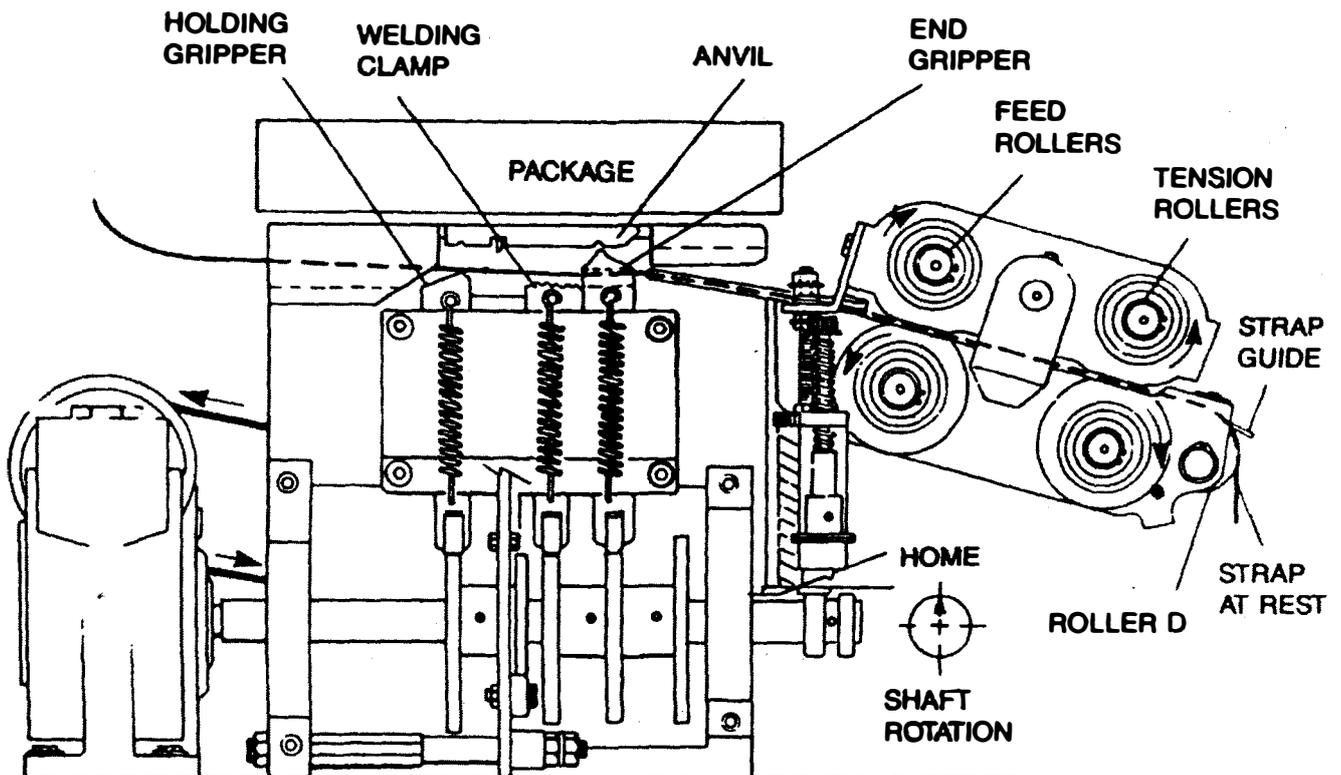


FIGURE 15. NEUTRAL POSITION KEY

2.ENCIRCLING PACKAGE: TRIPPING LS1.Grip and tension is initiated by the operator who encircles the package with the strap and inserts the strap end into the slot of the upper strap guide on the right-hand end of the machine.In doing so,the strap is guided between the gripper portion of the end gripper and anvil then into a slot in the anvil where it makes contact with the start switch detector lever.As the lever moves to the left,it trips the cycle start switch, Ls1.

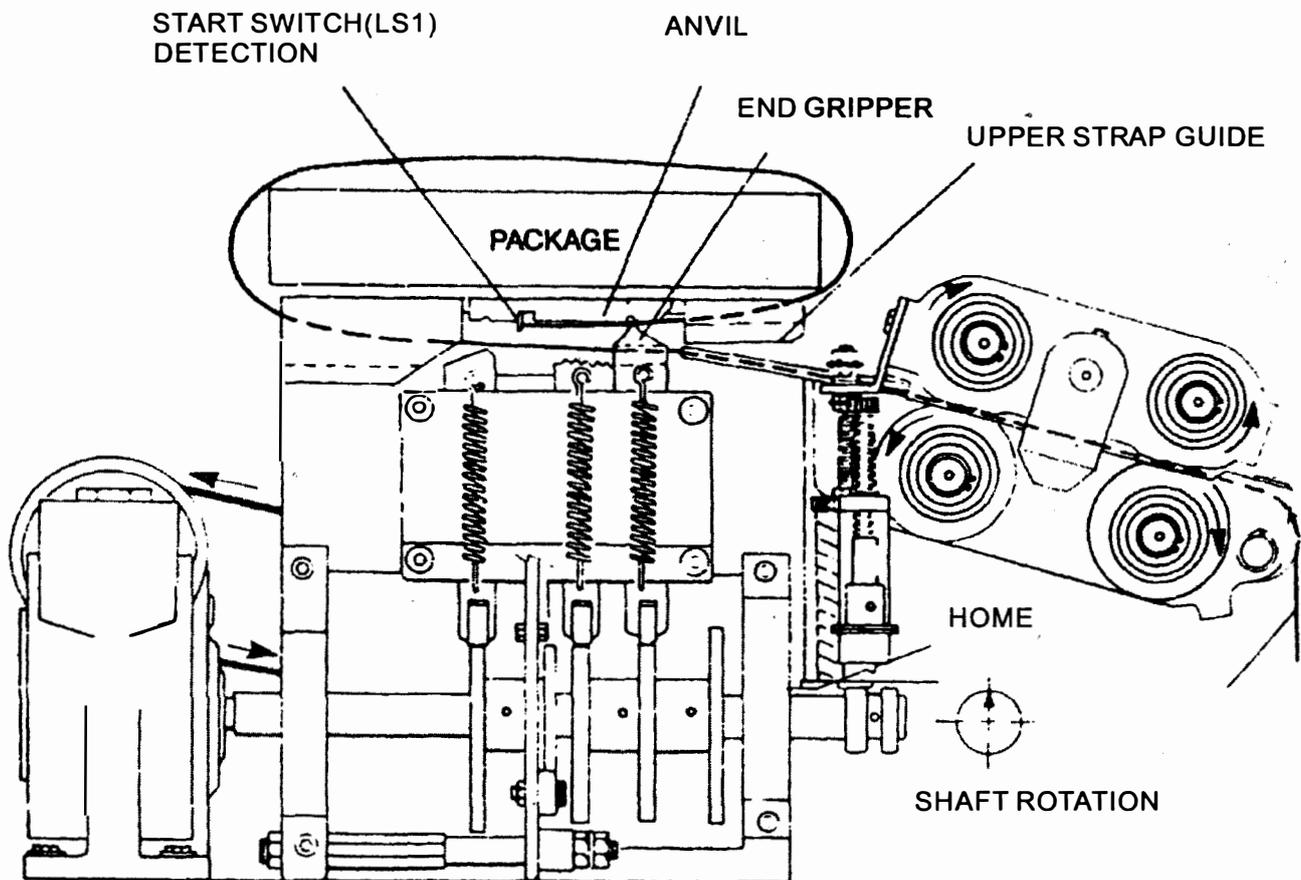


FIGURE 16. ENCIRCLING PACKAGE; TRIPPING LS1

3. **TENSION.** When Ls1 is closed, the electromagnetic clutch energizes and the cam shaft rotates approximately 45 degrees. This small amount of shaft rotation is controlled by LS3, mounted at the right-hand end of the cam shaft. When LS3 closes it de-energizes the electromagnetic clutch and the end gripper will have been moved upward to contain the upper strap beneath the anvil.

The 45 degrees of cam rotation brings the LS4 surface of the cam into play with the tension lever. The tension lever pivots and closes the tension rollers. The tension rollers close against the strap, drawing it back through the head, thus tensioning it around the package. When full tension has been drawn, the electron tension detector reacts at same time, the electromagnetic clutch energizes again.

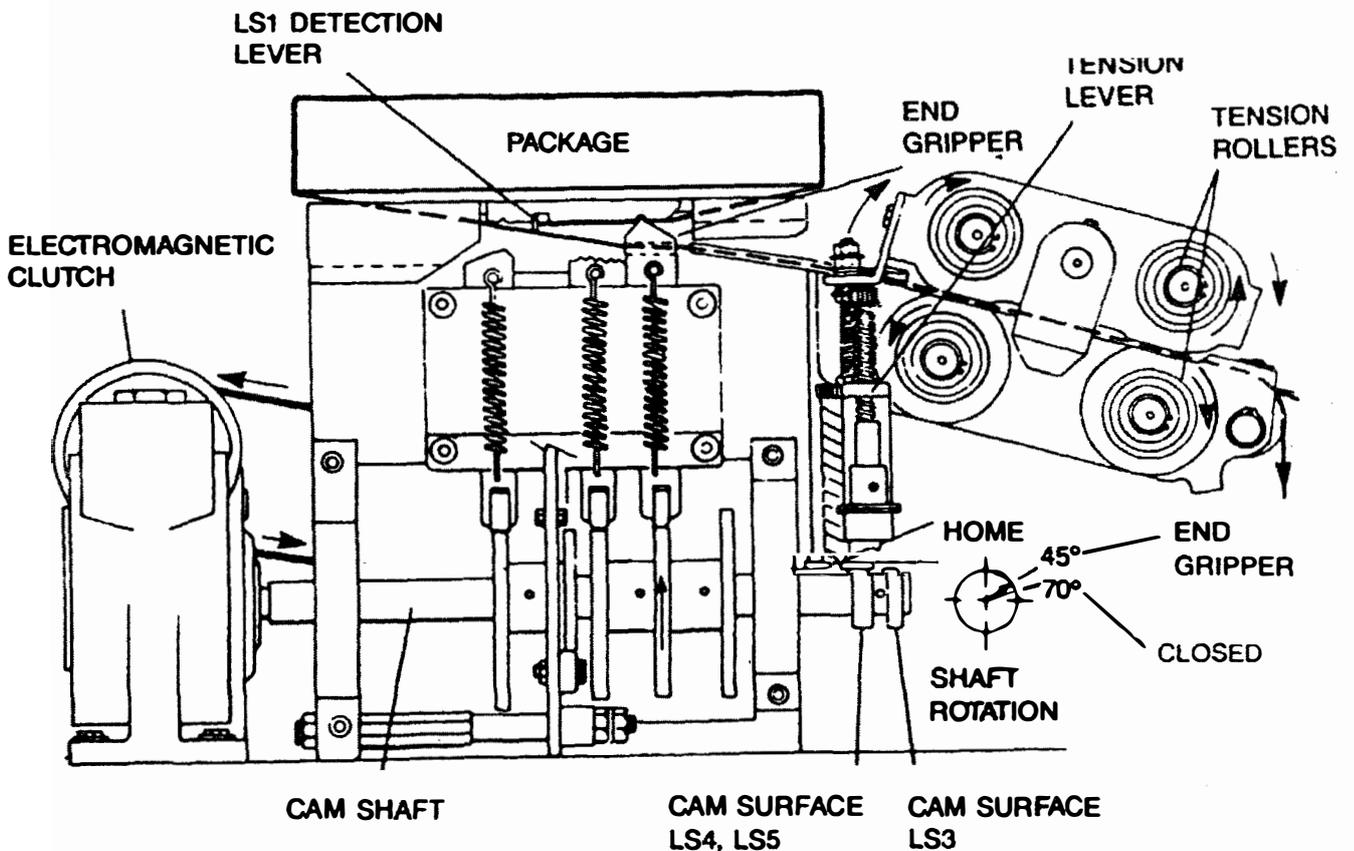


FIGURE 17. TENSION

4. **HOLDING GRIPPER RISES: HOT-KNIFE MOVES INWARD.** Momentarily electron tension detector energizes the control circuit to energize the electromagnetic clutch and turn the cam shaft. As the cam shaft turns, the holding gripper rises to contain the other end of the strap beneath the anvil. The tension lever is lowered to release tension and the welding clamp begins to rise.

It's important to note that all tension to the strap must be released before the strap is cut, otherwise the strap-end could be damaged and feeding reliability will be affected.

The hot-knife moves in between the two layers of strap.

NOTE: TENSION ROLLERS ARE RELEASED AND STRAP IS AT REST

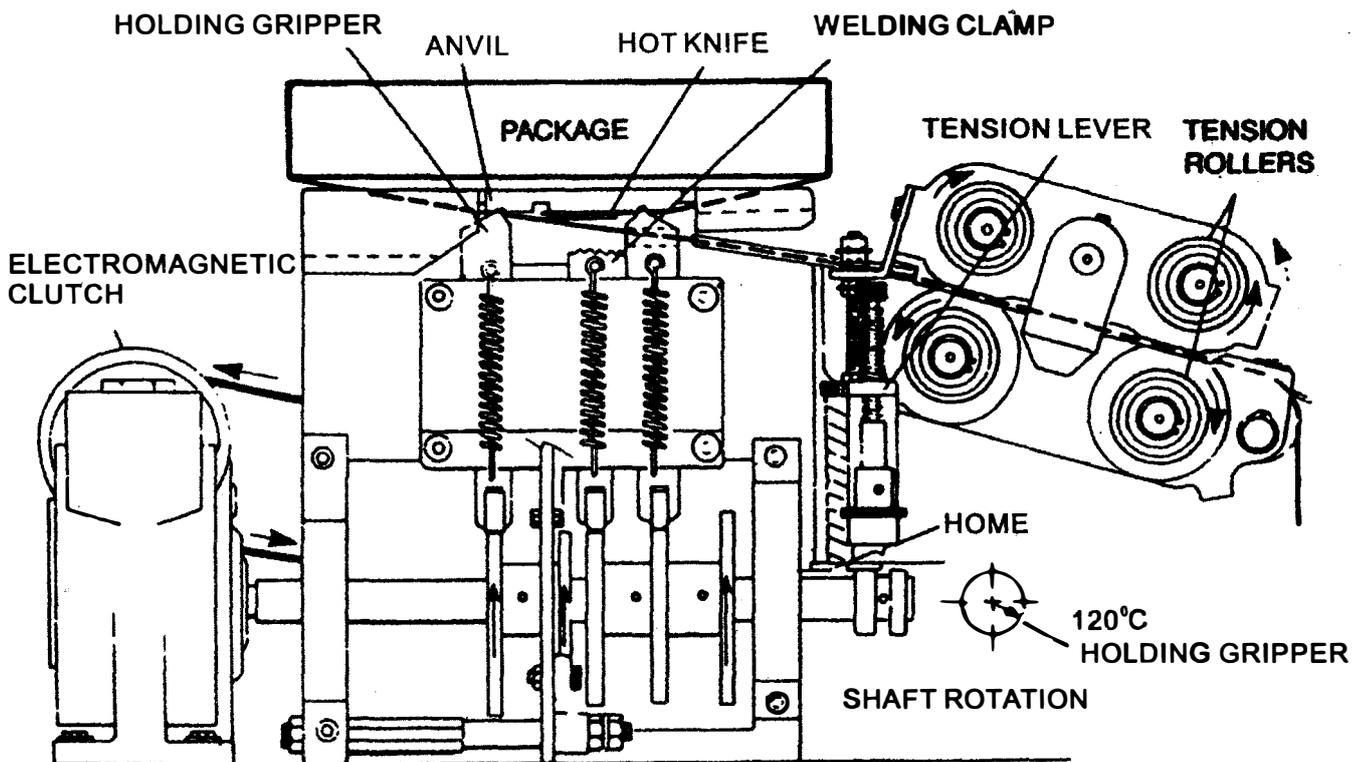


FIGURE 18. HOLDING GRIPPER AND HOT-KNIFE

5. RAP IS CUT ;WELD IS MADE.The welding clamp cuts the strap during it's upward movement then pushes the upper surface of the lower strap againsts the lower surface of the hot-knife.It then pushes the hot-knife against the lower surface of the upper strap.

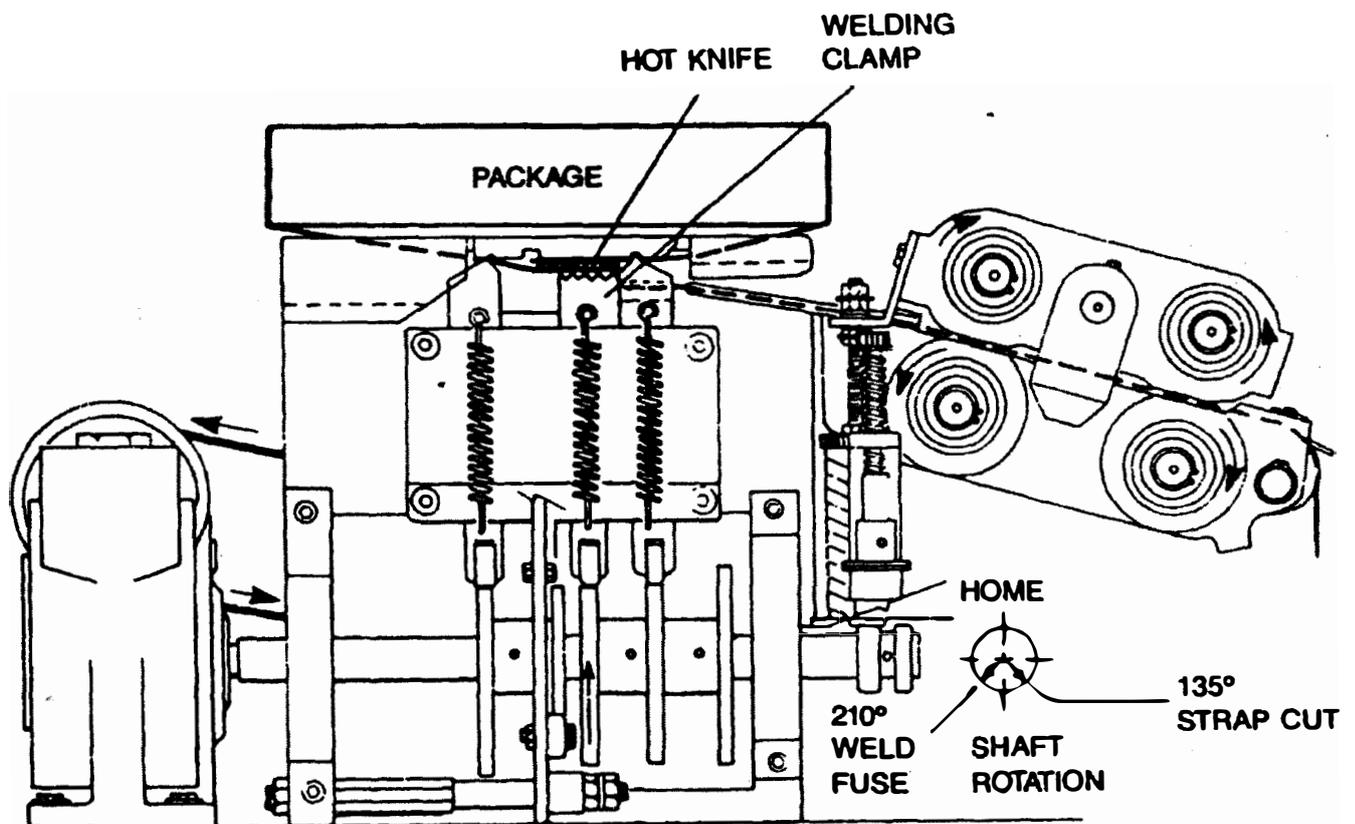


FIGURE 19. STRAP IS CUT & WELD IS MADE

6. WELD IS RELEASED; HEAD RETURNS TO HOME POSITION. The hot-knife retracts and the welding clamp pushes then two molten surfaces together, welding the strap.

LS4 closes and stops the cam shaft for approximately 1/2 second. After this short delay, to ensure that the strap fuses properly, the cam shaft again turns and the holding gripper, the welding clamp and the end gripper retract to the neutral position.

The anvil then retracts and the welded strap is released to the lower side of the package.

The cam shaft returns to the home position and closes LS3 and LS5. The electromagnetic clutch is de-energized by LS3 while LS5 energizes SOL1. As the solenoid pulls down on the tensioning lever, the feed rollers close against the strap, pushing it through the head and out into the strap channel. The feed timer de-energizes and SOL1 is released.

Strap feed stops and the machine is ready for the next cycle.

NOTE: SOL1 ENERGIZES TO CLOSE FEED ROLLERS AND FEED STRAP AFTER THE CAM SHAFT REACHES HOME POSITION

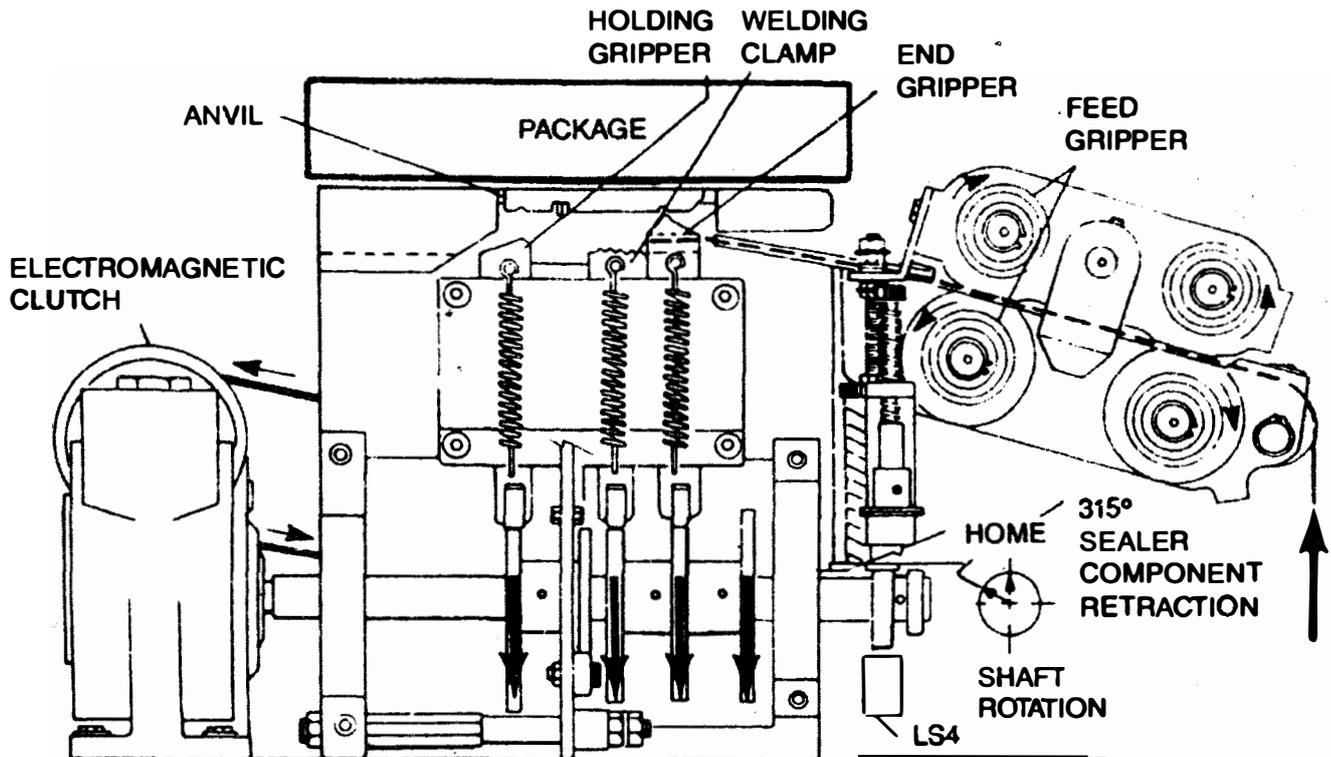


FIGURE 20. WELDED STRAP IS RELEASED; HEAD IS IN HOME POSITION; STRAP FEEDS

SERVICE ADJUSTMENTS AND CLEARANCES

ANVIL TO ensure that the anvil operates smoothly, a minimum clearance between the anvil and the left and right guides must be maintained. To adjust, proceed as follows:

1. Make sure the right-hand guide is securely mounted.
2. Loosen the two left-head guide mounting screws.
3. Insert a shim, .002"(.050mm) thick .118"(3mm) wide by 5"(130mm) long between the shoulder of the anvil and the left guide.
4. Push the left guide against the anvil and tighten the left guide mounting screws.
5. Remove the shim and check to make sure the anvil moves smoothly.

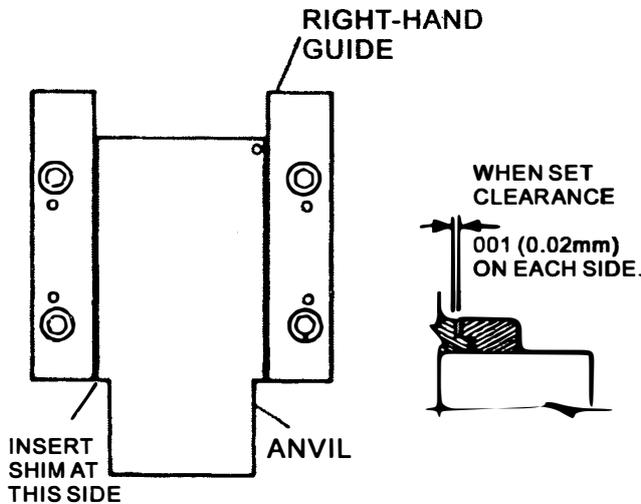


FIGURE 21. ANVIL CLEARANCE

SWITCH CAM: The switch cam is a two level cam. The inner cam actuates LS4 and LS5. The outer cam actuates LS3.

To make sure the cams are set properly, proceed as follows:

1. Make sure the machine is in the neutral or home position.
2. If the micro-switches need adjusting, loosen the mounting screws and set LS4 and LS5 as seen in FIGURE 22. When properly set, tighten the mounting screws.

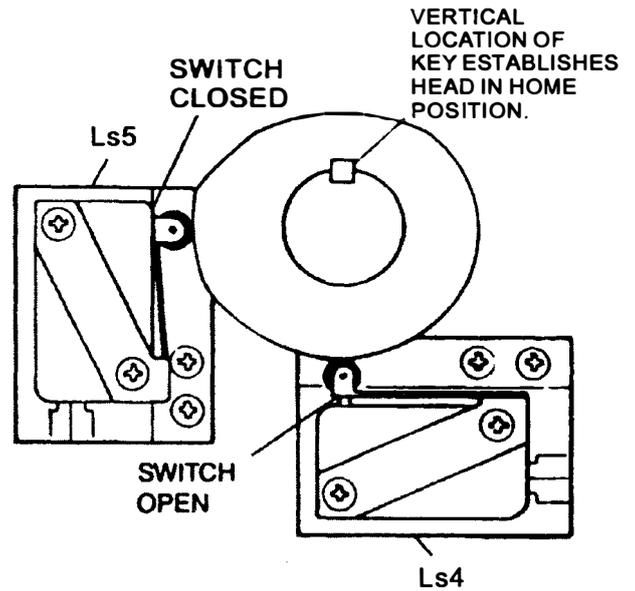


FIGURE 22. Ls4 AND Ls5

3. Position Ls3 as shown in Figure 20. When set, tighten the mounting screws.


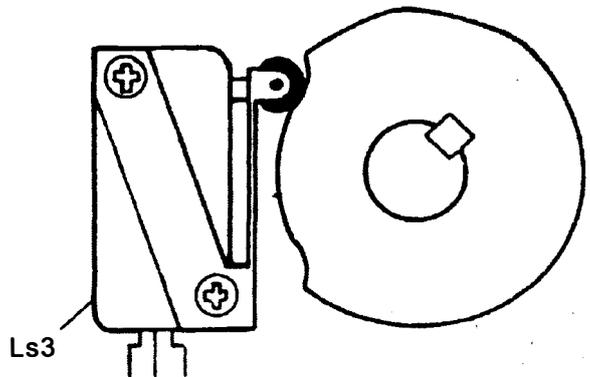


FIGURE 23 Ls3

WELDING CLAMP AND END GRIPPER. To adjust the clearance between the welding clamp and the end gripper, refer to Figure 23 and proceed as follows:

1. Remove the anvil.
2. Loosen the two socket head cap screws that secure the "L" shaped adjustment bracket to the casting.
3. Push the block left or right to adjust the clearance. The clearance should not exceed .001" (0.02mm).
4. When set, securely tighten the two mounting

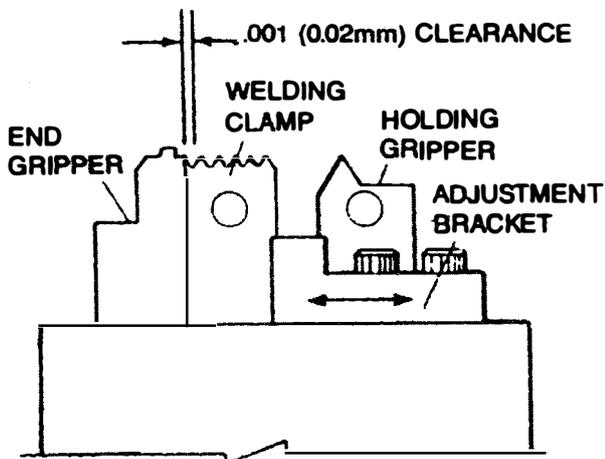

PARTS SEEN FROM REAR SIDE OF HEAD

FIGURE 24 WELDING CLAMP AND END GRIPPER CLEARANCE

Note: If the cutting surface of the welding clamp has become dull, the welding clamp can be turned 180 degrees, thus doubling the life of the part.

TENSION LEVER. Before making any adjustments to the tension lever, check to see if the tension lever is in a level condition. To check and adjust if need be proceed as follows:

1. Manually turn the rotor of the electromagnetic clutch until the key, seen at the end of the cam shaft, is positioned as shown in Figure 25.

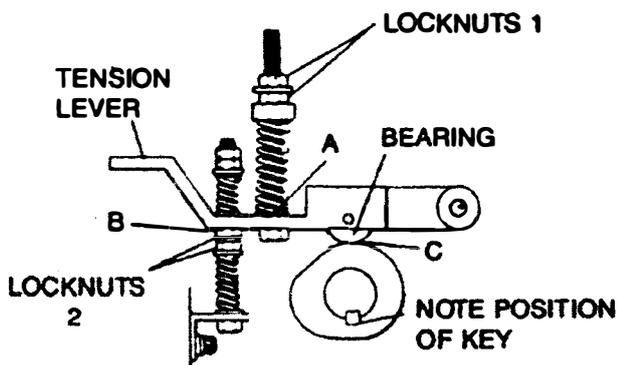


FIGURE 25. ADJUSTING TENSION LEVER

2. make sure the tension lever bearing is in contact with surface of the cam.
3. If there is no clearance at points A, B, and C then the tension lever is considered to be level.

4. If there is clearance at any point, loosen locknuts (1) and (2) and adjust all clearance out at points A, B, and C.

5. When set, tighten the locknuts.

FEED AND TENSION ROLLERS. When the machine is in the neutral position, the feed and the strap. The clearance between the rollers should be $.040'' (1.0\text{mm})$. To adjust the feed rollers away from the strap proceed as follows:

1. Loosen the locknuts and turn all 4 nuts upward.

This will raise the angle plate, pivoting the feed rollers upward. Make all adjustments in very small increments. When set, insert a $.020'' (0.5\text{mm})$ shim between the angle plate and the locknut B and tighten locknut A against locknut B.

2. Remove the shim and press down on the angle plate. Tighten the locknuts, C and D.

To adjust the tension rollers away from the strap, reverse the above procedure.

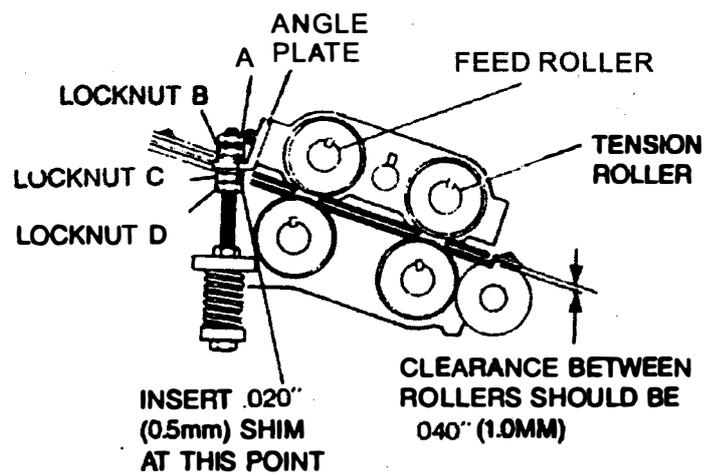


FIGURE 26. ADJUSTING FEED AND TENSION ROLLERS

MAINTENANCE

WARNING

BEFORE SERVICING MACHINE

Wear safety glasses with side shields which conform to ANSI standard Z87.1.



Failure to wear safety glasses could result in severe personal injury or blindness.

PROTECT YOUR EYES

- Only trained personnel should service machine.
- Unless specified, shut off and disconnect all electrical power.
- Follow all service instructions.
- Make sure the hot-knife blade is cool before servicing.
- Use the correct tools.
- Never adjust, repair or oil moving machinery.



READ GENERAL SAFETY INSTRUCTIONS, PAGE 2 OF THIS MANUAL.

GENERAL. Periodic checks of all drive belts for replacement should be made to prevent worn out or stretched belts which will affect tensioning.

LUBRICATION. Make sure the machine is clean before applying lubricants to the points shown in the figure below. Note: Use a brush or compressed air to dispose of debris.

TENSION TRIP ARM ASSEMBLY SLEEVES. apply a few drops of light machine oil to the edge of the sleeve so that the oil can penetrate to the shoulder of the screw.

TOP SLIDE, GUIDE PLATES, WELDING CLAMP, END GRIPPER, AND HOLDING GRIPPER. Apply light machine oil to these parts at the points indicated in Figure 27.

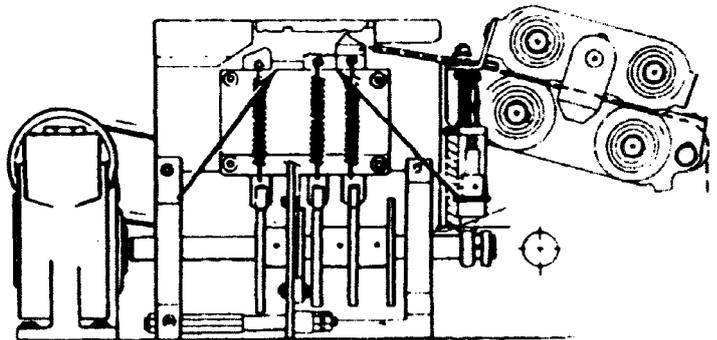


FIGURE 27 .LUBRICATION POINTS

GEAR REDUCER. Replace the oil in the gear reducer once a year in the following manner:

1. Remove the oil filling plug at the top of the reducer.
2. remove the lower plug and allow the oil to drain from the gearing.
3. Reinstall the lower plug and fill with gear oil
4. Reinstall the upper plug

Note: The following parts should NEVER be lubricated:

1. Electromagnetic clutch
2. Roller assemblies
3. Belts and pulleys
4. Clutch disc

TROUBLESHOOTING

SYMPTOM: Strap jams in strapping head while feeding.

CAUSE

1. Debris accumulation in feed/tension roller area.

REMEDY

1. **Disassemble the roller assembly and remove debris. See Adjustment Section, Figure 23.**

SYMPTOM: Strap pulls from head before seal and cut-off.

1. Worn gripper.

1. **Replace gripper**

SYMPTOM: Strap will not feed.

1. Solenoid 1 will not activate.

1. **Adjust the clearance of LS5 in relation to the Switch cam. Refer to Figure 22.**
2. **Replace LS5.**
3. **Adjust LS3 if needed to ensure the head stops in HOME position.**

SYMPTOM: Strap is not being cut-off upon completion of strapping cycle.

1. LS3 inoperative.
2. LS3 improperly adjusted.
3. Clearance between welding clamp and end gripper too great.
4. Cutting surface on welding clamp is dull.

1. **Replace and adjust LS3, refer to Fig. 23.**
2. **Adjust LS3 as required.**
3. **Adjust the clearance as detailed in Adjustments and Clearances Section.**
4. **Turn the welding clamp 180° to bring new cutting surface into play. Details in Adjustments and Clearances Section.**

SYMPTOM: Machine will not complete seal and cut-off.

1. The belt that activates the tension trip arm is broken or has come off the pulleys.
2. LS2 inoperative.

1. **Replace the belt, if necessary. Remount the belt if it has come off the pulleys. Refer to Parts List, Figure 4.**
2. **Replace LS2. Refer to Parts List, Fig. 4.**


SYMPTOM: Poor strap weld.

1. Hot-knife temperature is too high or too low.
2. The 5 amp fuse has blown.

1. **Adjust the hot-knife temperature, Details in Operating Instructions Section.**
2. **Before replacing the 5 amp fuse, attempt to identify the cause of why the fuse failed and make necessary repairs.**

PARTS LIST, FIGURE 1

KEY	QTY	PART NO	DESCRIPTION	KEY	PART NO	DESCRIPTION
1	1	660124	Main body black	4,8,18,22,23,27,28	660120A	End gripper assembly
2	1	660125	Guide slot	5,8,18,22,23,27,28	660121A	Welding clamp assembly
3	1	660126	Guide plate	6,8,18,22,23,27,28	660122A	Holding gripper assembly
4	1	660120	End gripper			
5	1	660121	Welding clamp			
6	1	660122	Holding gripper			
7	1	660123	L-type angle plate			
8	3	660119	Clevis			
9	1	660127	Spring hook plate			
10	1	660130	Separating arm			
11	1	660134	Top cover holder			
12	1	660135	Separating plate			
13	1	660136	Guide plate, left hand side			
14	1	660116	Guide plate, right hand side			
15	1	660115	Limit switch detector lever			
16	1	660117	Separating arm pin, M8 x 140			
17	2	660118	Sleeve, separating arm pin			
18	3	660128	Compression spring, ϕ 2.3 x 10.2 x 39.7			
19	1	660131	Tension spring, short, ϕ 1.2 x 10.2 x 19.6			
20	4	660132	Tension spring, long, ϕ 1.0 x 10.8 x 21			
21	1	660224	Limit switch, heavy, LS-1 (AH74505)			
22	4	660436	Ball bearing, 635ZZ			
23	3	660129	Spring hook			
24	1	660133	Spring hook			
25	1	660475	Spring pin, 4din. x 14			
26	1	660478	Spring pin, 5din. x 20			
27	3	660477	Spring pin, 5din. x 14			
28	5	660474	Spring pin, 3din. x 18			
29	1	660155	Brass bushing, ϕ 4 x 5 x 8			
51	4	660316	Socket head cap screw, M5 x 12			
52	1	660314	Socket head cap screw, M5 x 6			
53	3	660318	Socket head cap screw, M5 x 16			
54	4	660319	Socket head cap screw, M6 x 16			
55	2	660320	Socket head cap screw, M5 x 20			
56	2	660330	Socket head cap screw, M6 x 25			
57	2	660334	Socket head cap screw, M6 x 50			
58	2	660363	Socket head set screw, M6 x 6			
59	1	660380	Phillips head machine screw, M4 x 15			
60	1	660390	Flat head machine screw, M3 x 20			
61	3	660374	Pan head self tap screw, M3 x 15			
62	4	660398	Hex nut, M3			
63	1	660399	Hex nut, M4			
64	1	660400	Hex nut, M5			
65	2	660402	Hex nut, M8			
66	6	660419	Lock washer, M3			
67	2	660420	Lock washer, M4			
68	7	660421	Lock washer, M5			
69	1	660423	Lock washer, M8			
70	8	660422	Lock washer, M6			
71	4	1-PLWX-0616-2	Plain washer, M6 x 16 (2mm)			
72	1	660071	Retainer, top cover holder			
73	1	660553	Socket head cap screw, M4 x 16			

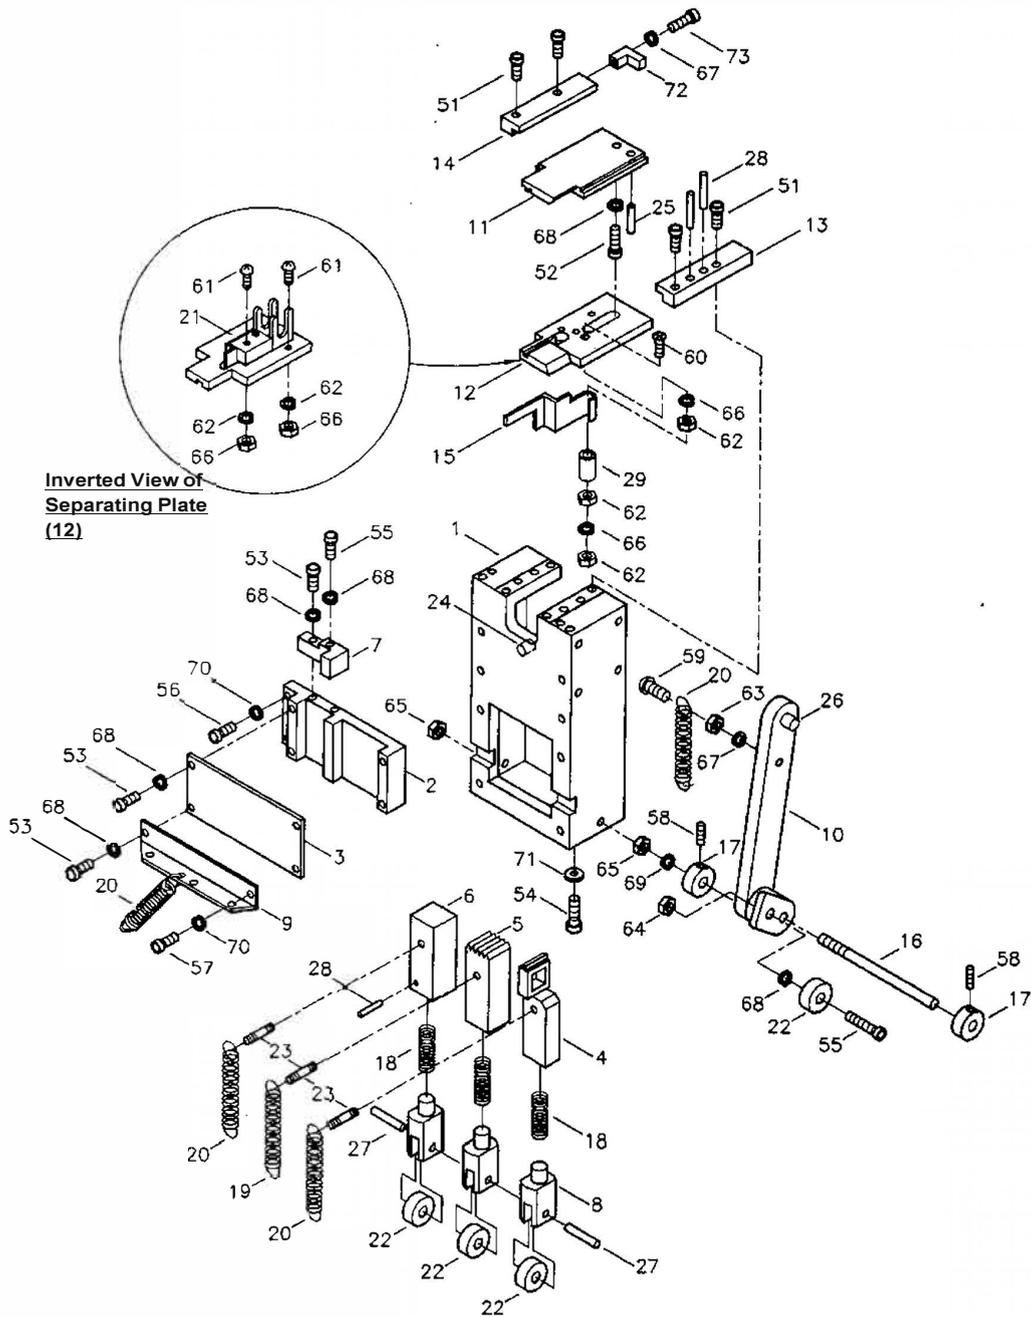

**Inverted View of
Separating Plate
(12)**

⚠ WARNING
 All parts must be periodically inspected
 and replaced if worn or broken. Failure to
 do this can affect operation and
 present a safety hazard.

FIGURE 1 WELDING COMPONENTS

PARTS LIST, FIGURE 2

KEY	QTY	PART NO	DESCRIPTION
1	1	660137	Reduction gear
2	1	660138	Clutch
3	1	660139	Pulley
4	2	660441	Clutch ball bearing, 6201ZZ
5	1	660140	Motor fan
6	1	660141	Motor pulley
7	1	660165	Motor, AC110V & AC220V, 60HZ, 1 ϕ
		660165A	Motor, AC 220V, 50HZ, 1 ϕ
		660165B	Motor, AC 240V, 50HZ, 1 ϕ
8	1	660142	Bearing bracket, cam shaft
9	1	660143	Bearing bracket
		660146	Spacer, ϕ 12 x 8
10	1		
12	1	660151	Cam
13	1	660152	Cam
14	2	660440	Ball bearing, 6003ZZ
16	2	660148	Microswitch seat
17	2	660224	Microswitch, heavy
18	3	660149	Microswitch spring plate
19	1		
22	1	660145	Spacer, ϕ 12 x 4
23		660416	Shim, 0.2mm
23A		660416A	Shim, 0.5mm
25	1	660540	Cam
27	1	660538	Cam
29	1	660542	Cam shaft
30	2	660486	Key, 5 x 5 x 14
31	1	660499	Key, 5 x 5 x 80
32	1	660487	Key, 5 x 5 x 15
33	1	660543	Shim, 2.0mm
34	2	660544	Shim, 3.0mm
51	7	660377	Phillips head machine screw, M4 x 8
52	12	660420	Lock washer, M4
53	2	660403	Hex nut, M10
54	1	660424	Lock washer, M10
55	4	660398	Hex nut, M3
56	4	660354	Hexagon bolt, M6 x 25
57	12	660411	Plain washer, M6 x 16 (2mm)
58	12	660422	Lock washer, M6
59	8	660401	Hex nut, M6
60	4	660353	Hex Bolt, M6x20
62	1	660365	Socket head set screw, M6 x 8
63	2	660316	Socket head cap screw, M5 x 12
64	5	660329	Socket head cap screw, M6 x 20
65	1	660333	Socket head cap screw, M6 x 45
66	2	660373	Phillips head machine screw, M3 x
67	2	660375	30 Phillips head machine screw, M3
68	2	660421	x 20 Lock washer, M5
69	7	660419	Lock washer, M3
70	4	660412	Plain washer, M6 x 16 (1mm)
71	2	660460	Ring, S-17
72		TBD	Phillips head machine screw, M4 x 6
73		TBD	Socket head cap screw, M6 x 25

⚠ WARNING
 All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

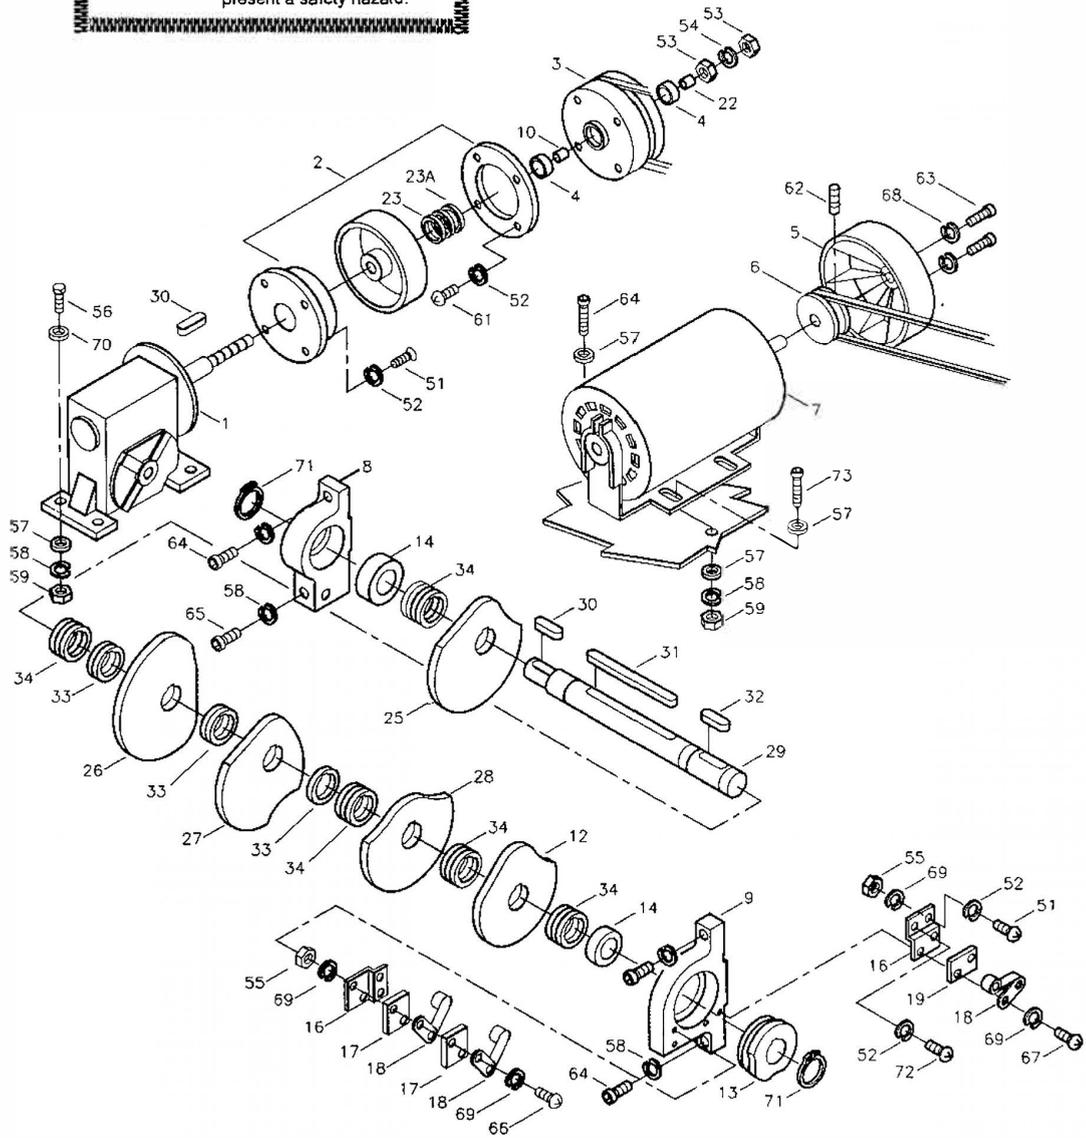


FIGURE 2 DRIVE AND CAM ASSEMBLIES

PARTS LIST, FIGURE 3 (Adjustable guide)

KEY	QTY	PART NO	DESCRIPTION
1	1	660012	Bearing housing, upper
2	1	660013	Bearing housing, lower
3	1	660014	Tightness adjustment shaft
4	1	660015	Roller shaft
5	1	660018	Roller shaft
6	1	660019	Pin
7	1	660016	Roller shaft
8	1	660017	Roller shaft
9	1	660020	Nylon gear, 40 teeth
10	2	660001	Nylon gear, 20 teeth
11	1	660002	Gear
12	1	660003	Steel Gear
13	1	660004	Steel roller
14	1	660005	Plastic roller
15	8	660439	Ball bearing, 6002ZZ
16	7	660006	Plastic circllet
17	6	660007	Circllet
18	10	660008	Circllet
19	1	660009	Strap guide
20	1	660010	Strap guide
22	1	660021	Strap Guide
23	1	660022	Strap guide
24	1	660023	Strap guide
28	2	660491	Key, 5 x 5 x 12
29	7	660487	Key, 5 x 5 x 15
30	1	660489	Key, 5 x 5 x 30
31	9	660463	Ring, S-15
32	1	660461	Ring, S-10
34	1	660486	Key, 5 x 5 x 15
35	1	660556	Electron tension detector
36	1	660556i	Magnet
51	6	660377	Phillips head machine screw, M4 x
53	2	660391	8 Flat head machine screw, M4 x 6
55	1	660316	Socket head cap screw, M5 x 12
56	2	660363	Socket head set screw, M5 x 8
58	6	660422	Lock washer, M6
60	4	660329	Socket head cap screw, M6 x 20
64	1	660421	Lock washer, M5
66	1	660411	Plain washer, M6 x 21
67	1	660365	Socket head set screw, M6 x 8
70	2	660580	Truss head machine screw, M4 x 12
71	2	660581	Tooth lock washer external, M4

⚠ WARNING

All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

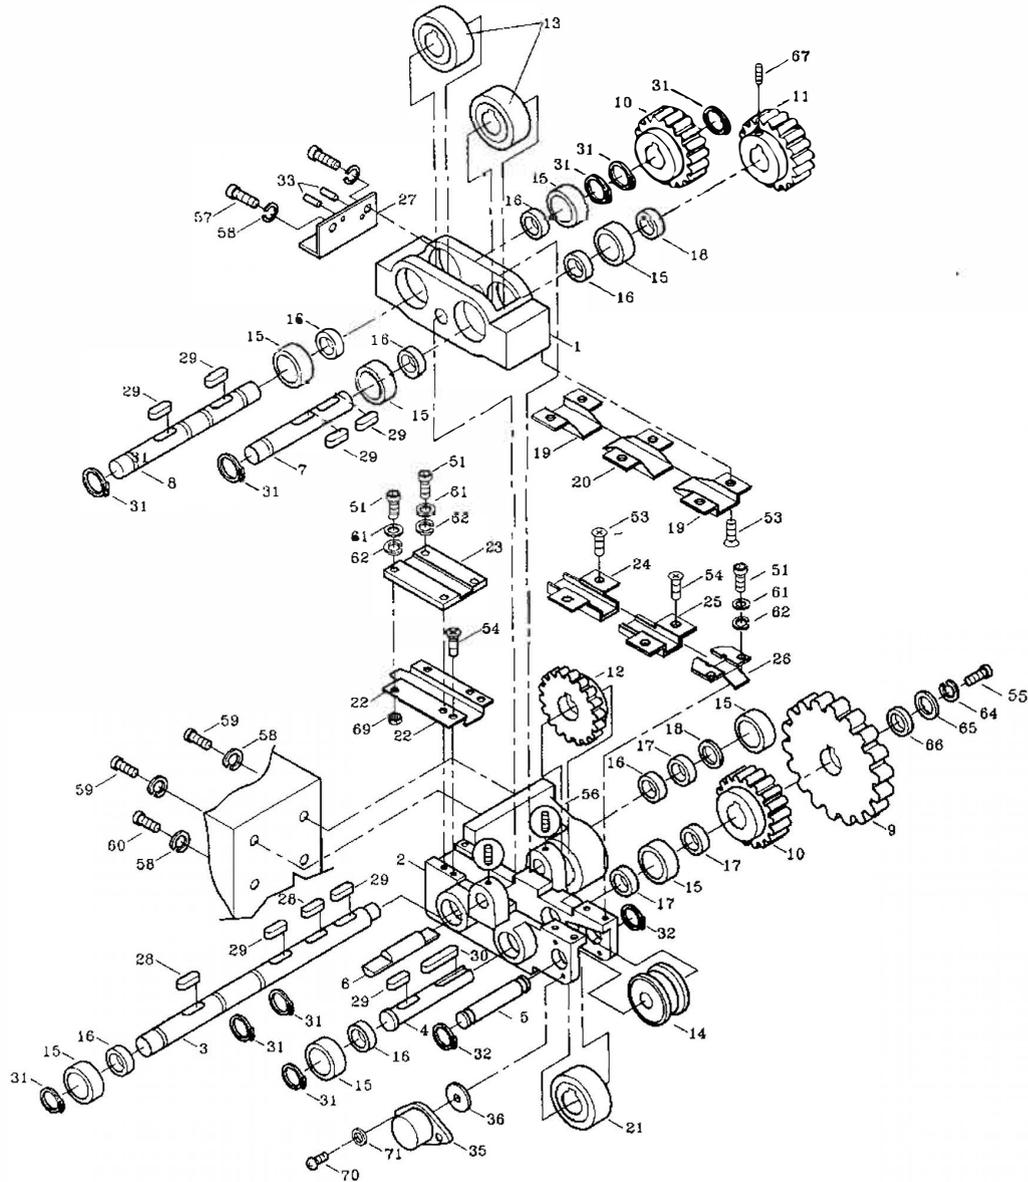


FIGURE 3-2 STRAP FEED/TENSION ASSEMBLY

PARTS LIST, FIGURE 4 (Tension outside)

KEY	QTY	PART NO	DESCRIPTION
1	1	660036	Tightening pulley
2	1	660035	Tightening pulley
3	1	660034	Tightening pulley
4	2	660033	Clutch disc
5	2	660032	Spring guide
6	1	660031	Compression spring, φ 4.5 x 38.5 x 59
7	1	660030	Tightness Adjustment nut
19	2	660495	Belt, K-19
20	1	660496	Belt, M-30
21	1	660046	Transmission seat
22	1	660047	Transmission bracket
23	1	660048	Pulley
24	1	660049	Pulley
25	1	660050	Transmission bracket shaft
26	1	660051	Transmission bracket pin
27	4	660439	Ball bearing, 6002ZZ
28	2	660488	Key, 5 x 5 x 20
29	2	660029	Tightness adjustment sleeve
30	1	660028	Tightness adjustment cover
33	1	660027	Tightness adjustment screw
34	1	660437	Ball bearing, 6000ZZ
35	2	660465	Ring, S-15
36	1		Collar, 16 x 26 x 16
37	1		Copper, φ 5 x 5
52	3	660328	Socket head cap screw, M6 x 16
53	1	660313	Hexagon bolt, M6 x 70
54	4	660365	Socket head set screw, M6 x 8
55	1	660364	Socket head set screw, M6 x 6
56	2	660401	Hex nut, M6
61	4	660422	Lock washer, M6
62	5	660412	Plain washer, M6 x 16 (2mm)
64	1	660421	Lock washer, M5
65	1	660400	Hex nut, M5
67	1	660306	Terminal sleeve, 8
68	1	660413	Ring, R-31

PARTS LIST, FIGURE 5

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660075	Heater arm
2	1	660073	Heater arm screw
3	1	660074	Heater arm side plate
4	1	660072	Heater blade holder
6	1	660070	Heater spring
8	1	660132	Tension spring, long
11	1	660062	Solenoid shaft head
12	1	660067	Bracket
13	1	660066	Solenoid shaft
14	4	660065	Spring cover
15	1	660064	Compression spring
17	1	660059	Tension lever
18	1	660058	Feed back arm screw
19	2	660436	Ball bearing, 635 ZZ
20	1	660057	Adjustable nut
21	1	660056	Compression spring
23	1	660456	Ring, E-12
24	1	660475	Spring pin, 4 dia. x 14
25	1	660060	Compression spring
26	1	660061	Rubber washer
27	2	660476	Spring pin, 4 dia. x 40
28	1	660477	Spring pin, 5 dia. x 20
29	1	660053	Solenoid 110V
		660053A	Solenoid 220V
		660053B	Solenoid 240V
32	1	660076	Guide, 1/4" (6mm)
	1	660077	Guide, 3/8" (10mm)
	1	660078	Guide, 1/2" (13mm)
	1	660079	Guide, 5/8" (15.5mm)
36	1	660080	Guide, 1/4" (6mm)
	1	660081	Guide, 3/8" (10mm)
	1	660082	Guide, 1/2" (13mm)
	1	660083	Guide, 5/8" (15.5mm)
40	1	660084	Instant heating heater plate
51	1	660357	Hex bolt, M6 x 90
52	1	660358	Hex bolt, M6 x 100
53	1	660327	Socket head cap screw, M6 x 12
54	1	660378	Phillips head machine screw, M4 x 16
55	1	660317	Socket head cap screw, M5 x 12
56	9	660421	Lock washer, M5
57	2	660400A	Lock Hex Nut, N5
58	5	660399	Hex Nut, M4
59	2	660420	Lock washer, M4
60	13	660401	Hex Nut, M6
61	9	660422	Lock washer, M6
62	1	660402	Hex Nut, M8
63	2	660423	Lock washer, M8
64	1	660380	Phillips head machine screw, M4 x 15
66	8	660347	Hex bolt, M5 x 12
67	9	660409	Plain washer, M5

! WARNING

All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

KEY	QTY.	PART NO.	DESCRIPTION
68	2	660413	Plain washer,M6×13
69	4	660316	Socket head cap screw,M5×12
70	4	660412	Plain washer,M6×16
71	1	660411	Plain washer,M6×21


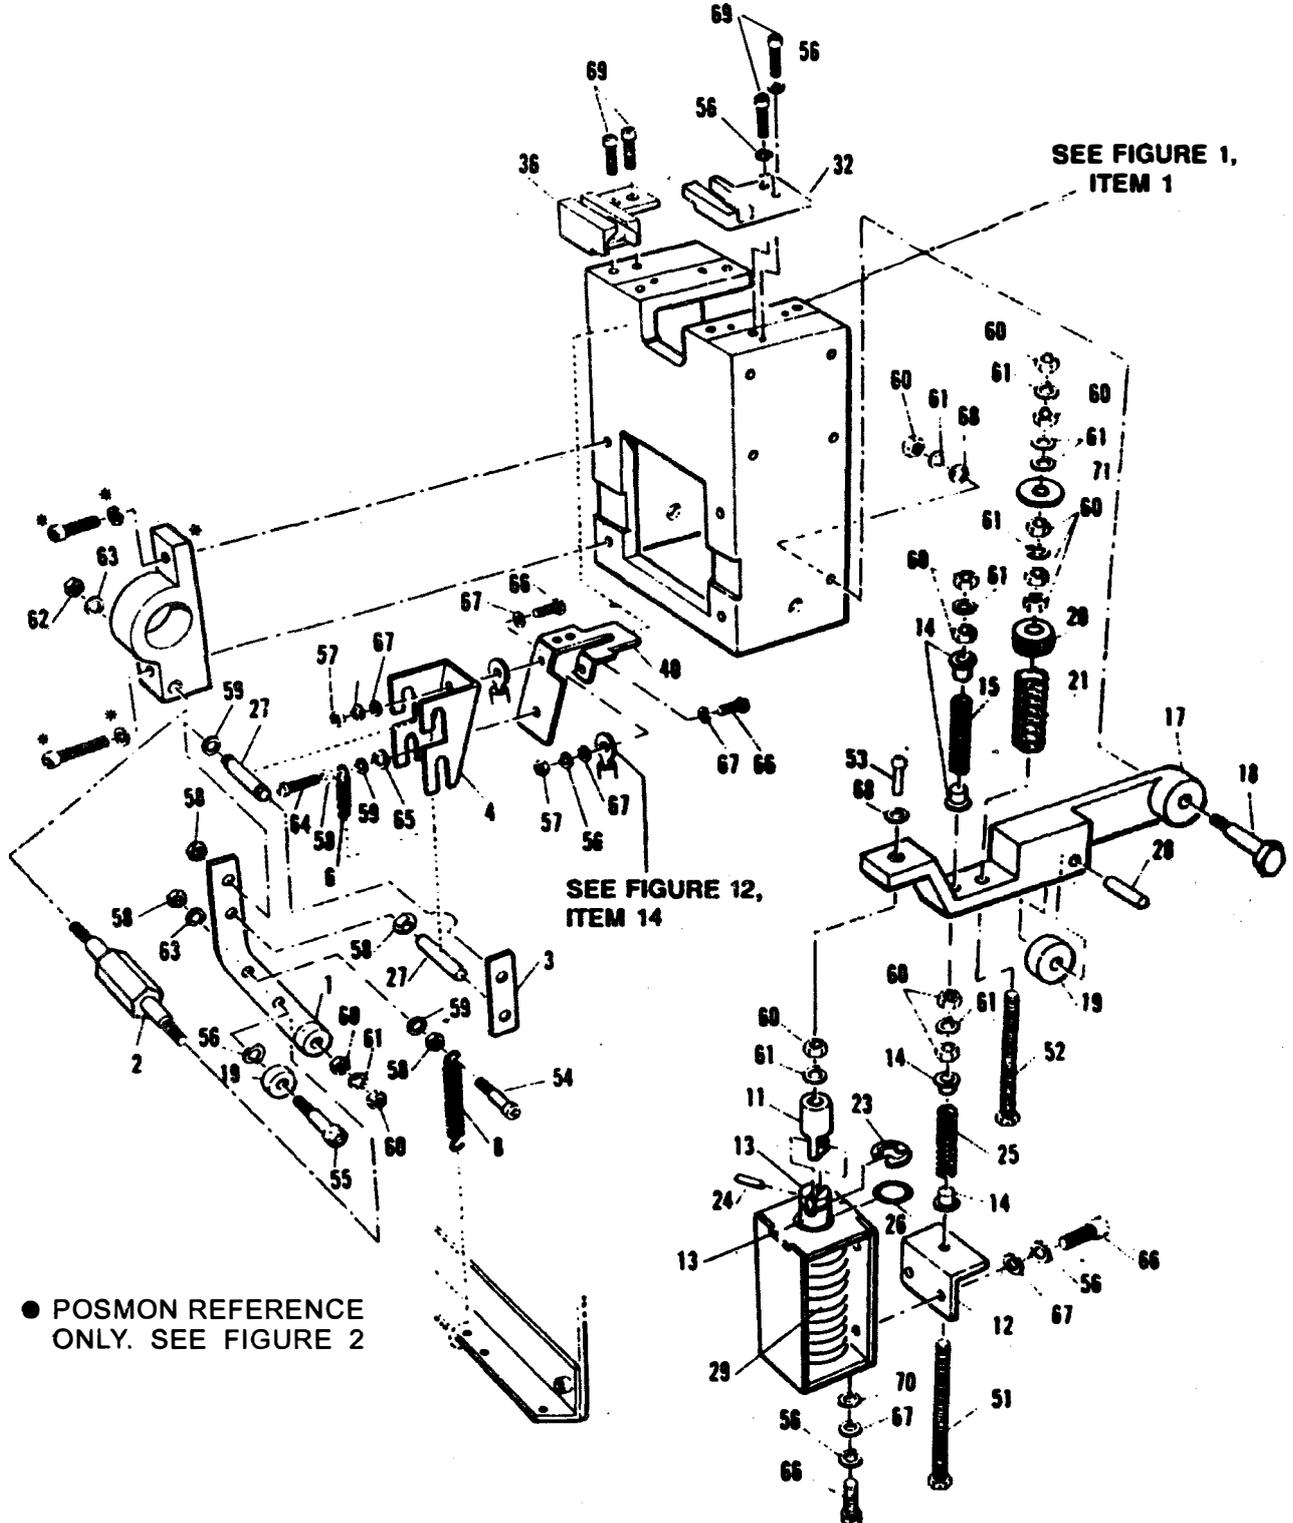


FIGURE 5. HOT-KNIFE AND TENSION LEVER ASSEMBLIES

PARTS LIST,FIGURE 6 SM-101_Gen2.0

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660500	Body
2	1	660096	Door.right hand
3	1	660095	Door.left hand
4	2	660094	Sustaining plate
5	1	660093	Stainless steel top cover
6	2	660092	Package stop
7	1	660091	Plastic roller bracket
8	1	660278	Cable
10	1	660088	Guide plate
11	2	660097	Door holder
13	3	660100	Door magnet
14	2	660101	Wheel swivel
51	25	660352	Hex bolt, M6×15
52	25	660422	Lock washer, M6
53	37	660411	Plain washer,M6×21
54	20	660401	Hex nut, M6
56	7	660402	Hex nut, M8
57	4	660414	Plain washer,M8
58	5	660423	Lock washer, M8
59	2	660372	Phillips head machine screw, M3×10
60	10	660419	Lock washer, M3
61	2	660398	Hex nut, M3
62	8	660371	Phillips head machine screw, M3×6
63	12	660406	Plain washer,M3
64	8	660412	Plain washer, M6(16mm O.D.)

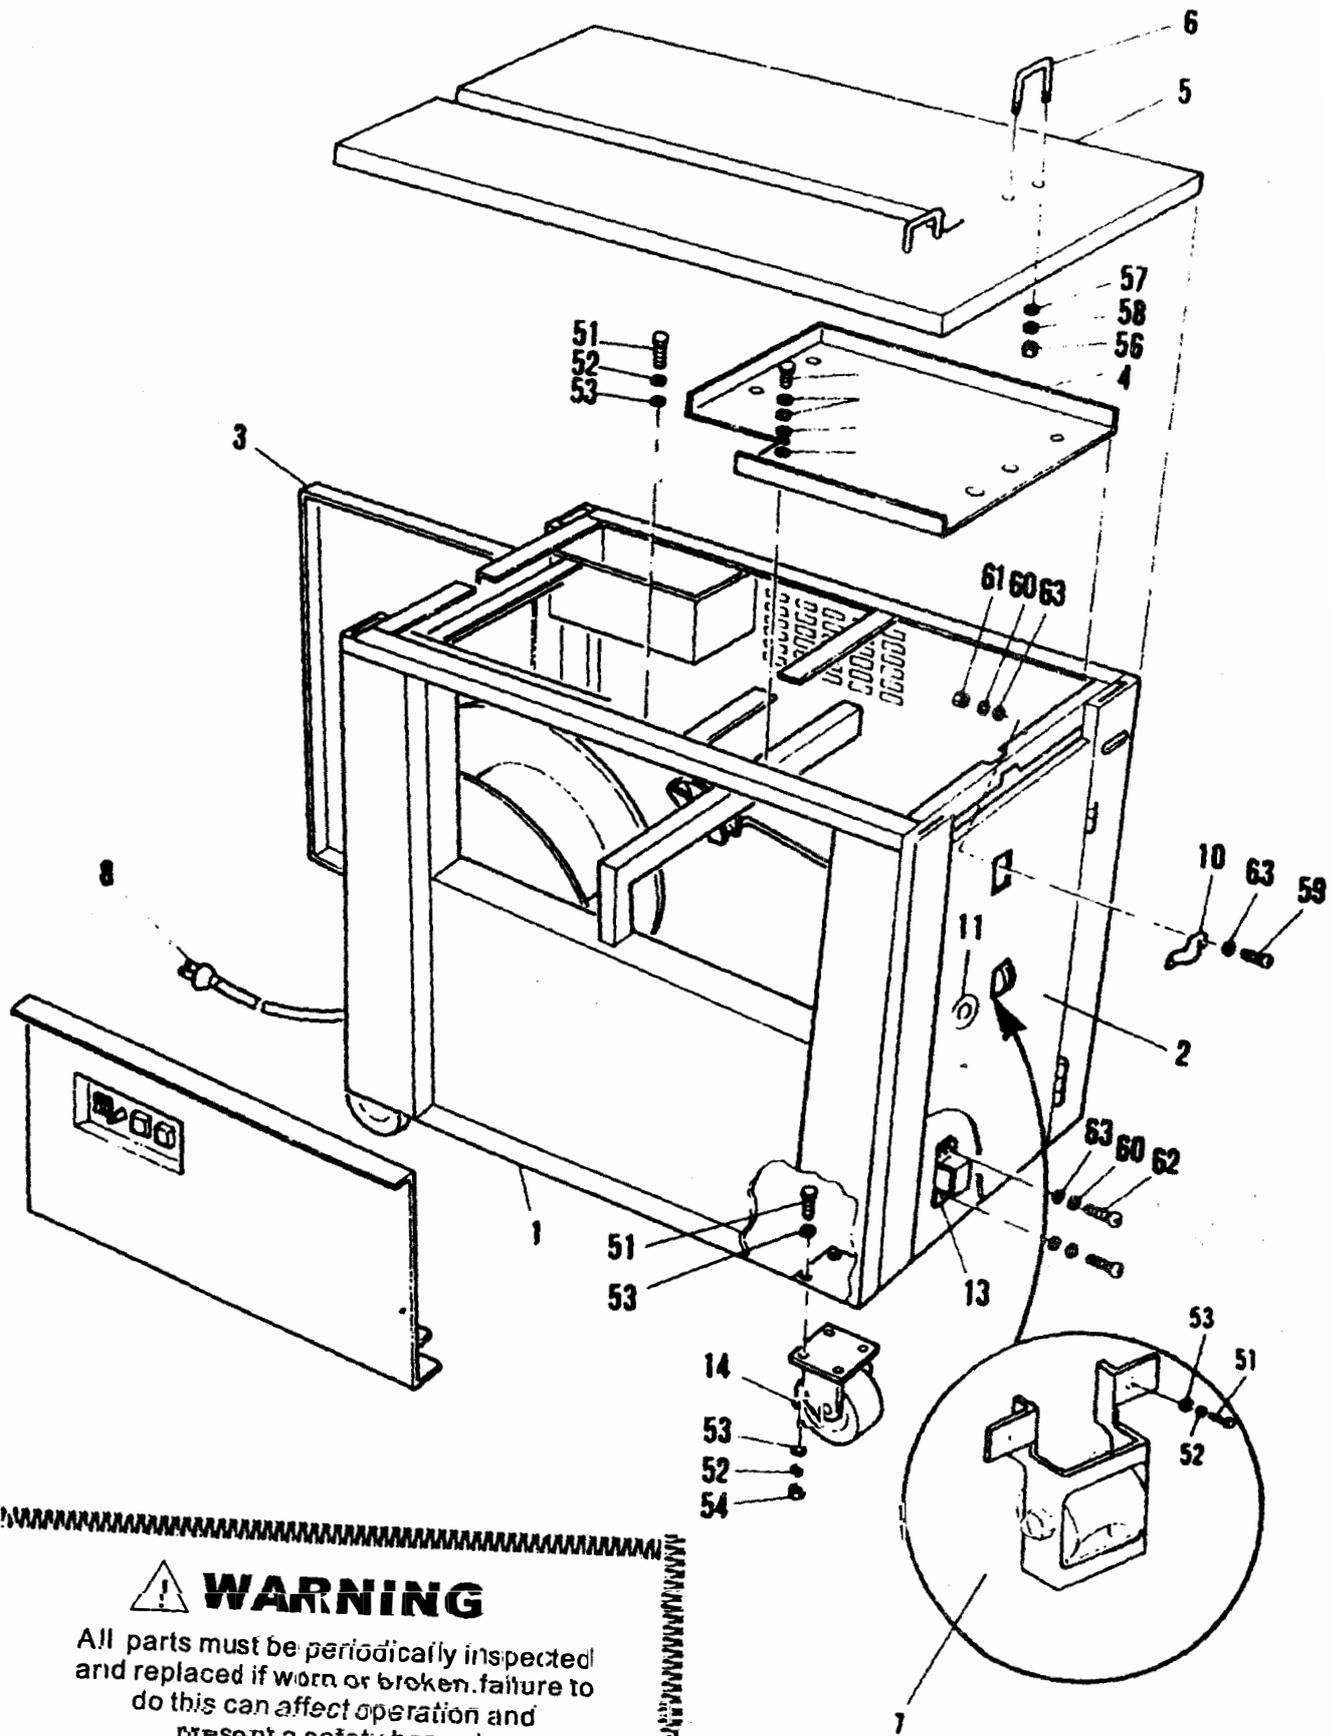

WARNING
 All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

FIGURE 6. CABINET COMPONENTS (SP-1)

PARTS LIST,FIGURE 7 SM-102

KEY	QTY.	PART NO.	DESCRIPTION SM-102
1	1	660601	Body
2	1	660602	Sustaining plate
3	1	660552	Stainless steel top cover
4	2	660092	Package stop
5	1	660088	Guide plate
6	2	660620	Wheel swivel 5/8"
7	1	660091	Plastic roller bracket
8	1	660601L	Metal sheet
10	4	660625	Lock washer, M16
11	2	660628	Wheel fixed 5/8"
12	14	660402	Hex nut, M8
13	14	660423	Lock washer, M8
14	8	660621	Socket head cap screw, M8 x25
15	6	660401	Hex nut, M6
16	8	660422	Lock washer, M6
17	8	660412	Plain washer, M6(16MM o.d.)
18	6	660352	Hex bolt, M6 x15
21	2	660327	Socket head cap screw, M6 x12
22	4	660406	Plain washer, M3
23	2	660372	Phillips head machine screw, M3 x10
24	2	660419	Lock washer, M3
25	2	660398	Hex, nut, M3
27	8	660414	Plain washer, M8
28	2	660637	Screw
29	2	660639	Pin
30	2	660640	Spring
32	4	660641	Ring S-10
33	2	660638	Screw
34	2	660065	Spring cover
53	6	660411	Plain washer, M6 x21


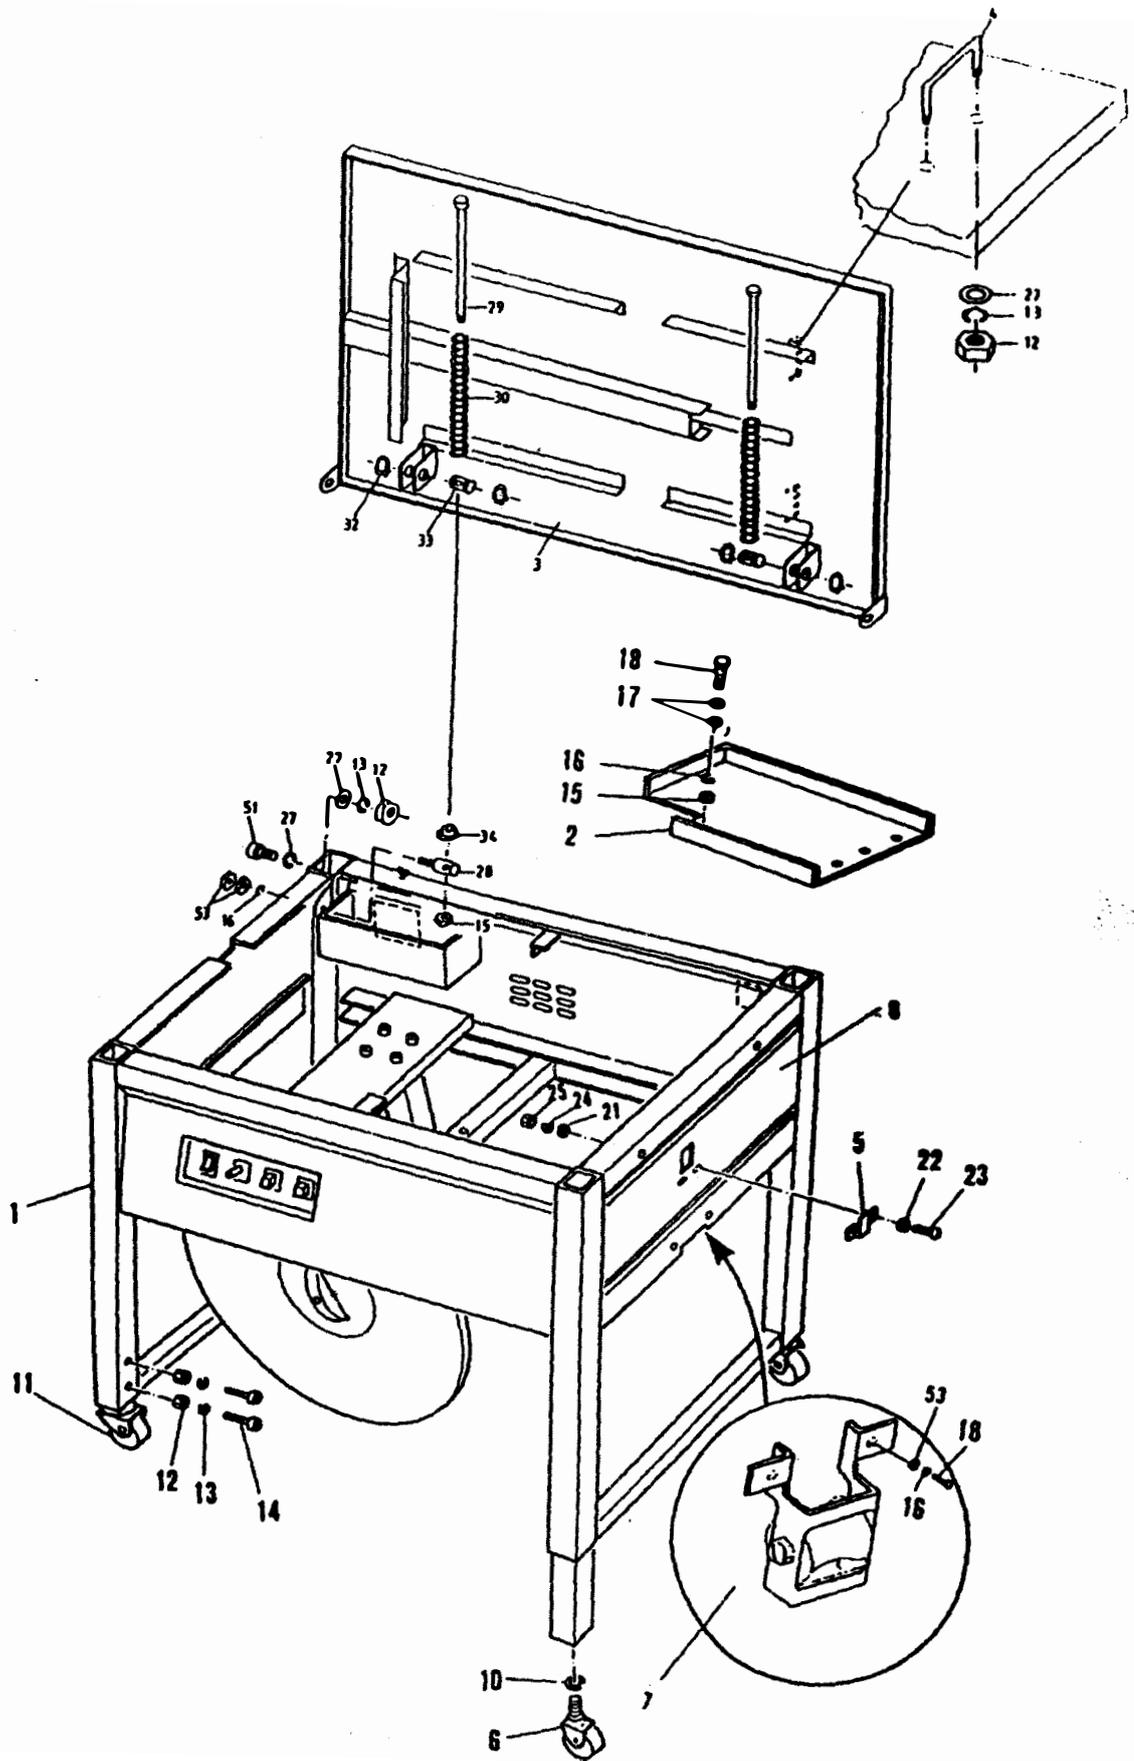


FIGURE 7. CABINET COMPONENTS (SP-4)

PARTS LIST, FIGURE 8

For Model SM-101_Gen2.0
Closed Panel

KEY	QTY	PART NO	DESCRIPTION
1	1	660530	Spring, $\phi 4.0 \times 60.7 \times 100$
2	1	660531	Right flange
3	2	660445	Ball bearing, 6302ZZ
4	1	660532	Dispenser shaft
5	1	660533	Sleeve
6	1	660534	Left flange
7	1	660535	Sleeve
8	1	660536A	Lock
12	1	660537	Dispenser screw
28	1	660365	Socket head set screw, M6 x 8
29	2	660463	Ring, S-15
30	1	660479	Spring pin, 5dia. x 50
		660523	Dispenser Complete

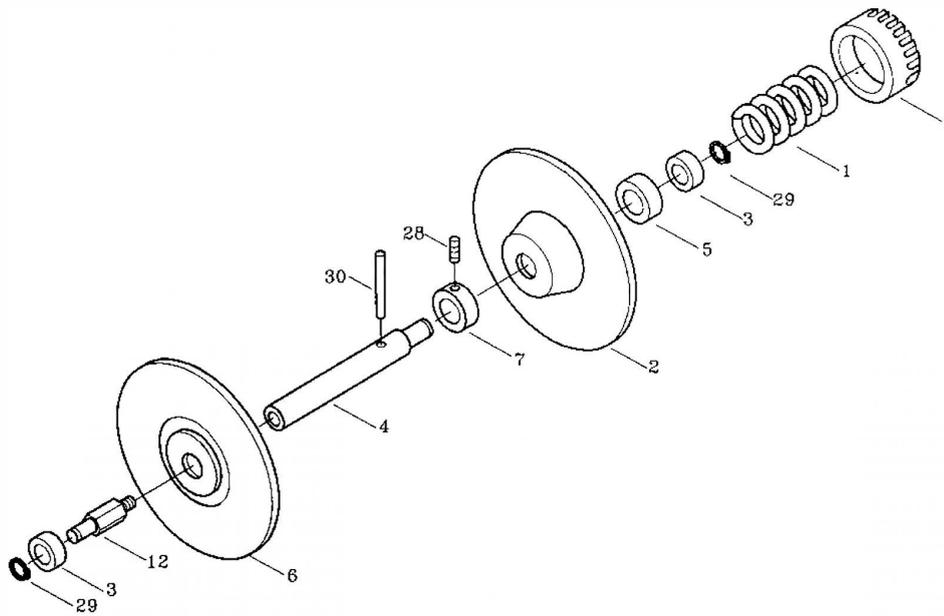

WARNING
All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

FIGURE 8 DISPENSER ASSEMBLY

PARTS LIST, FIGURE 9 SM-101_Gen2.0

KEY	QTY	PART NO	DESCRIPTION
19	1	660105	Brake
20	1	660106	Brake rubber
21	1	660107	Brake fixed pin
22	1	660108	Roller frame
23	1	660109	Plastic roller
24	1	660110	Pin
25	1	660111	Angle plate
26	1	660112	Brake spring, φ 1.2 x 13 x 48.5
27	2	660454	Ring, E-5
28	3	660461	Ring, S-10
52	2	660422	Lock washer, M6
54	4	660401	Hex nut, M6
55	2	660353	Hexagon bolt, M6 x 20

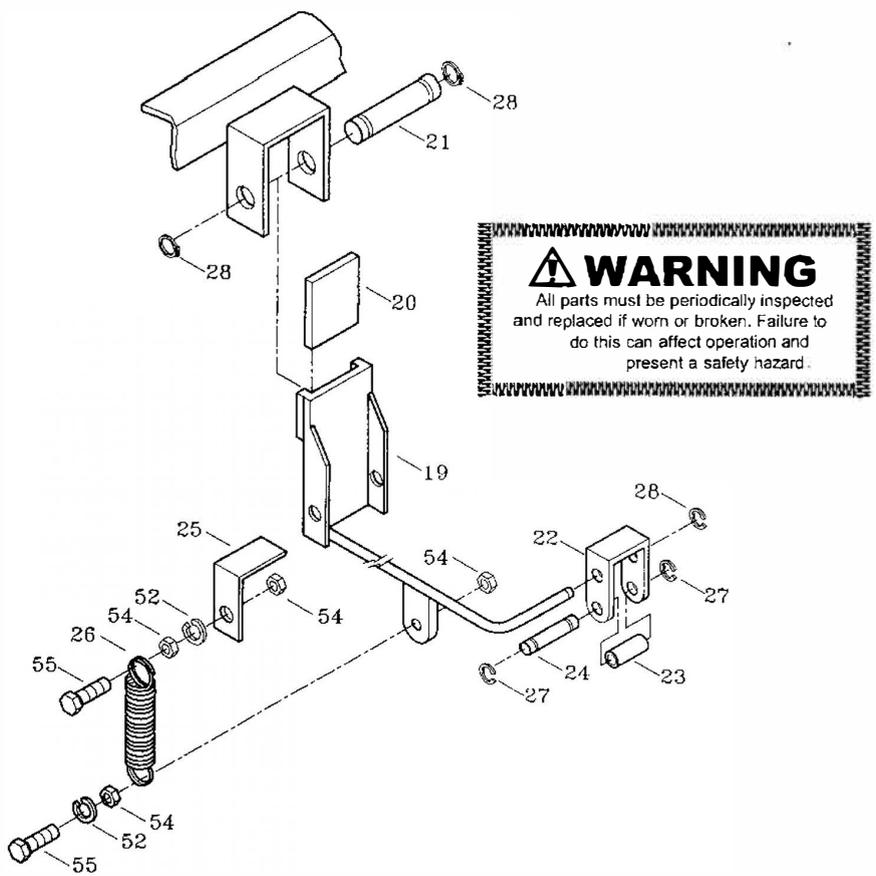


FIGURE 9 DISPENSER BREAK ARM (SM-101_Gen2.0)

PARTS LIST, FIGURE 10 SM-102

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660603	Reel
2	1	660609	Reel brake arm
3	1	660606	Reel brake pulley
4	1	660501	Left flange
5	1	660502	Reel center drum
6	4	660422	Lock washer, M6
7	4	660328	Socket head cap screw, M6 x 16
8	1	660605	Reel shaft
9	1	660201	Right flange
10	1	660607	Reel nut handle
11	1	660108	Roller frame
12	1	660461	Ring, S-10
13	1	660109	Plastic roller
14	1	660110	Pin
15	2	6620453 660523A	Ring, E-4 Dispenser complete

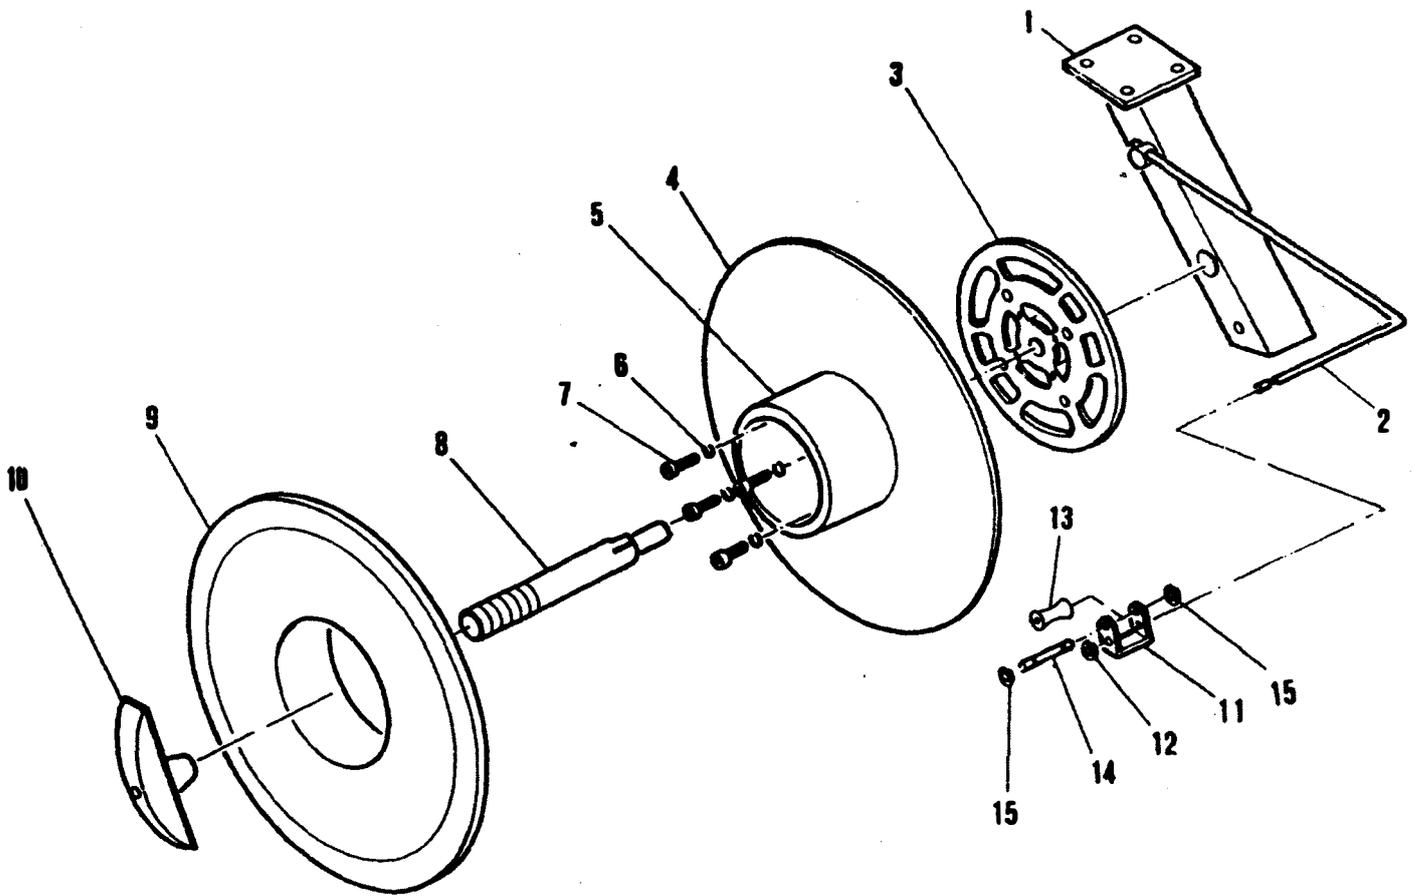


FIGURE 10. DISPENSER ASSEMBLY (SM-102)

KEY QTY. PART NO. DESCRIPTION

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660560	Brake spring
2	1	660053	Solenoid 110V
		660053A	Solenoid 220V
		660053B	Solenoid 240V
3	1	660545	Hex bolt, M12 x70
4	1	660546	Plain washer, M12
5	1	660547	Lock washer, M12
6	1	660548	Hex NUT, m12
7	1	660456	Ring, E-12
8	1	660061	Rubber washer
9	1	660549	Brake
10	1	660106	Brake rubber
11	2	660067	Bracket
12	1	660571	Plaster roller
13	1	660334	Socket head cap screw, M6 x50
14	1	660412	Plain washer, M6
15	2	660401	Hex Nut, M6
16	1	660422	Lock washer, M6
17	2	660551	Lever
18	1	660630	Dispenser

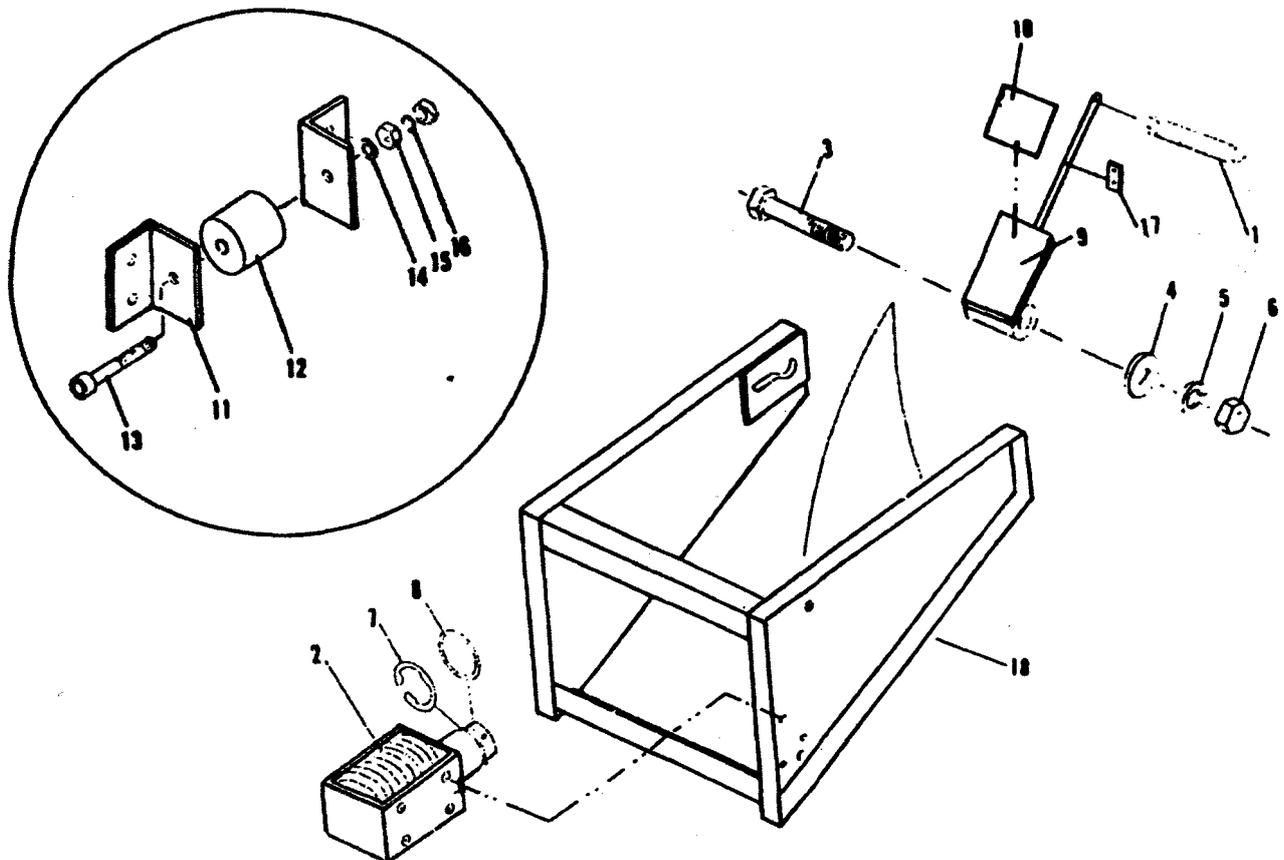


FIGURE 11 Dispenser Supporter

PARTS LIST, FIGURE 11 SM-101_Gen2.0

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660218	Control plate
2	1	660225	Power switch
3	1	660260	Potentiometer, adjustable
4	1	660231	Reset switch
5	1	660232	Feed switch
6	1	660247	Cut safety switch Tm1703
7	2	660268	Insulator
8	1	660220	Smoke fan, 110V
		660220A	Smoke fan, 220V
		660220B	Smoke fan, 240V
9	1	660272	Fan bracket
10	1	660277	Fan cover
11	1	660276	Protect cover
12	1	660212	Instant heating transformer, 110V
		660212A	Instant heating transformer, 220V
		660212B	Instant heating transformer, 240V
14	2	660271	Instant heating cable
15	2	660290	Instanting tube
17	1	660249A	Cut safety switch Tm1702
18	2	660268A	Isolator
56	10	660420	Lock washer, M4
57	14	660399	Hex Nut, M4
61	6	660383	Socket head cap screw, M4 x30
62	14	660425	Plain washer, M4
63	3	660379	Phillips head machine screw, M4 x12
64	2	660384	Phillips head machine screw, M4 x45
65	2	660351	Hex bolt, M6 x12
66	2	660422	Lock washer, M6
68	4	660349	Hex bolt, M4 x14



WARNING

All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

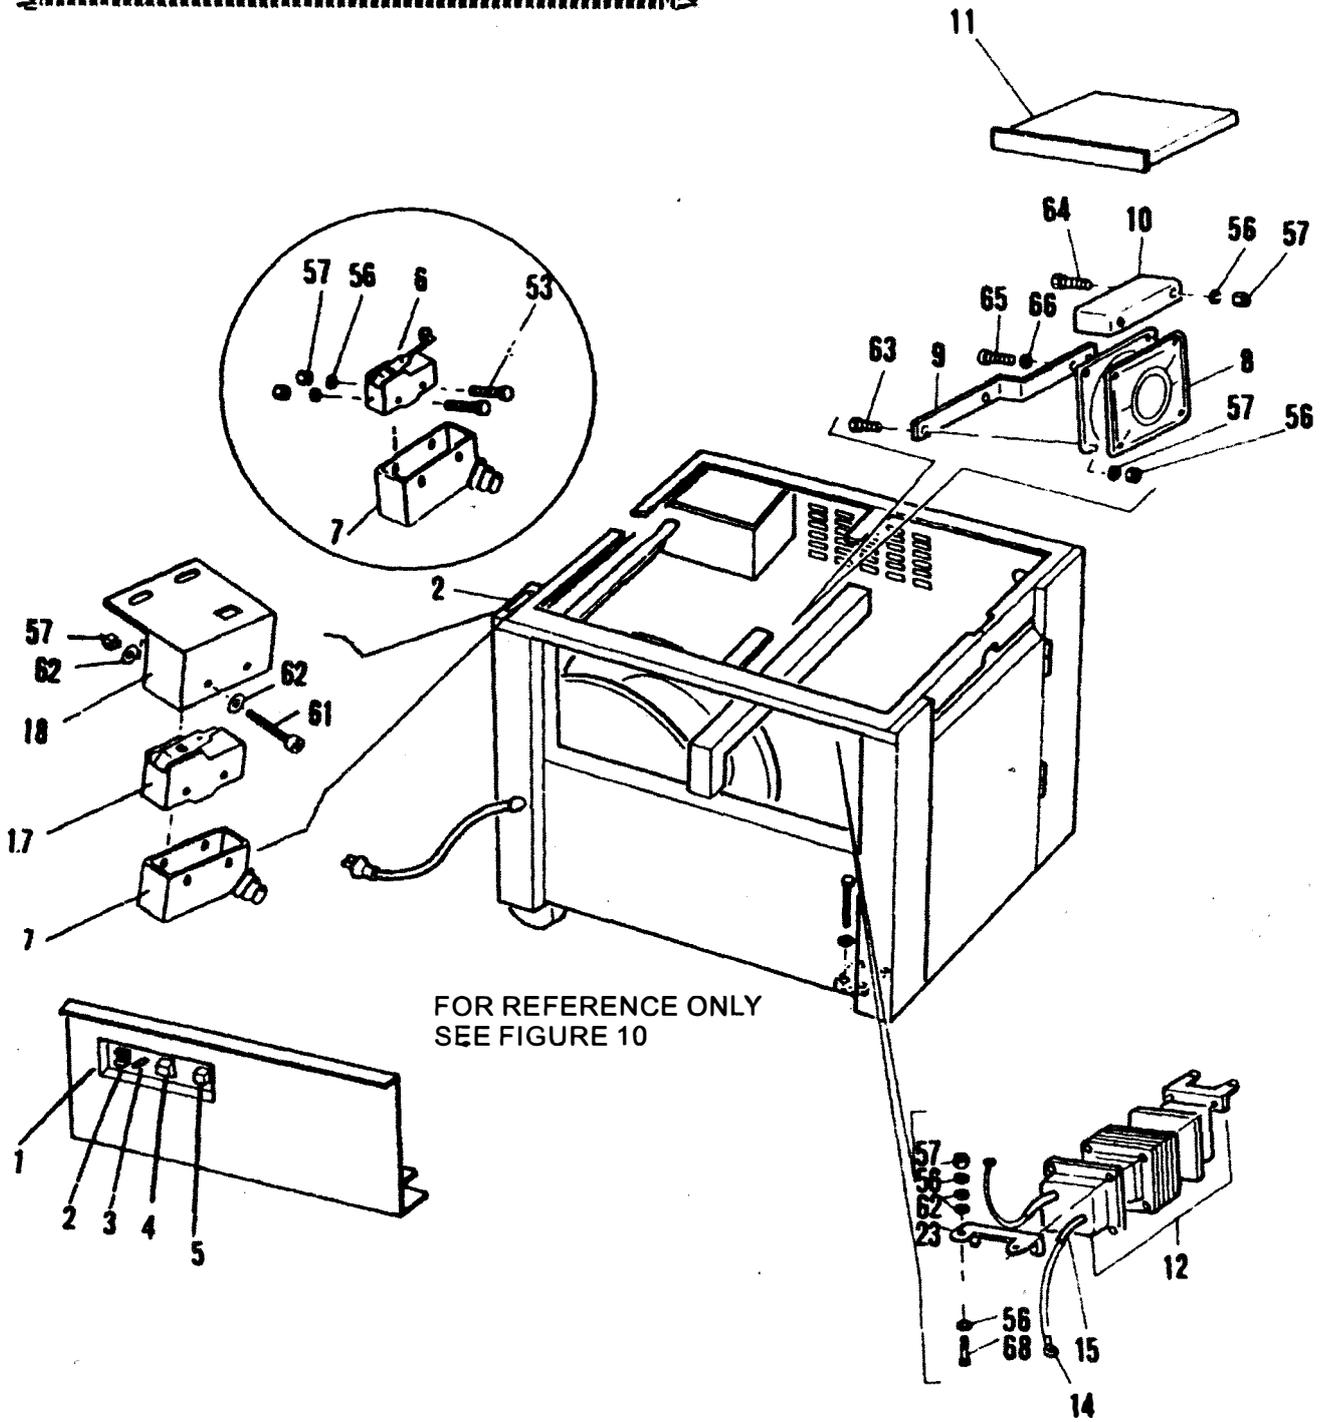



FIGURE 11 ELECTRICAL COMPONENTS (SM-101_Gen2.0)

PARTS LIST, FIGURE 12

SM-102

KEY	QTY.	PART NO.	DESCRIPTION
1	1	660601	Body
2	1	660225	Power switch
3	1	660260	Potentiometer, adjustable
4	1	660231	Reset switch
5	1	660232	Feed switch
6	1	660247	Cut safety switch Tm1703
7	2	660268	Insulator
8	1	660220	Smoke fan, 110V
		660220A	Smoke fan, 220V
		660220B	Smoke fan, 240V
9	1	660272	Fan bracket
10	1	660277	Fan cover
11	1	660276	Protect cover
12	1	660212	Instant heating transformer, 110V
		660212A	Instant heating transformer, 220V
		660212B	Instant heating transformer, 240V
14	2	660271	Instant heating cable
15	2	660290	Instant tube
16	1	660248	Cut safety switch Tm1704
53	2	660372	Phillips head machine screw, M3 × 10
56	10	660420	Lock washer, M4
57	12	660399	Hex nut, M4
61	6	660383	Socket head cap screw, M4 × 30
62	12	660425	Plain washer, M4
63	2	660379	Phillips head machine screw, M4 × 12
64	2	660384	Phillips head machine screw, M4 × 50
65	2	660351	Hex bolt, M6 × 12
66	2	660422	Lock washer, M6
68	4	660349	Hex bolt, M4 × 14

WARNING
 All parts must be periodically inspected and replaced if worn or broken. Failure to do this can affect operation and present a safety hazard.

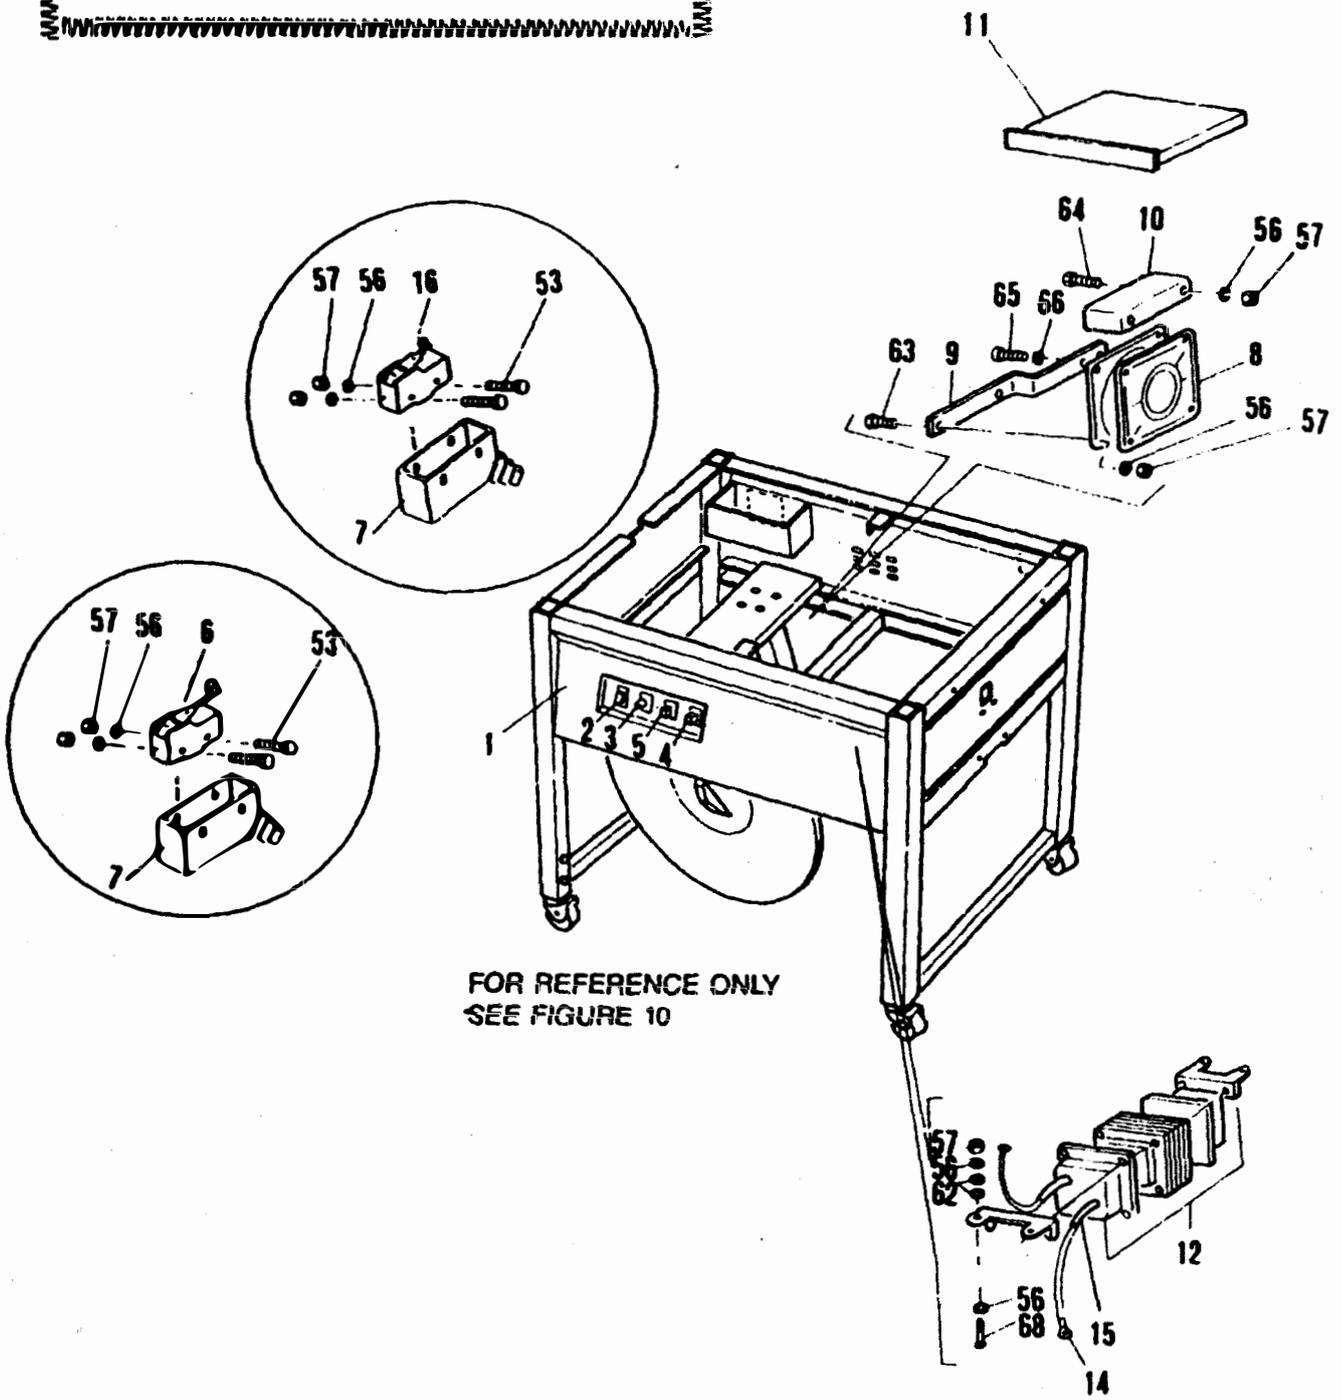


FOR REFERENCE ONLY
 SEE FIGURE 10

FIGURE 12. ELECTRICAL COMPONENTS SM-102

PARTS LIST, FIGURE 13

SM-102

KEY	QTY.	PART NO.	DESCRIPTION (SM-102)
1	1	660601	Body
2	4	660330	Socket head cap screw M6 × 25
3	9	660402	Hex Nut M8
4	8	660621	Socket head cap screw M8 × 25
5	4	660625	Lock washer M16
6	4	660620	Wheel. Swivel 5/8"
7	9	660423	Lock washer M8
8	1	660603	Reel
9	1	660608	Pin
10	2	660464	Ring S-20
11	4	660401	Hex Nut M6
12	6	660328	Socket head cap screw M6 × 16
13	1	660610	Free slide roller bracket
14	1	660609	Reel brake arm
15	1	660108	Roller frame
16	1	660461	Ring S-10
17	1	660604	Bearing bracket
18	2	660440	Ball bearing 6003 ZZ
19	1	660605	Reel shaft
20	1	660624	Plain washer M6 × 32
21	3	660329	Socket head cap screw M6 × 20
22	1	660606	Reel-brake pulley
23	1	660611	Shaft
24	1	660612	Brake belt tightener
25	1	660613	Brake tightener section
26	1	660463	Ring S-15
27	1	660619	Brake-V Belt
28	1	660614	Belt holder plate
30	5	60382	Phillips head machine screw M4 × 30
31	5	660399	Hex Nut M4
32	3	660420	Lock washer M4
33	1	660618	Front brake tension arm spring
34	1	660617A	Reverse brake tension arm spring
35	1	660501	Left flange
36	8	660422	Lock washer M6
37	1	660502	Reel center drum
39	1	660201	Right flange
40	1	660607	Reel nut handle
47	4	660622	Plastic Bracket
48	2	660628	Wheel, swivel/locking 5/8"

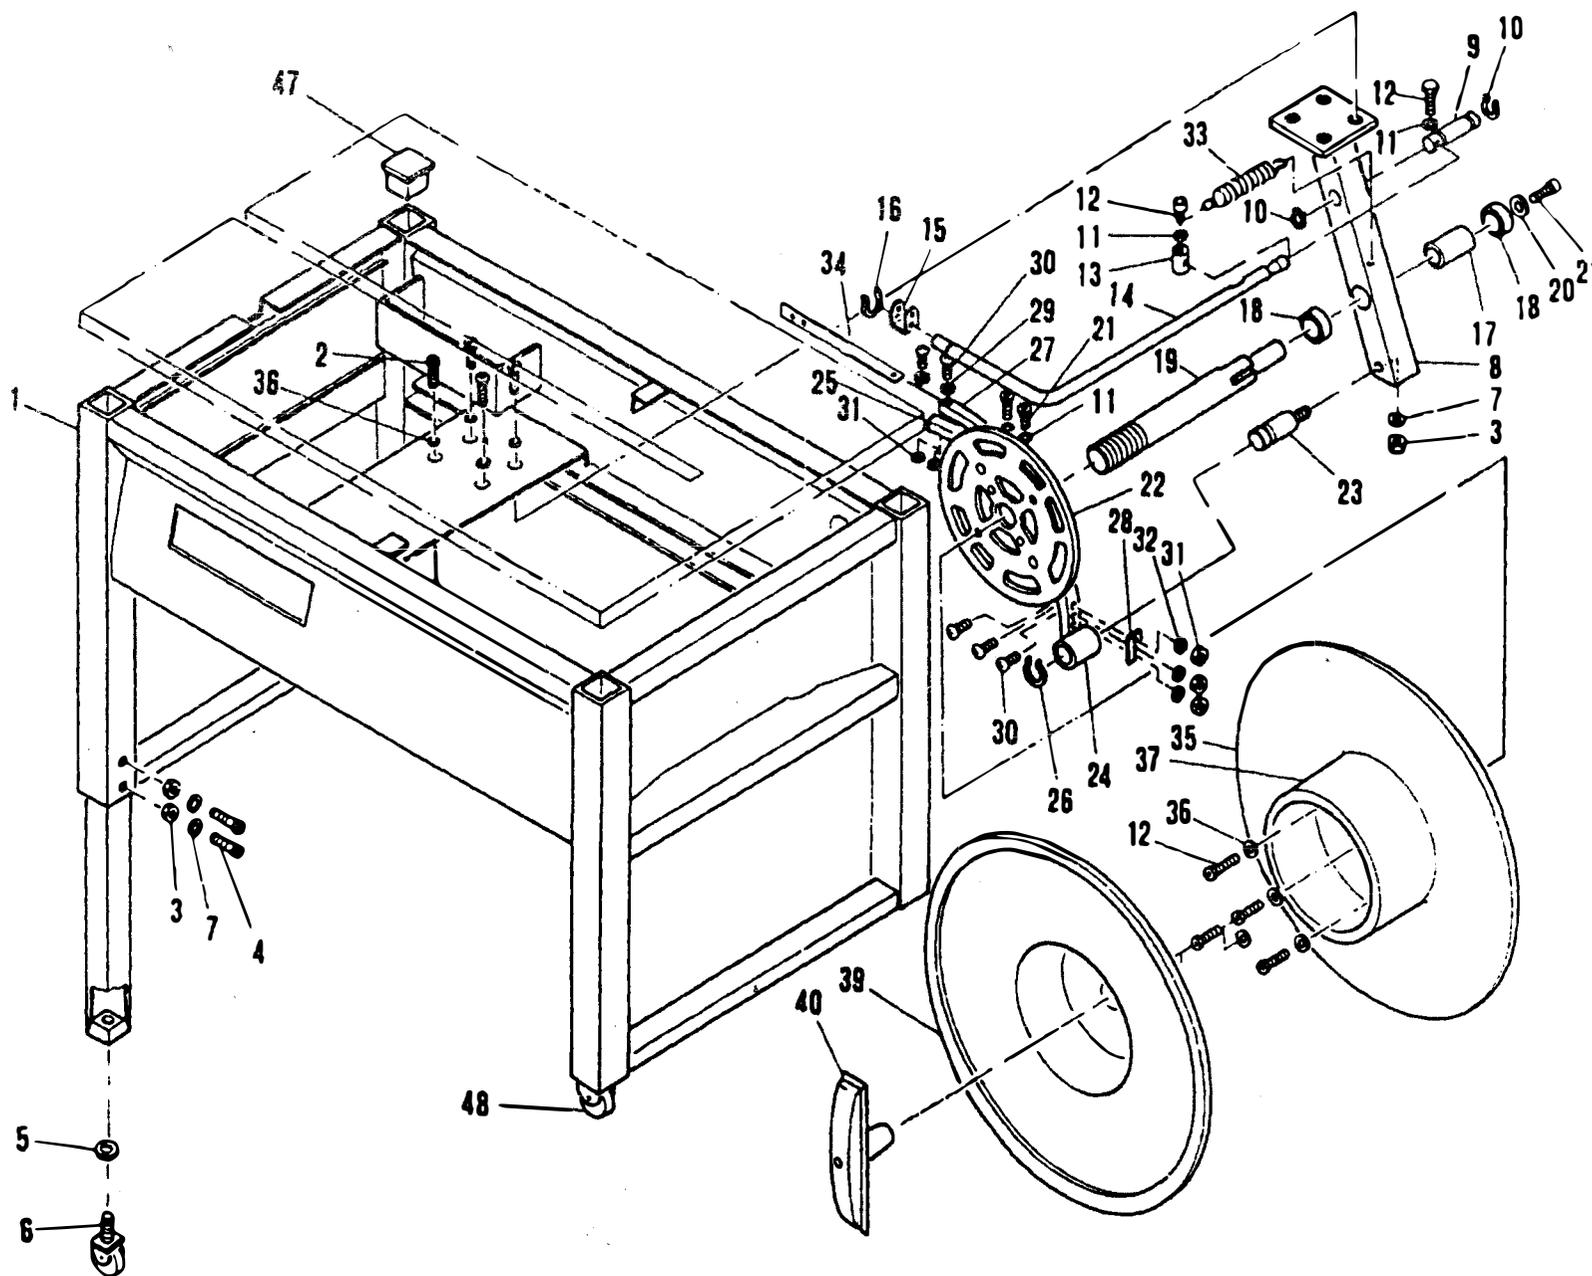

SM-102

FIGURE 13. HOUSING, DISPENSER & BRAKE ASSEMBLY COMPONENTS

PARTS LIST, FIGURE 14 (Optional)

KEY	QTY	PART NO	DESCRIPTION
1	1	660552	Stainless steel top cover
2	1	660615	Package stop
3	2	660327	Hexagon bolt, M6 x 12
4	2	660623	Toothed lock washer external, M6
5	2	660626	WN, M6
6	2	660412	Plain washer, M6 x 16 (2mm)


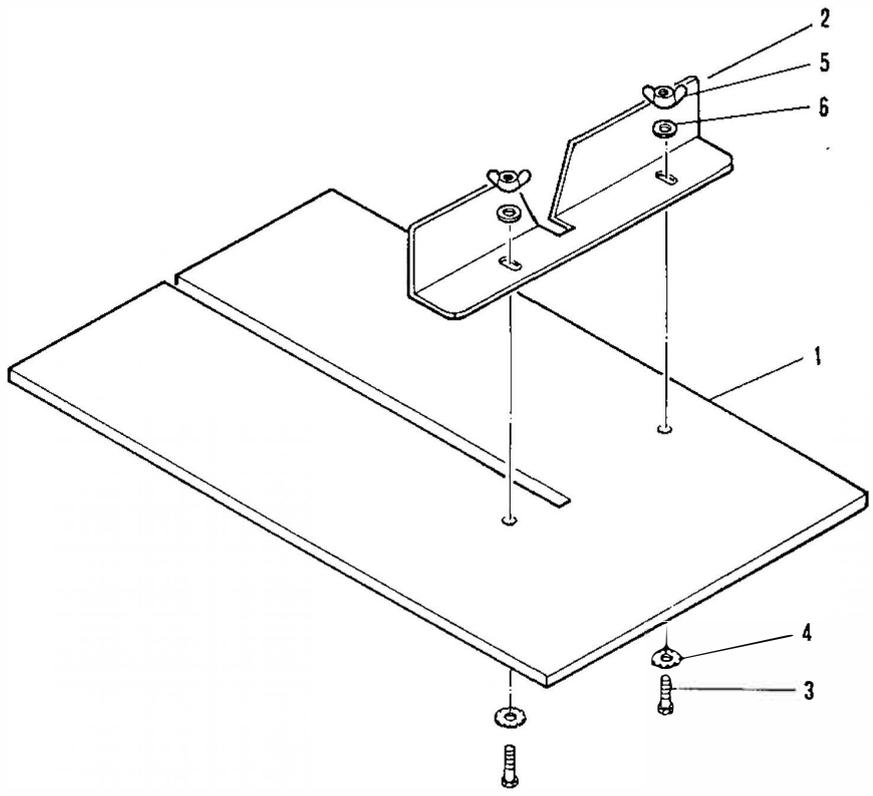



FIGURE 17 TOP COVER & PACKAGE STOP

KEY QTY.

PART NO. DESCRIPTION


1	1	660519	Pc board assembly 110V
	1	660519A	Pc board assembly 220V
	1	660519B	Pc board assembly 240V
3	1	660179	Transformer, 110V-28V
	1	660179A	Transformer, 220V-28V
4	1	660179B	Transformer, 240V-28V
5	1	660251	Fuse box
	1	660520	Fuse ,10A(FOR 110V)FU-1
	1	660521A	Fuse ,8A(FOR 220V,240V)FU-1
6	1	660207	Fuse ,2A(FOR 220V,240V)FU-2
	1	660208	Fuse ,3A(FOR 110V)FU-2
7	1	660522	Fuse ,1A FU-3
8	1	660269	Pc board holder
9	1	660252E	Control box Assy
2	1	660275	Control box cover
50	1	660627	Lock
51	1	660412	Plain washer, M6

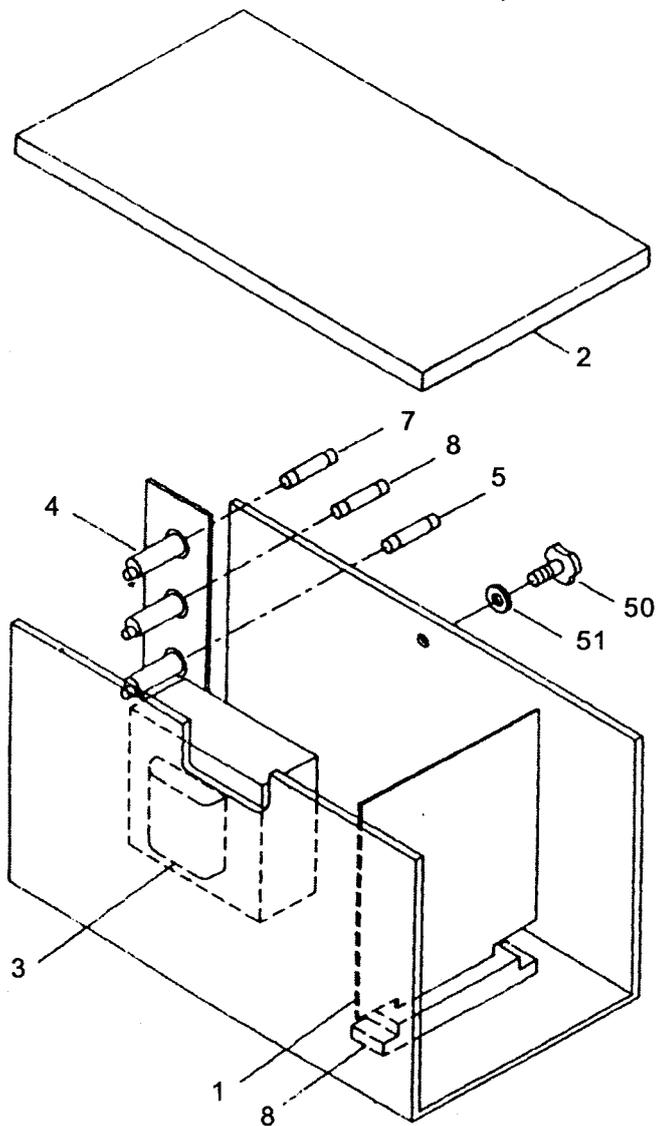

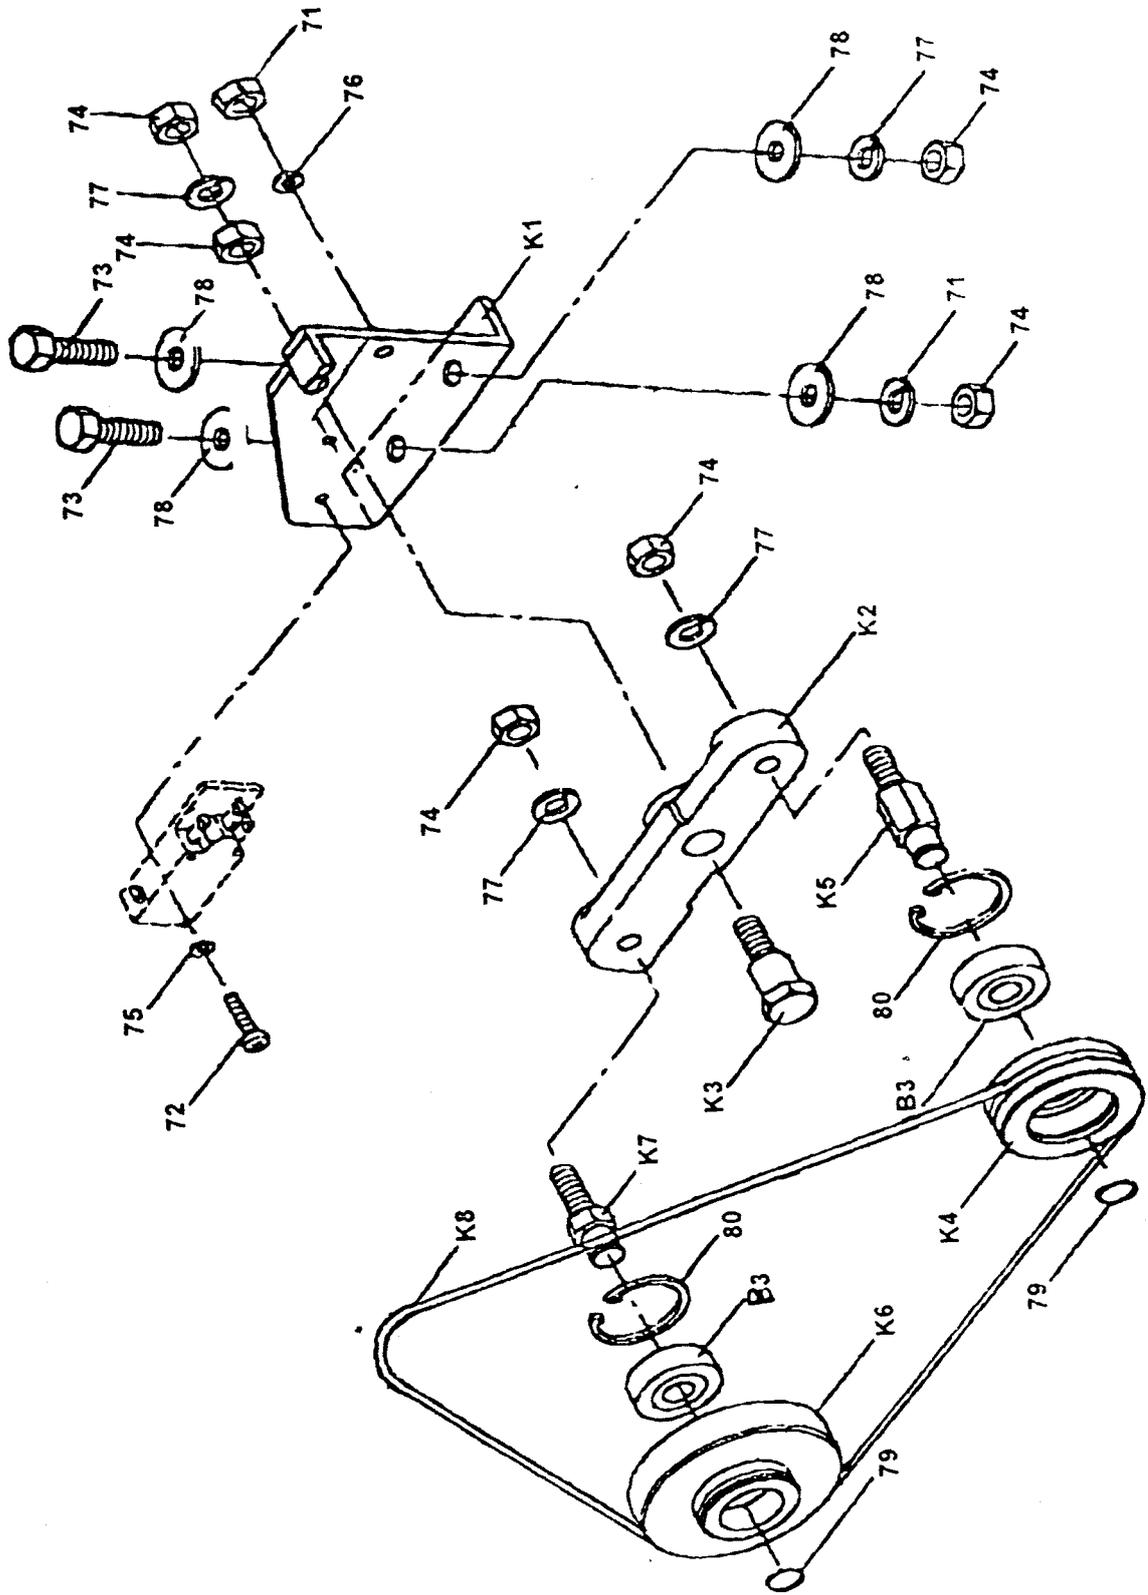


PARTS LIST FIGURE 16

KEY	QTY	PART NO	DESCRIPTION
K1	1	6600556A1	Bracket
K2	1	6600556A2	Arm
K3	1	6600556A3	Arm screm
K4	1	6600556A4	Pulley
K5	1	6600556A5	Shaft
K6	1	6600556A6	Pulley
K7	1	6600556A7	Shaft
K8	1	6600556A8	Belt
B3	2	6600556A9	Bearing 608zz
71	2	660398	Hex nut M3
72	2	660390	Flat head cap screw,M3×20
73	2	660353	Hex bolt ,M6×20
74	6	660401	Hex nut M6
75	2	660581A	Tooth head washer M3
76	2	660419	Lock washer M3
77	5	660422	Lock washer M6
78	4	660411	Plain washer,M6×21
79	2	660556A10	Ring S-8
80	2	660556A11	Ring R-22

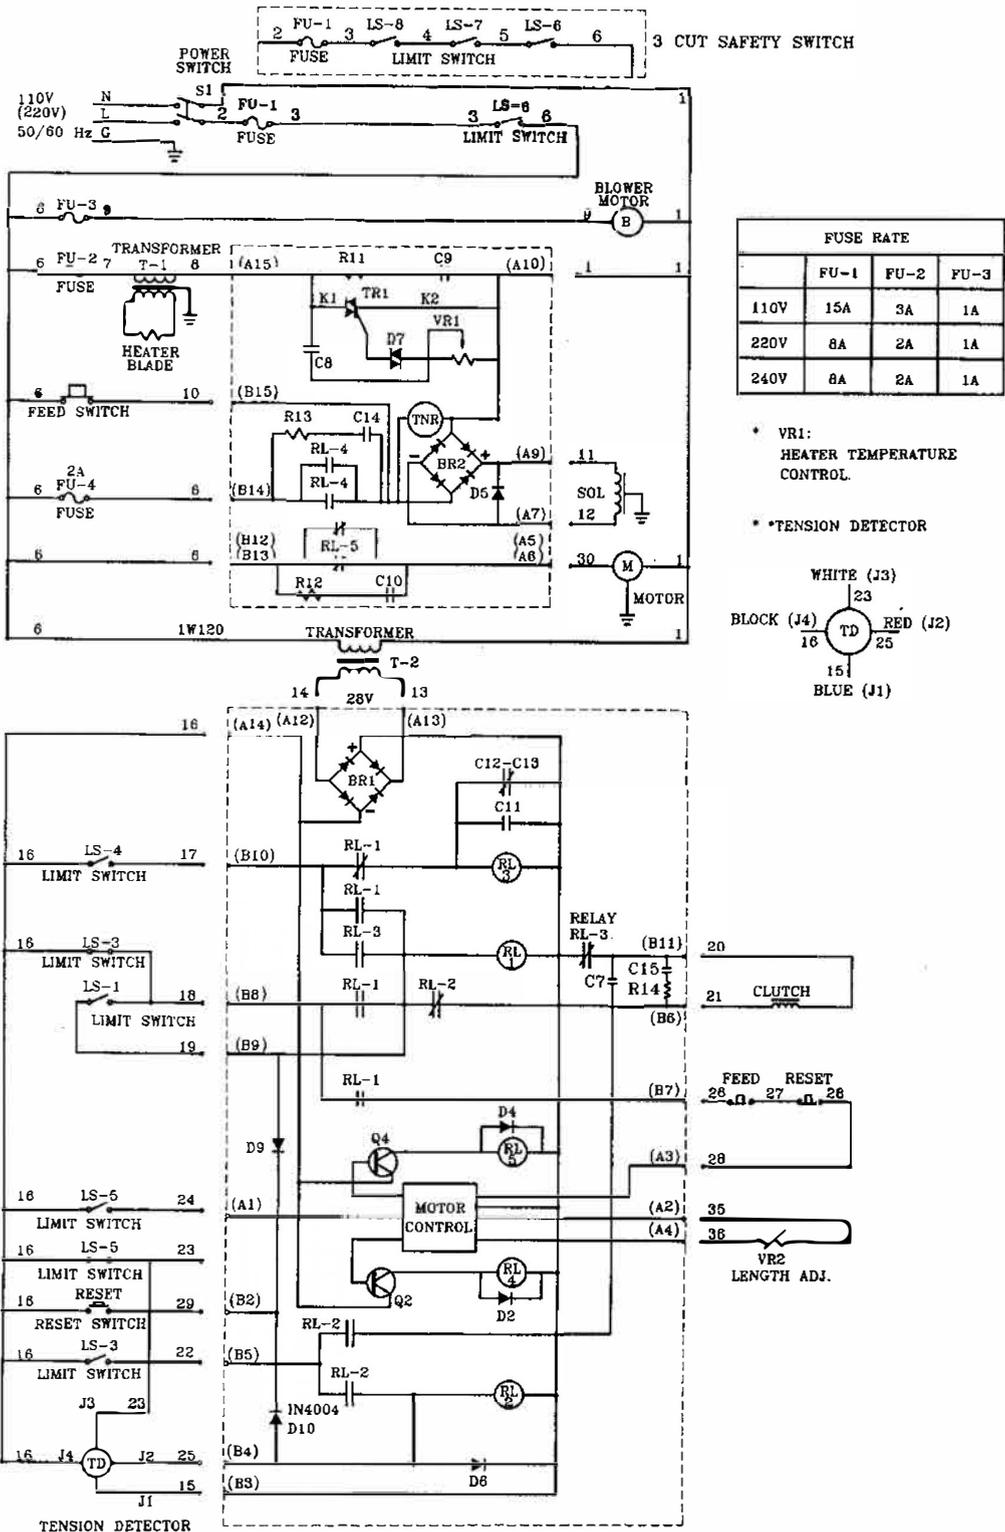

ELECTRICAL SCHEMATIC, AC 110V, 50/60 HZ. (AC 220V, 50/60 HZ.)

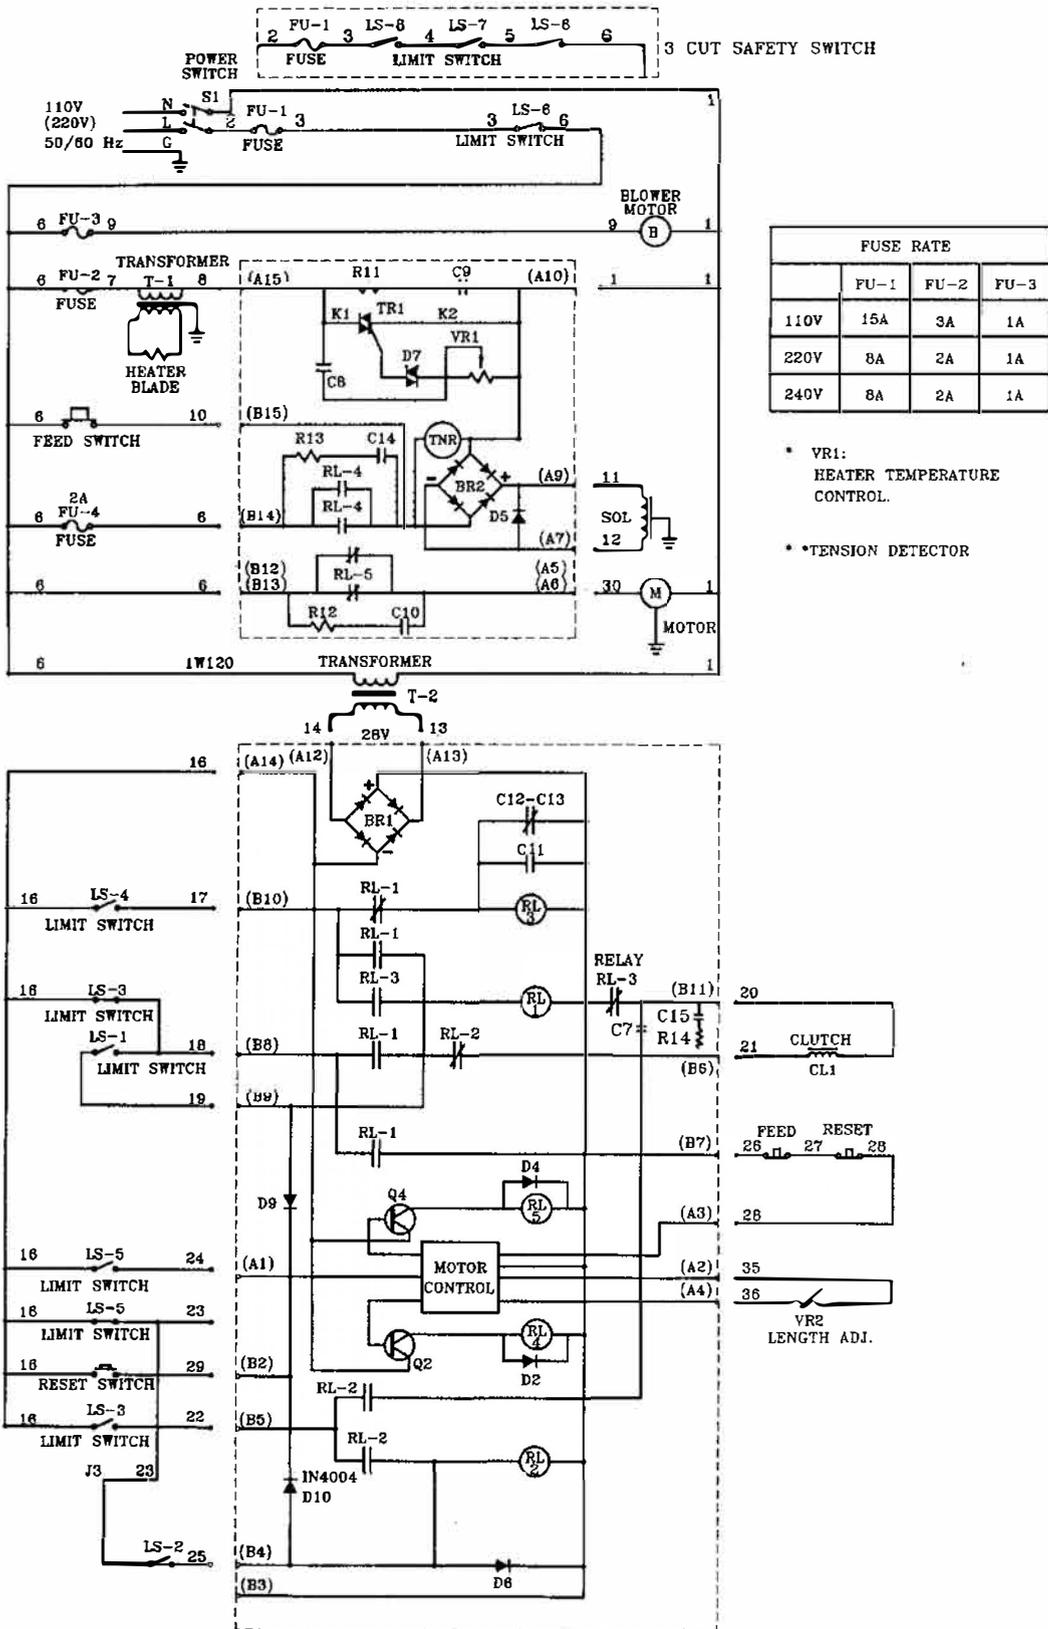

FUSE RATE			
	FU-1	FU-2	FU-3
110V	15A	3A	1A
220V	8A	2A	1A
240V	8A	2A	1A

* VR1:
HEATER TEMPERATURE
CONTROL.

* TENSION DETECTOR

ELECTRICAL SCHEMATIC, (for round belt type)