TROY Group MICR Printer Installation Assistant User's Guide

The TROY Group MICR Printer Installation assistant will automatically install your TROY printer based on input you provide.

****Run as Administrator on TROY MICR Printer Installer.exe** click on the MICR Printer Installer.exe. Please note that this program requires Administrator level access to run correctly and will request Windows Administrator elevation if you are not currently running as the Administrator.

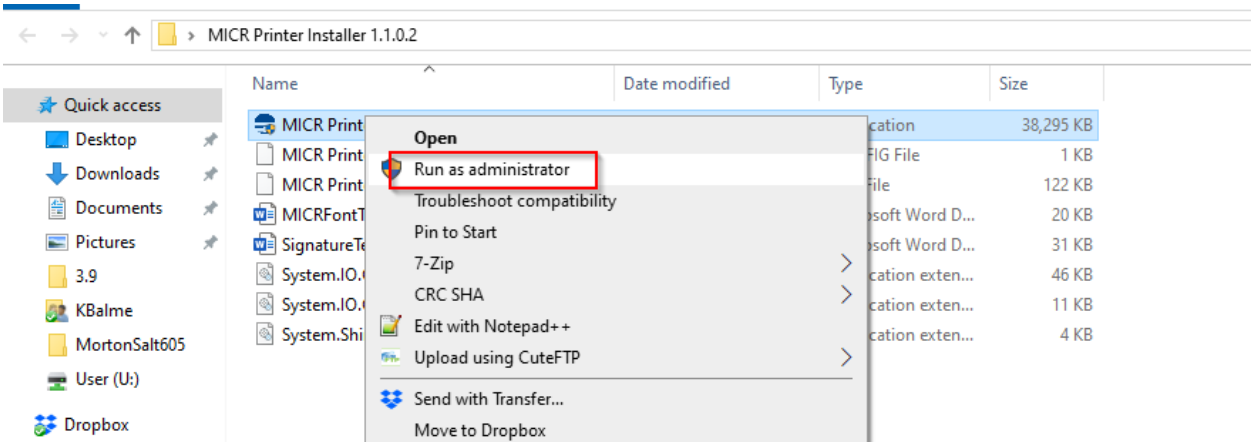

**Windows 10 users must set UAC under User Accounts to 'Never notify' while the installation is running.

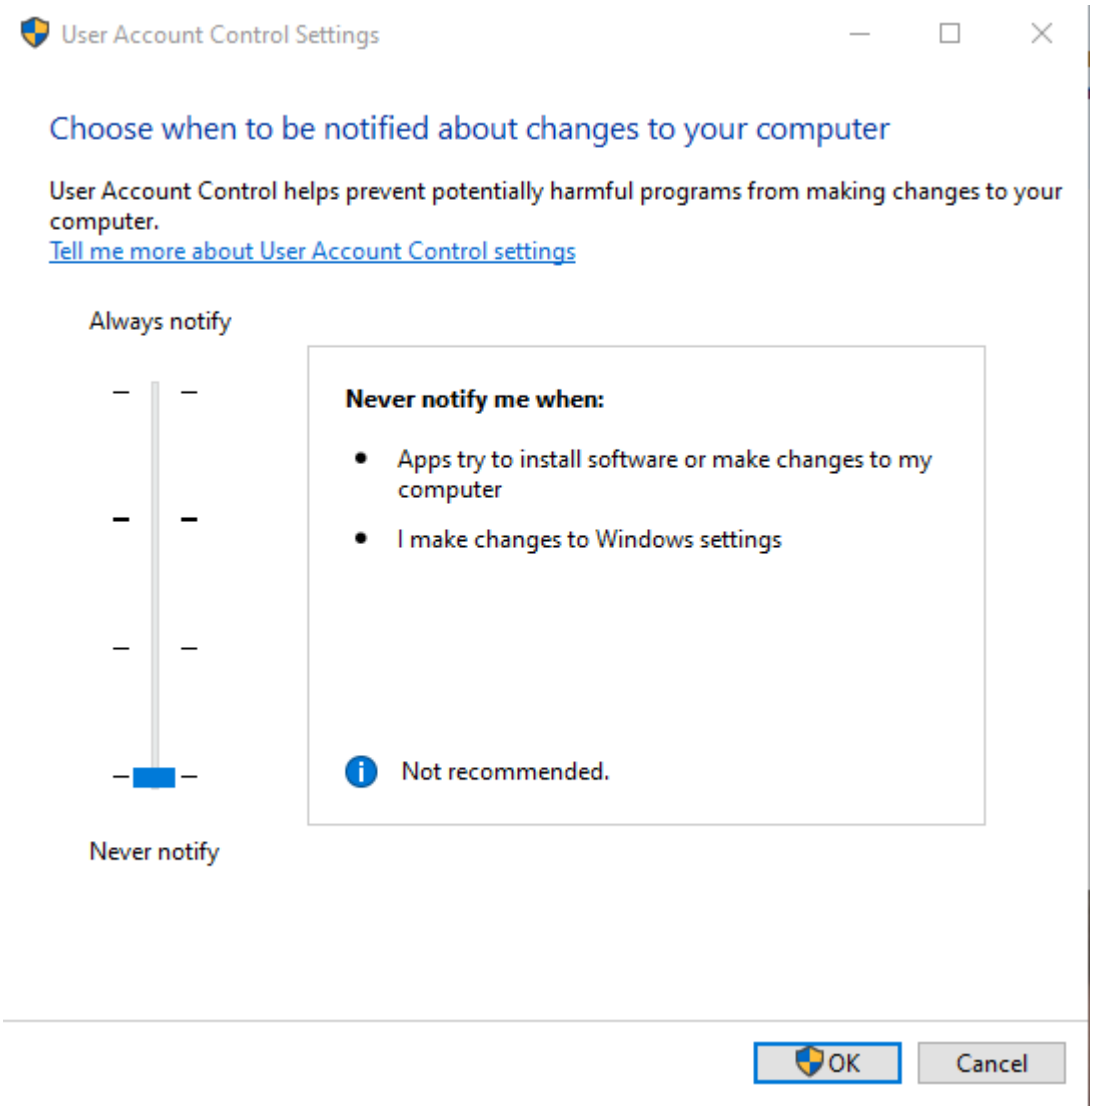

****Windows 10 users may encounter Windows Defender blocking the Micr Printerinstaller.exe. Please check with your company policy before clicking on the 'run anyway' option.*****

Windows protected your PC
Windows Defender SmartScreen prevented an unrecognized app from starting. Running this app might put your PC at risk.
App: Screen Recorder 6.exe
Publisher: Unknown publisher
Don't run

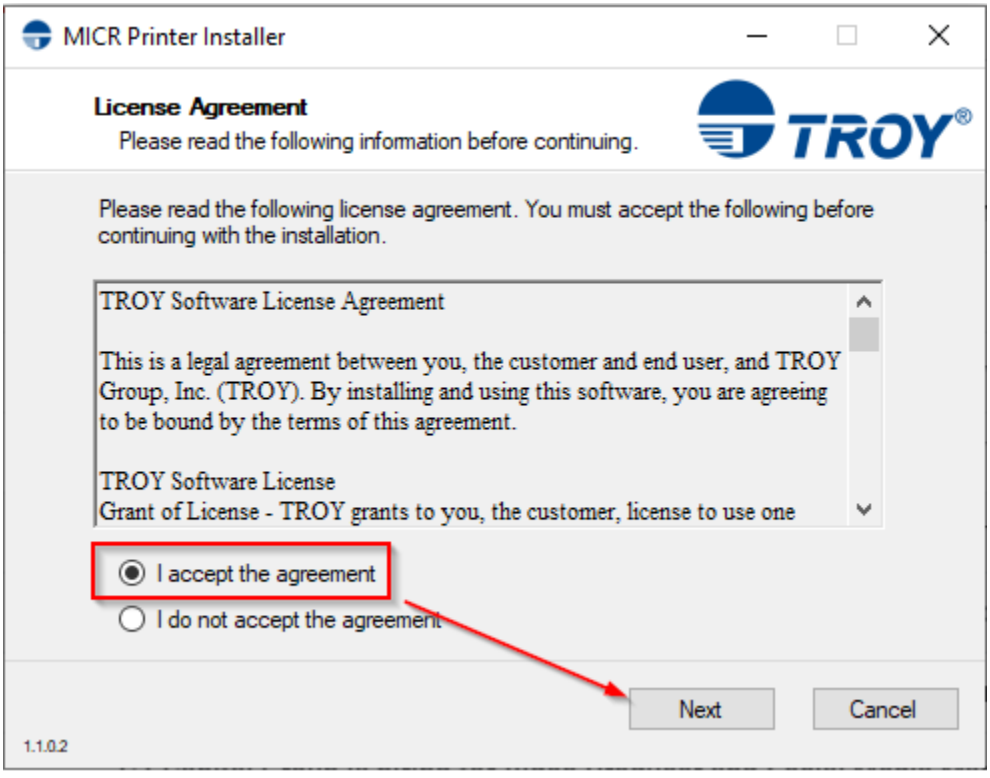
MICR Printer Installer
License Agreement
Please read the following information before continuing.
TROY
Please read the following license agreement. You must accept the following before continuing with the installation.
TROY Software License Agreement
This is a legal agreement between you, the customer and end user, and TROY Group, Inc. (TROY). By installing and using this software, you are agreeing to be bound by the terms of this agreement.
TROY Software License
Grant of License - TROY grants to you, the customer, license to use one
I accept the agreement
I do not accept the agreement
Next
Cancel
1.1.0.2

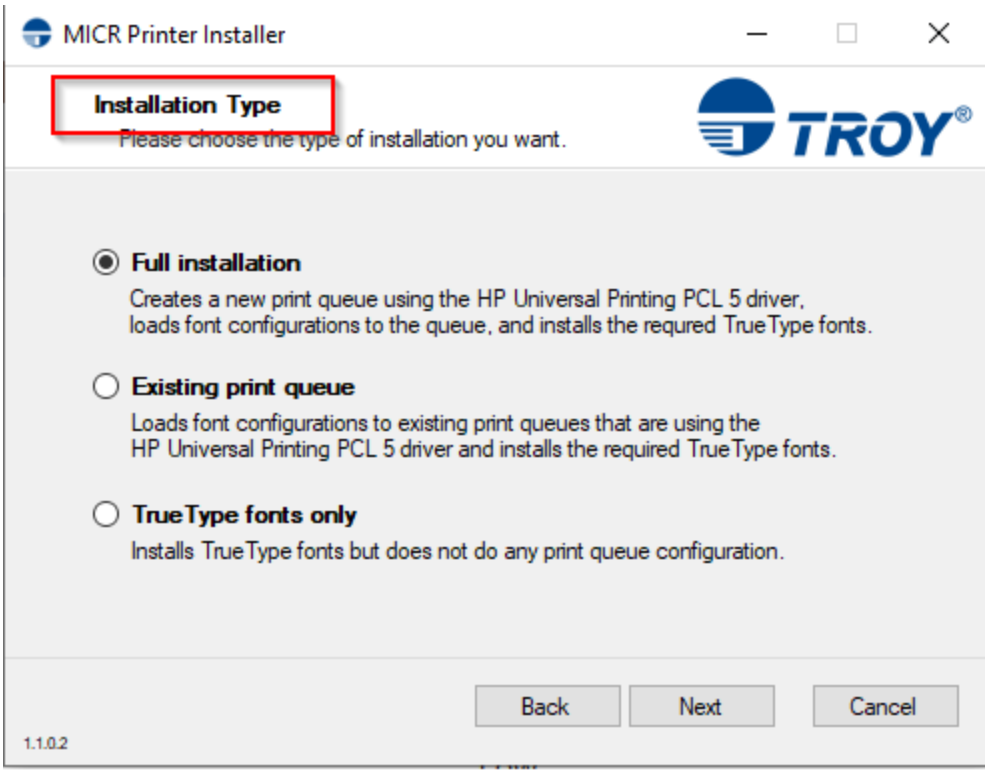

Install Type:

- **Full Installation** – Creates a new print que using the HP Universal PCL 5 driver, loads font configurations to the queue, and installs the required True Type fonts.
- **Existing print queue** – Loads font configurations to existing print queues that are using the HP Universal Printing PCL 5 driver and installs the required True Type fonts.
- **True Type fonts only** – Installs True Type fonts but does not do any print queue configuration.

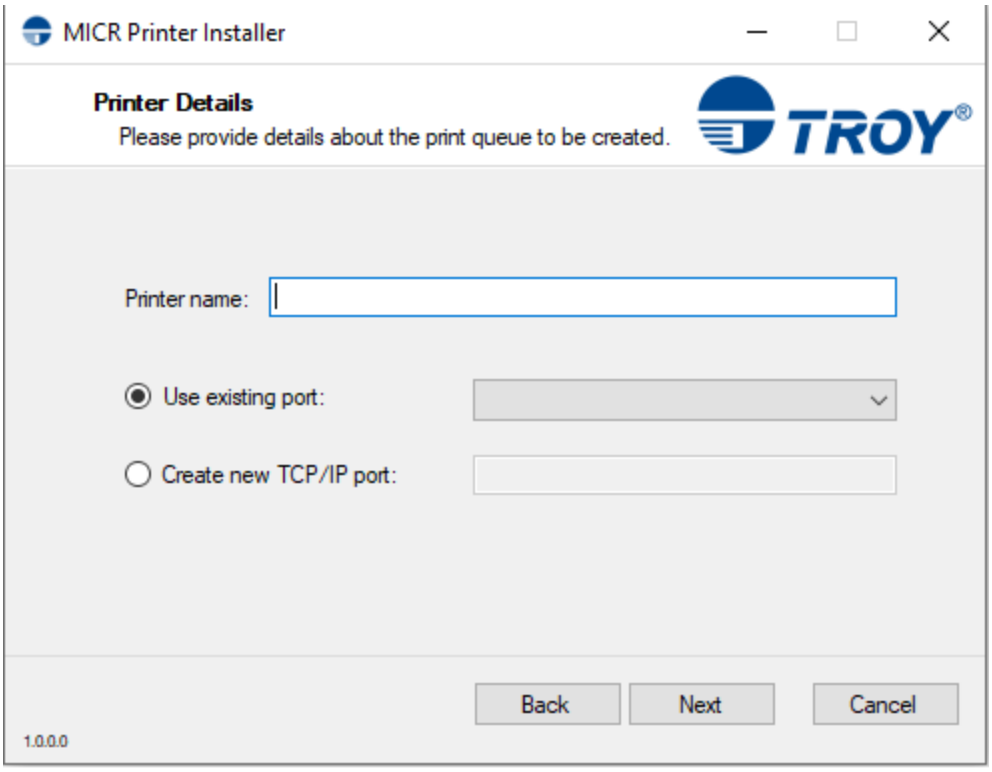

Printer Name:

The printer will appear with this name from the Windows print queue. If you have selected USB Printer as your Install Type, you will be presented with a dropdown list of the installed printers. Select the printer you wish to add the TROY fonts to from this list.

Printer Port Type:

Select **Use existing port: option** if your IP address is already set up on your local desktop or server. Or if you are doing a local installation such as a USB install, select the proper port.

Select **Create new TCP/IP port:** option if your IP address is not yet set up locally in on your Windows desktop or print server.

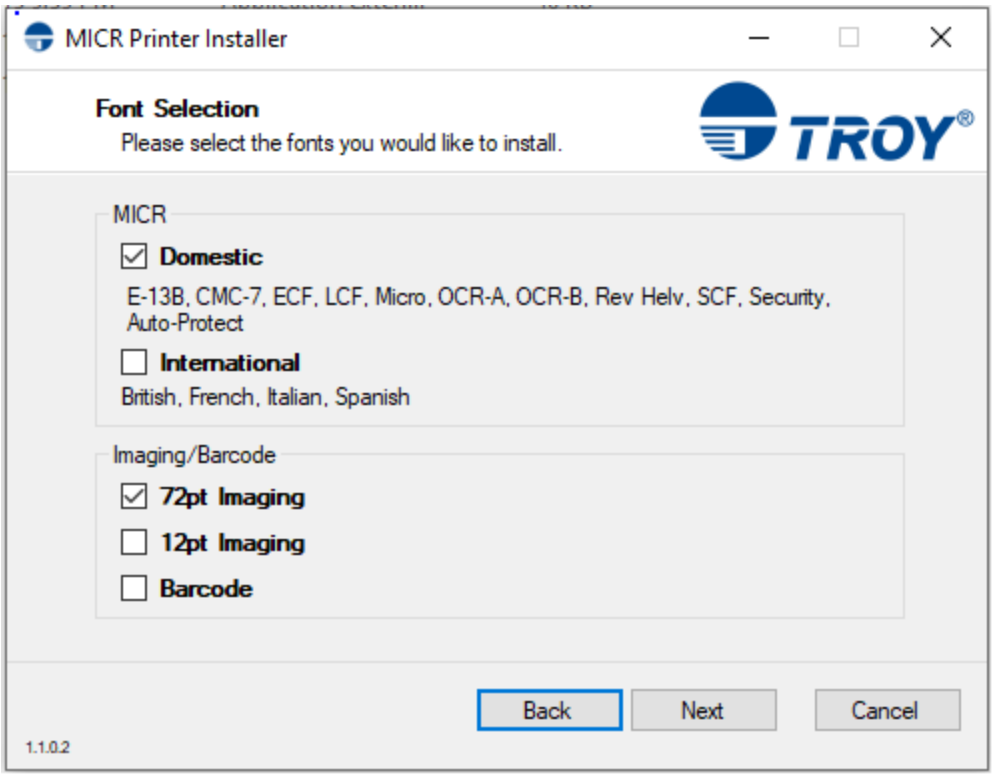

Domestic MICR or International MICR (Radio Buttons)

If you are printing checks domestically, (United States & Canada) select **Domestic MICR**. If you are not located in the United States or Canada or will be printing checks for use in a country other than the United States or Canada, select International MICR for additional language fonts.

Install Barcode Fonts (Check Box)

Checking this box includes the industry-standard TROY Barcode Fonts in the installation.

Install TROY Signature Fonts (Check Box) and 72pt or 12pt (Radio Buttons)

Checking this box includes the TROY Signature Fonts in the installation. These fonts require the printer to have a TROY Digital Imaging Kit installed. The Digital Imaging Kits are manufactured in both 1LPI (72pt) and 6LPI (12pt). To verify whether you require 1LPI or 6LPI installation, refer to the Digital Imaging Data Sheet that came with your Imaging Kit under Windows Support Information. 1LPI fonts are of the 200 series family (201, 202, 203, etc.), and 6LPI fonts are of the 100 series family (102, 103, 104, etc.).

Install Confirmation summary:

When you have completed your selections and are ready to begin the installation click the **Begin Installation button.** Once the installation begins you will be presented with a status window which displays the progress of the installation.

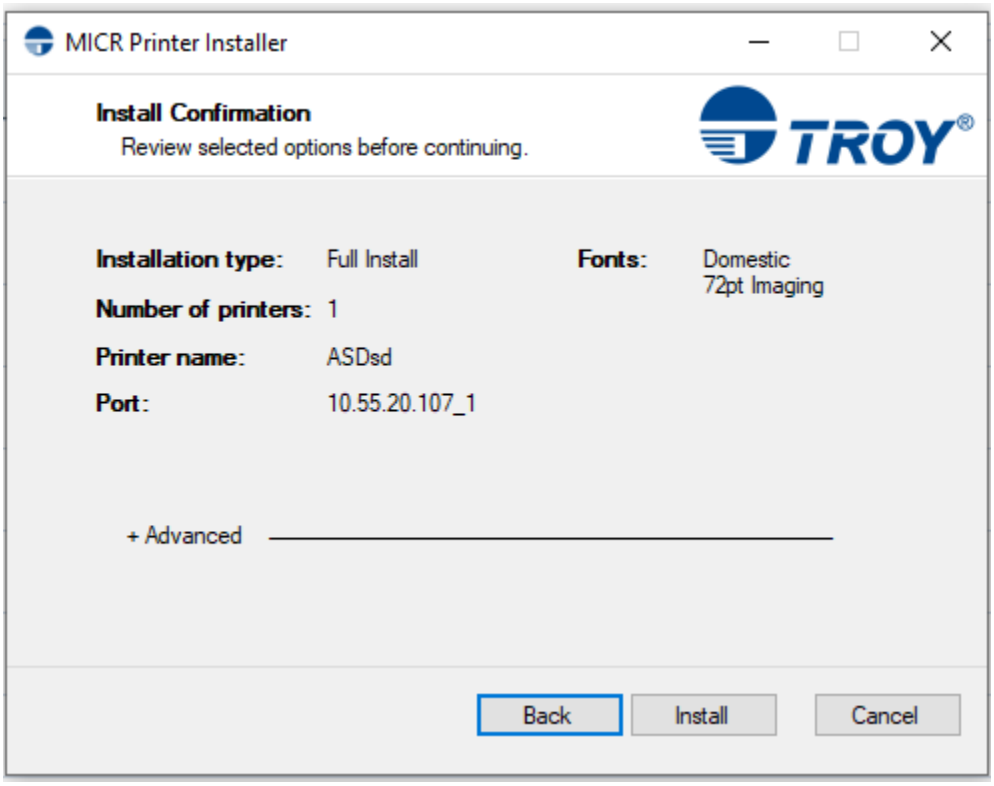

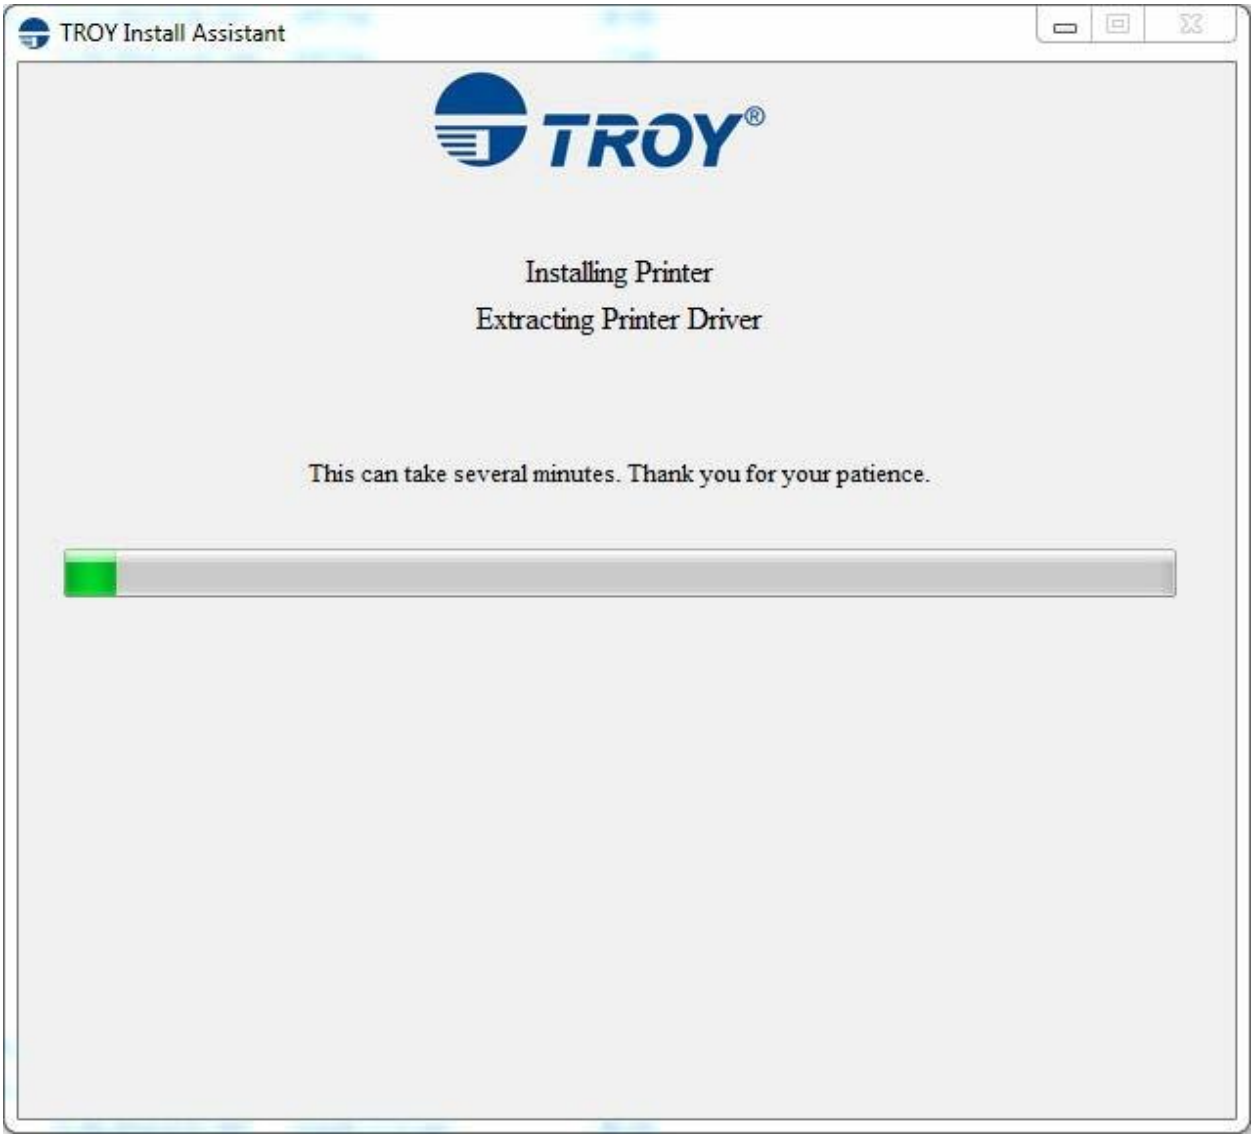
TROY Install Assistant
TROY®
Installing Printer
Extracting Printer Driver
This can take several minutes. Thank you for your patience.

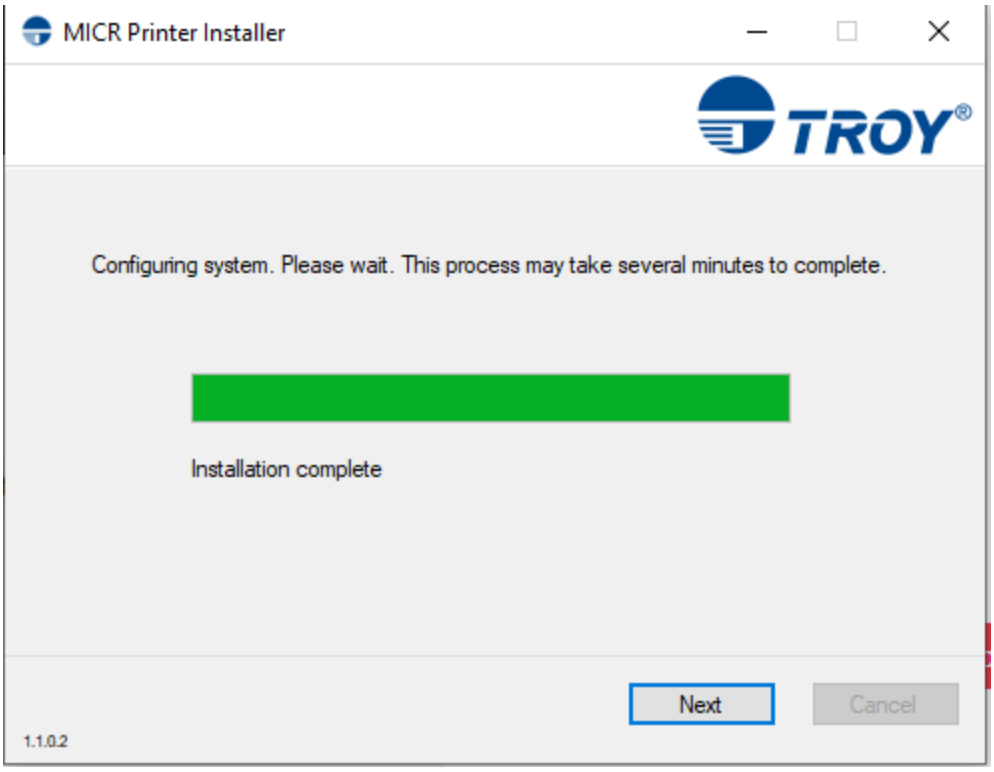
MICR Printer Installer
TROY
Configuring system. Please wait. This process may take several minutes to complete.
Installation complete
Next
Cancel
1.1.0.2

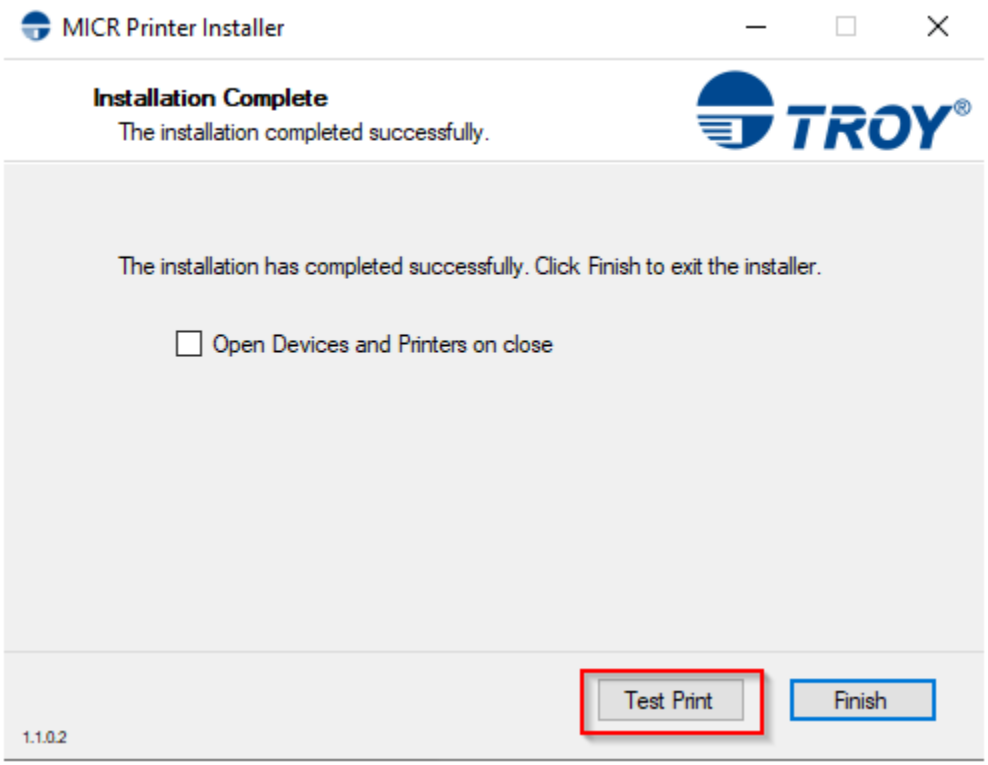
MICR Printer Installer
Installation Complete
The installation completed successfully.
TROY
The installation has completed successfully. Click Finish to exit the installer.
Open Devices and Printers on close
Test Print
Finish
1.1.0.2

Once the installation is complete you will be shown the below window. Click send test page button to send a TROY font test page to the printer prior to clicking Finish. This will also print a signature font test page if the signature fonts were installed. Please note that the test page(s) can take a moment to generate and the close function (the red X in the upper right corner) will not be available until the final test page has been printed.

TROY 200 SERIES SIGNATURE/LOGO TEST

Font Name	PCL 5 Escape Sequence	Print Example
Troy Image 201	<esc>(201Q<esc>(s0p2h72v0s0b201T	
Troy Image 202	<esc>(202Q<esc>(s0p2h72v0s0b202T	
Troy Image 203	<esc>(203Q<esc>(s0p2h72v0s0b203T	

TROY MICR FONT TEST

Font Name	PCL 5 Escape Sequence	Print Example
Troy E-13B	<esc>(0Q<esc>(s1p12.0v0s0b0T <esc>(0Q<esc>(s0p8.00h8.8v0s0b0T	
Troy CMC-7	<esc>(0Q<esc>(s1p12.0v0s0b1T <esc>(0Q<esc>(s0p8.00h8.8v0s0b1T	
Troy ECF	<esc>(3Q<esc>(s1p<height>0v0s0b0T <esc>(3Q<esc>(s1p18v0s0b0T	
Troy LCF	<esc>(1Q<esc>(s0p5.01h16.0v0s0b0T	
Troy SCF	<esc>(2Q<esc>(s0p6.00h22.0v0s0b0T	