
INSTRUCTIONS FOR MODELS

SA-1607

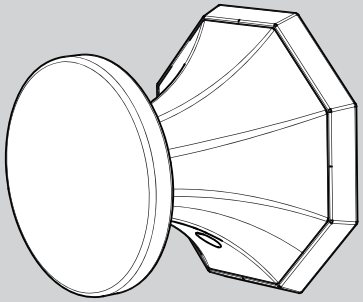

NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company
400 Anchor Mill Road
New Castle, DE 19720


800-537-2107

customerservice@speakman.com

www.speakman.com

92-SA-1607-02

TOOLS AND SUPPLIES

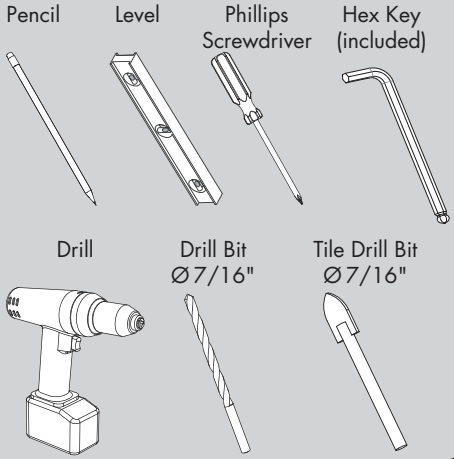

⚠ IMPORTANT ⚠

- Do not over-tighten any connections or damage may occur.
- Be sure to read instructions thoroughly before beginning installation.

SAFETY TIPS

Be sure to wear eye protection while cutting pipe.


MAINTENANCE

Your new Speakman Product is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. The use of harsh chemicals and abrasives on any of the Speakman custom finish products may damage the finish and void the product warranty. Please be sure to only use approved cleaners. Please contact Speakman for any clarification of acceptable cleaners.


WARRANTY

Additional warranty information can be found at: www.speakman.com

1 Align Mounting Plate as shown below. Mark Mounting Screw locations onto the wall surface. Remove items after marking mounting locations.

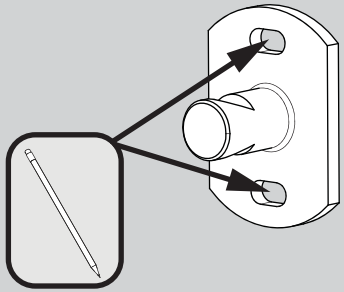


2 If mounting directly to wood structure, secure the Mounting Plate to surface with supplied Wood Screws.

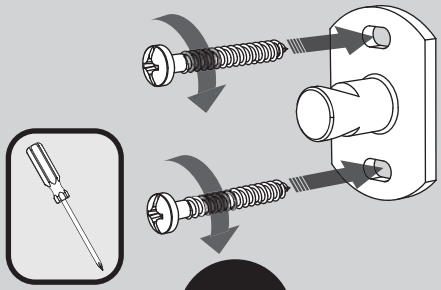


OR


3 Select proper drill bit for mounting location. Drill 7/16" holes in marked locations.

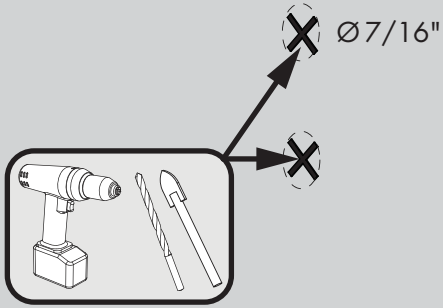


4 Loosely assemble Toggle Bolts thru Mounting Plate.

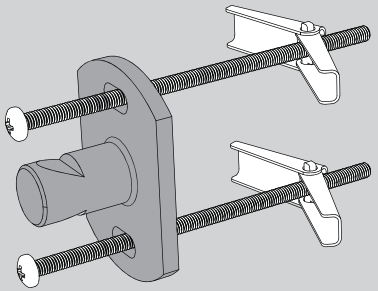


5 Insert Toggle Bolts thru drilled holes in wall. Secure Mounting Bracket to wall by tightening Screws.

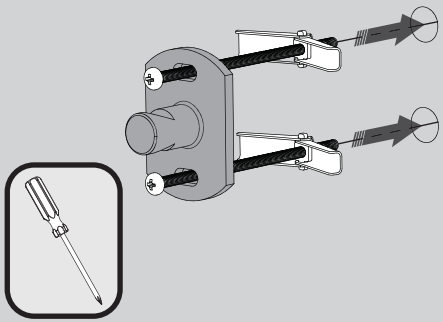

6 Place Accessory over Mounting Bracket and secure with the included Hex Key.

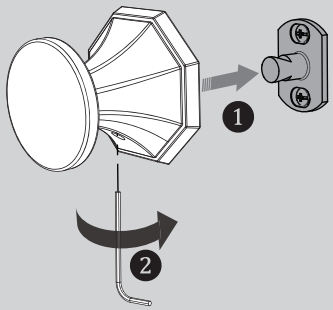


SA-1607 REPAIR PARTS

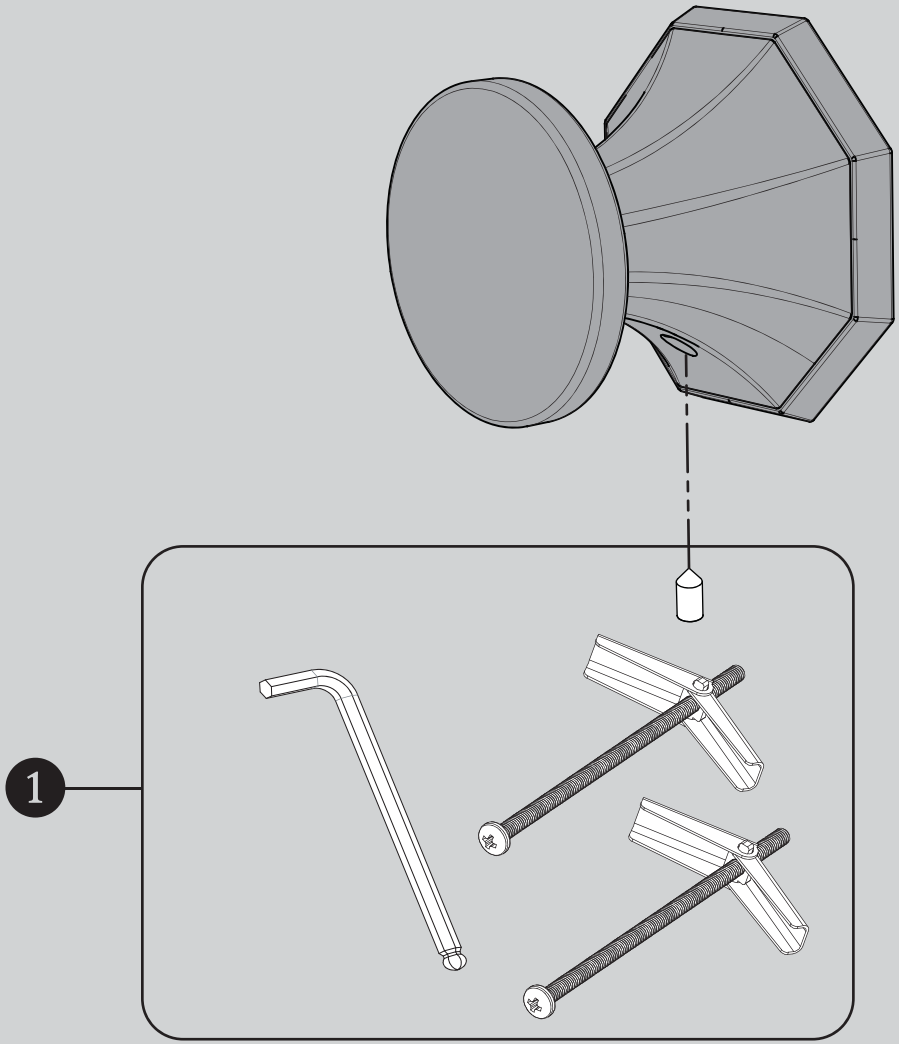

ITEM NO.	PART NO.	DESCRIPTION
1	RPG05-0977	MOUNTING HARDWARE

SA-1607 ROUGH-IN DIAGRAM

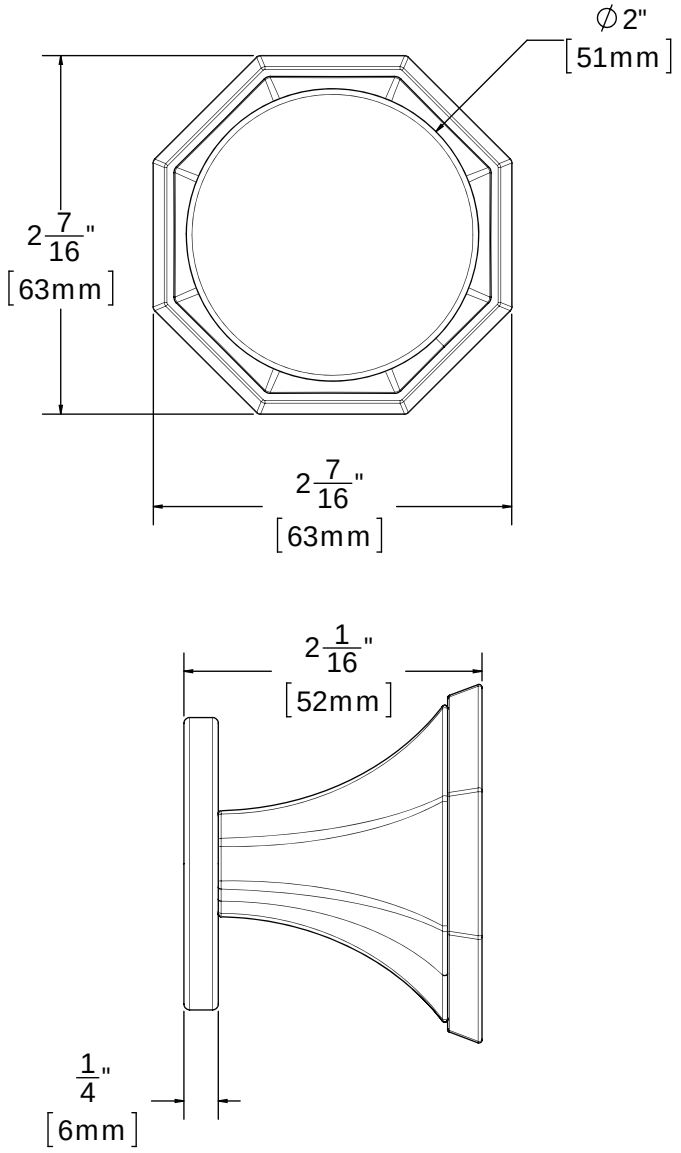

DIMENSIONS SUBJECT TO CHANGE WITHOUT NOTICE.