

INSTRUCTION

1) Insert the plastic spokes at each hour with the front side of the spoke toward the numbers on the dial.

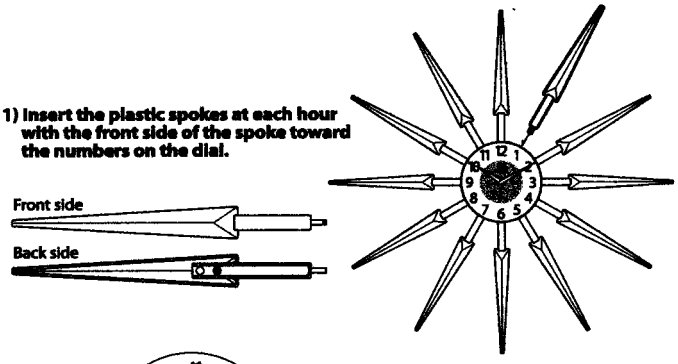


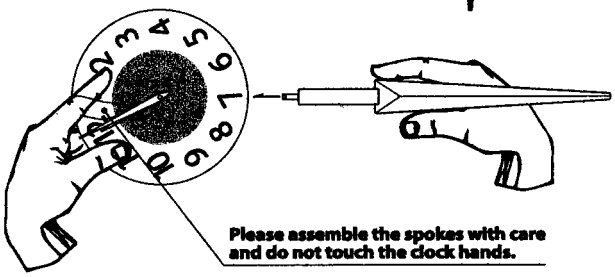

Please assemble the spokes with care and do not touch the clock hands.

2) Remove the battery compartment cover.

The hand set knob is located on the back of the movement hub under the battery compartment cover.

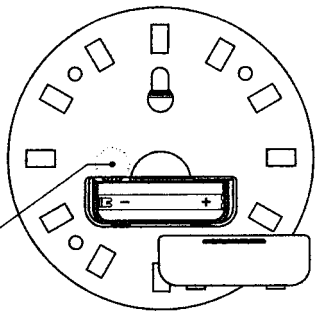

Insert one 1.5 volt "AA" battery (Alkaline Batteries are recommended) in the battery compartment. Be sure that the (+) positive and (-) negative terminals correctly match with the symbols on the battery compartment. The battery should be replaced every year.
Set hands to correct time by rotating the hand set knob on the rear of the movement.

Remarks :

Please avoid placing the instrument exposed to direct sunlight for extended period of time as this will affect the functionality and the outlook of Your new time piece.

When your clock starts to lose time, please replace the battery. Failing to remove old batteries can damage your clock. Should your clock experience any problems within the warranty period, please call 888.346.9544 for assistance. Please do not return your clock to the store.

Printed in China