

30/36" Round Pedestal Assembly Instructions

Tools Required

- 10 mm Wrench (30")
- 13 mm Wrench (36")

Instructions

1. Remove the base, poles, and hardware bag from the box.
2. Insert the spring into the pole assembly from the bottom. Insert the spring grommet to hold the spring in place (**Figure 1**).
3. Line up the round holes on the pole mounting plate—found at the bottom of the poles—with the round holes in the base.
4. Insert the five (5) M6 flanged bolts (30") / five (5) M8 bolt, lock washer and flat washer (36") through the holes on the base plate and into the welded nuts attached to the base plate (**Figure 2 & Figure 3**).
5. Tighten the bolts to the nuts using a 10 mm wrench (30") / 13 mm wrench (36").
6. Lay the base on the floor so the poles are pointed upwards.
7. Mount the fan to the inner pole of the pedestal.
8. Adjust the desired height by loosening the clamp in the collar.

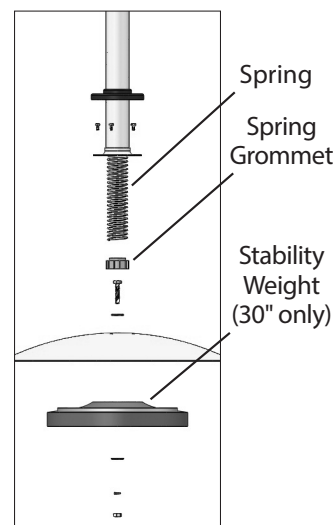


Figure 1


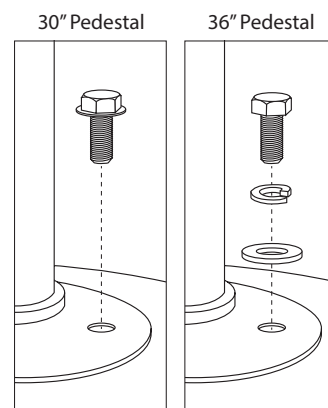


Figure 2

Figure 3



WARNING
Once the clamp is loosened, the inner pole is free to move. Ensure you have a firm grip on the inner pole.

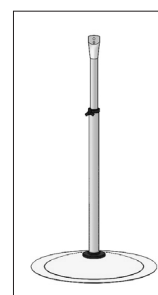

Completed Assembly



Sauk Rapids, MN 56379 USA • Toll Free (800) 779-3267
Fax: 320-251-2922 • Web: www.pinnacleclimate.com • Email: info@pinnacleclimate.com