

MT1250XL

MOUNTAIN PURE® POINT OF USE CARBON FILTRATION SYSTEM - INSTALLATION SHEET



PARTS INCLUDED:



5 FT OF 3/8" TUBING



ANGLE STOP TEE




7/16 UNS ADAPTER

Specifications:

- Flow Rate: 0.5 GPM (1.9 LPM)
- Pressure: 10-125 psi (0.7-8.6 bar) non-shock
- Temperature: 35-100 °F (2-38 °C)
- Cold water use only
- Capacity: 1250 gal (4,732 L)
- Installation shall comply with applicable state and local regulations

Installation Instructions

1. TURN OFF THE COLD WATER INLET STOP. OPEN COLD WATER SIDE OF KITCHEN FAUCET TO RELIEVE PRESSURE.
2. UNSCREW THE FAUCET COLD WATER INLET HOSE FROM STOP.
3. INSTALL THE MT1250XL FILTER SECURELY IN A LOCATION WHERE THE 3/8" TUBING CAN BE ATTACHED WITHOUT KINKING. MAKE SURE TO LEAVE AT LEAST 2" OF CLEARANCE BELOW FILTER IN ORDER TO REMOVE DURING FILTER REPLACEMENT.
4. SCREW ON THE ANGLE STOP TEE TO THE COLD WATER INLET STOP. DO NOT CONNECT THIS FILTER TO THE HOT WATER SUPPLY!
5. MEASURE AND CUT THE 3/8" TUBE FROM THE ANGLE STOP TEE TO THE FILTER INLET.
6. PUSH THE 3/8" TUBE ALL THE WAY INTO THE ANGLE STOP TEE AND FILTER INLET.
7. SCREW ON THE 7/16 UNS ADAPTER TO THE WATER DISPENSER'S MOUNTING SHAFT.
8. MEASURE AND CUT THE 3/8" FROM THE FILTER OUTLET TO THE ADAPTER.
9. PUSH THE 3/8" TUBE ALL THE WAY INTO THE ADAPTER AND THE FILTER OUTLET.
10. VERIFY ALL HOSES ARE PUSHED IN ALL THE WAY. OPEN THE COLD WATER INLET STOP SLOWLY, ALLOWING THE SYSTEM TO PRESSURIZE.
11. OPEN THE WATER DISPENSER SLOWLY ALLOWING THE FILTER TO FILL COMPLETELY. CHECK FOR LEAKS.
12. RUN WATER FOR 5-10 MINS TO FLUSH AND PREPARE FILTER.

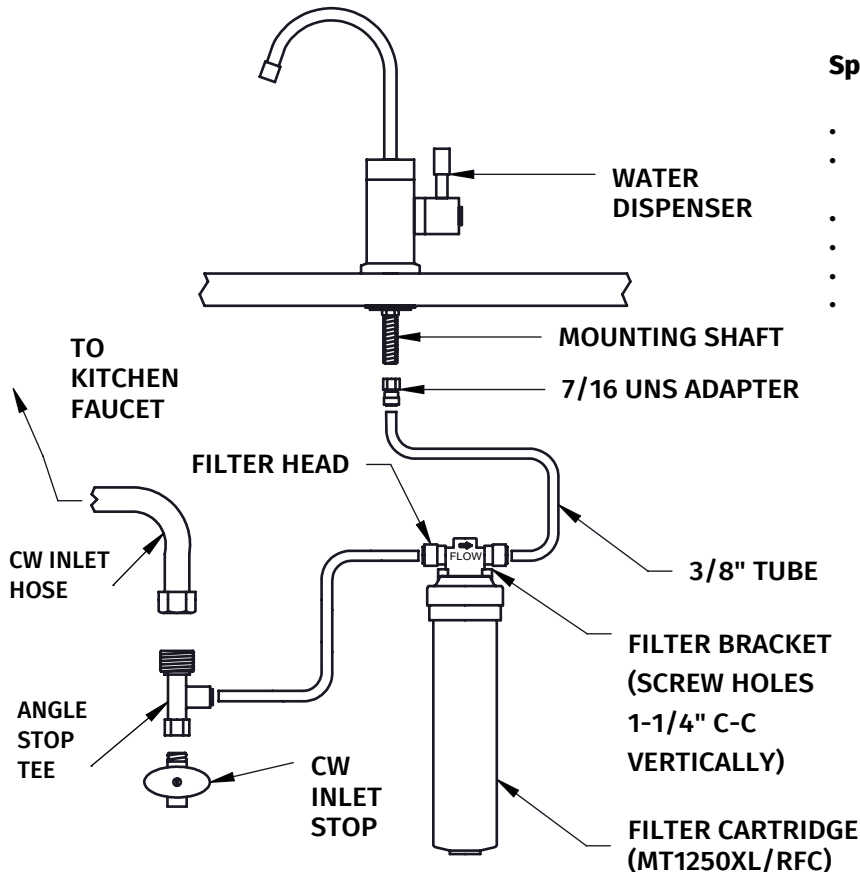

Features & Benefits
System tested and Certified by NSF International against NSF/ANSI Standard 42 and 53 for the reduction of:

Standard No. 42 Aesthetic Effect:
Chemical Reduction
Taste & Odor
Chlorine
Mechanical Filtration

Standard No. 53 Health Effects:
Chemical Reduction
Lead
Mechanical Filtration
Cyst

L5515-P

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE
www.mountainplumbing.com 972-456-3273 fax 972-456-2719

MANUFACTURED BY OMNIPURE FILTER COMPANY, INC.
1904 INDUSTRIAL WAY, CALDWELL, ID 83605