





Cabinet Knobs Installation Instructions

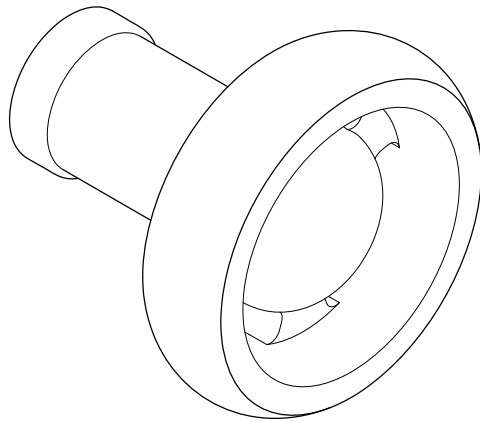

Parts:

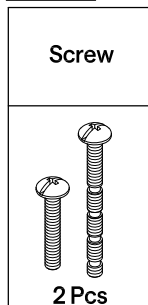

www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710

CAUTION

Failure to follow all installation directions may
cause product to detach from the wall and
cause serious injury

Tools Required

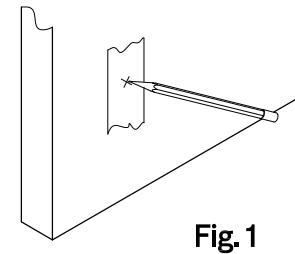
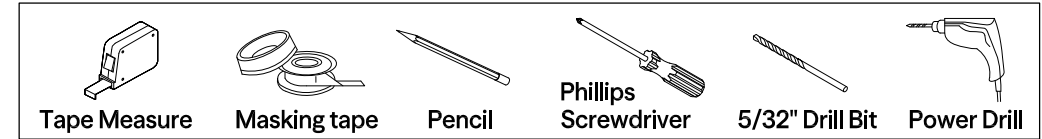


Fig. 1

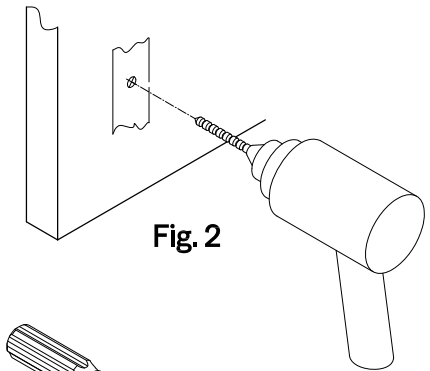


Fig. 2

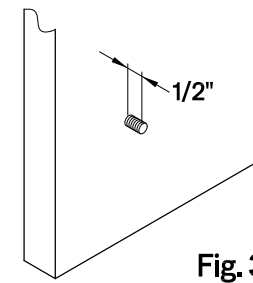


Fig. 3

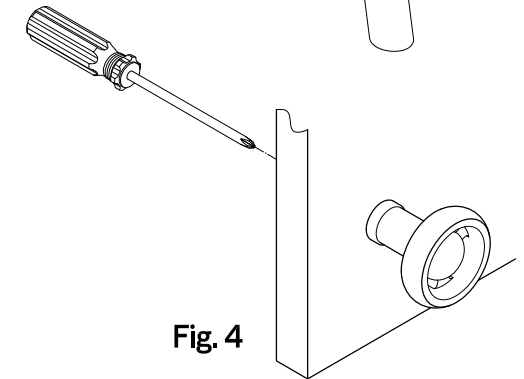


Fig. 4

Installation Steps:

- Step 1. Select the location where you would like to install your knobs. Apply a piece of masking tape on both sides of the cabinet door or drawer front in the general area, and mark the location for the hole (Fig. 1).
- Step 2. Carefully drill a 5/32" hole at the marked location and remove the tape (Fig. 2).
- Step 3. Your KINGSTON cabinet knob includes a 1" and a 1-3/4" screw with break-off sections. Determine the size of the screw needed, ensuring that 1/2" of threads protrude from the face of the cabinet or drawer front. Insert the screw from behind, breaking off the necessary section to achieve the desired length (Fig. 3).
- Step 4. Thread the knob onto the screw while holding it in place from the back with a screwdriver, do not overtighten (Fig. 4).

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.