


Congratulations on your purchase of a beautiful new vanity proudly made in America. We hope you are delighted with the style and quality for many years to come.

For maximum flexibility, your vanity top is manufactured with a single hole for faucet mounting. Your top can be easily modified to accept alternate faucet configurations that require more mounting holes. Common configurations may require three holes that are on 4-inch centers or 8-inch centers.

Using a tape measure or ruler, carefully mark the locations of the additional holes as needed. For example, for a faucet that requires three holes on 4-inch centers, measure and mark the locations of the additional holes at 2 inches from the center of the existing hole.

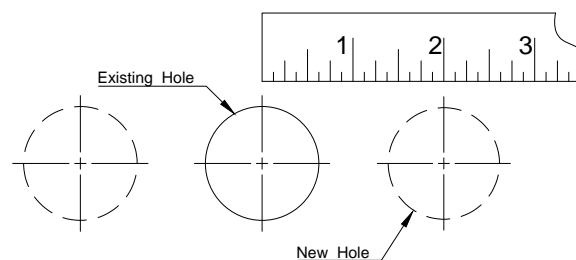

Using a standard 1-3/8" hole saw with a pilot drill such as the one pictured below, carefully drill the additional holes at the locations you have marked. Be careful to hold the hole saw perpendicular to the vanity top while starting and drilling to prevent the saw from walking away from the intended location, and to prevent the saw from binding in the hole while drilling. Binding could cause the new hole to chip or fracture. Use light pressure while drilling and let the tool do the work.

