

# INSTALLATION INSTRUCTIONS

PREMIER SERIES — RECESSED MOUNTED

## Product Information

Recessed Dual Door Premier Features:

- Brushed Aluminum Body
- Cabinet Style Hinges
- Adjustable Glass Shelves
- Mirrored Interior



---

\*\* Professional Installation is recommended to insure proper installation.

\*\* Door removal is recommended, but not required for installation.

\*\* Doors are mounted on 6-way self closing adjustable hinges. This allows for the doors to be adjusted once installed. Please adjust height and side to side to align doors properly.

\*\* Please do not stand your medicine cabinet on end while unboxing. Lie the cabinet down mirror side up prior to installation. Set on a clean surface, like a towel or carpet to avoid damage.

\*\* Prior to discarding the packaging, locate shelves, door hardware, and screws where applicable.

---

## Installation Steps

1. Make sure the opening is plumb and level. A square and plumb installation insures proper operation of door. (Figure 1)
2. Make sure there is at least 1" of clearance above any obstructions (Figure 2)
3. Make sure the hinges are on correct side of opening for left hand or right hand operation. Place the medicine cabinet into rough wall opening. Make sure the cabinet flange covers rough wall opening evenly all around. (Figure 3)
4. Insert four wood screws into four locations provided for recessed installation. Be careful not to overtighten. Make sure cabinet is centered in rough wall opening. (Figure 4)

Shelf Installation: (Figure 5)

1. Insert the shelf brackets into the holes situated on the side wall of the cabinet.
2. Put the shelf (A) on top of the shelf brackets, then press the shelf down (B).

## NOTICE:

1. Do not install cabinet with damaged or broken glass. Contact the point of sale for further instructions on replacements.
  2. The installation instructions provided are for typical drywall/wood stud type walls. Additional hardware may/will be required for different wall types. Always make sure you adequately brace the cabinet for secure installation. Do not screw directly into drywall without proper bracing.
-

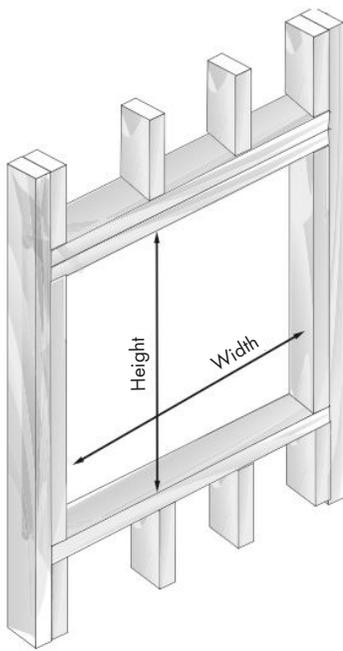


Fig. 1

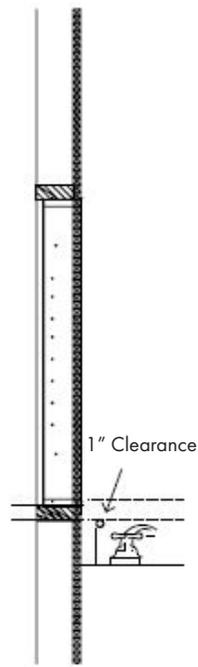


Fig. 2

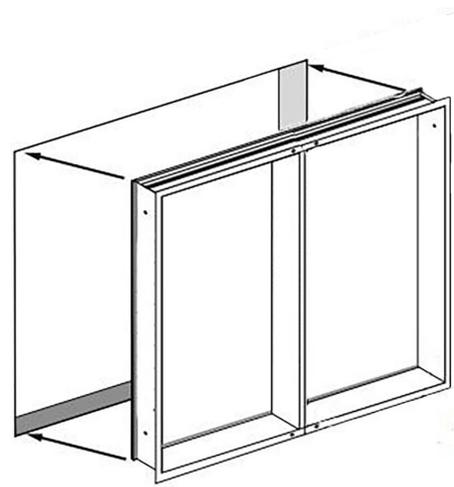


Fig. 3

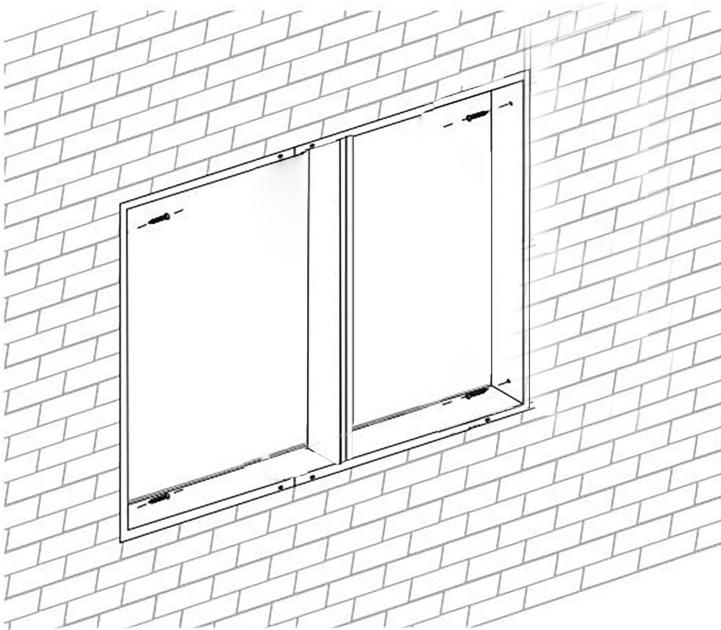


Fig. 4


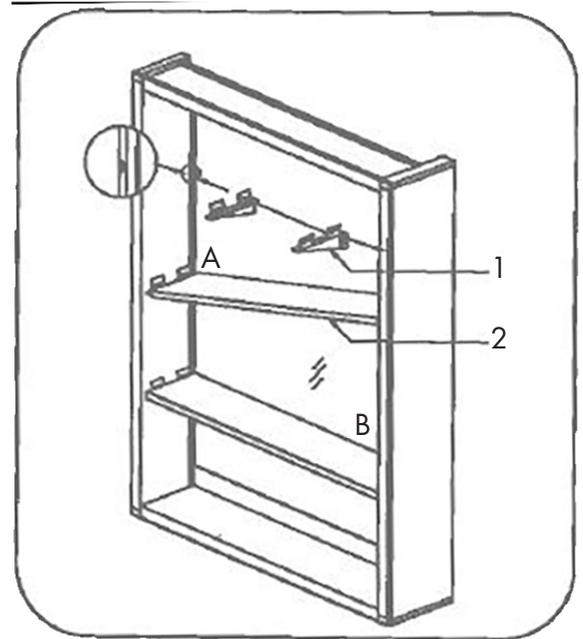


Fig. 5

**Door Adjustment Sketch**

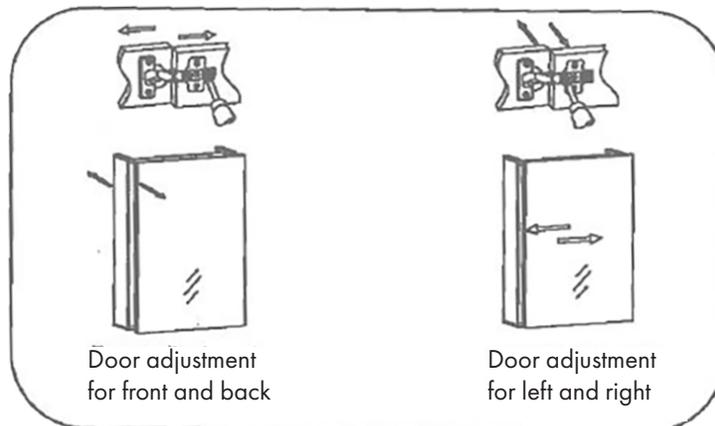

Door adjustment for front and back

Door adjustment for left and right