

# Duramax® Total Erase White Board Accessory


## Assembly Instructions

### Hardware Kit:

4x No. 6 x 1/4" Screw



1x Corner Cap Left



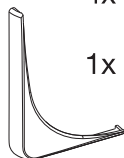


1x Corner Cap Right




### Tools needed for assembly:

Phillips Screwdriver

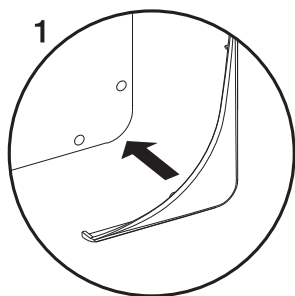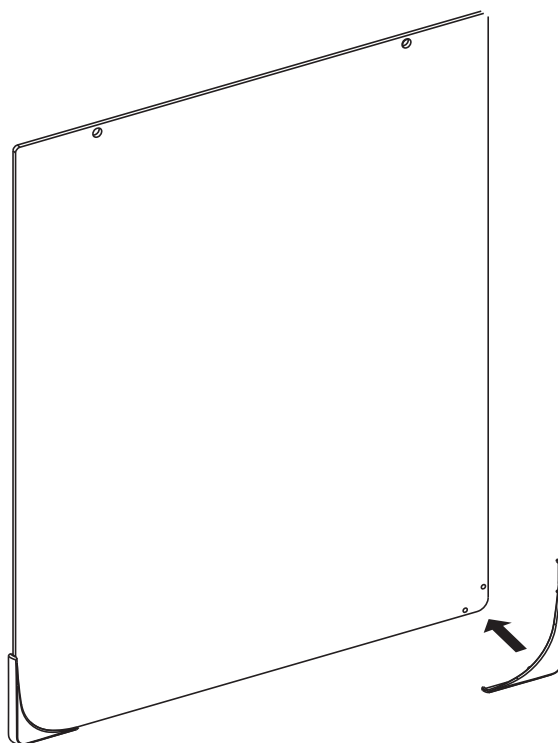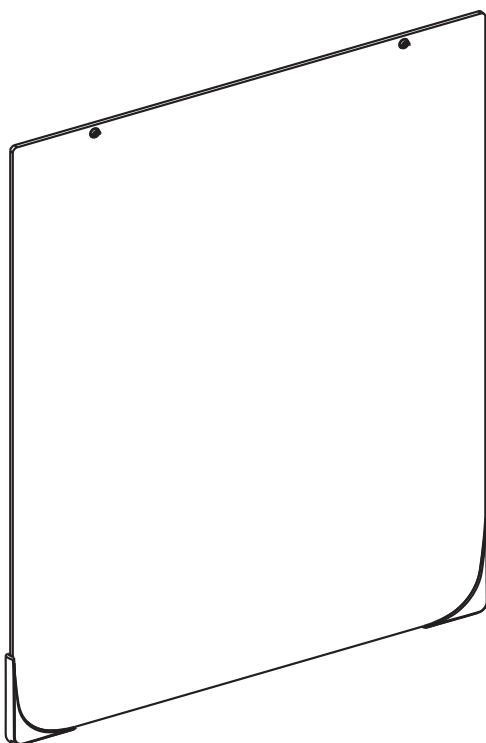

1. Insert left and right corner caps into bottom holes in front of board.

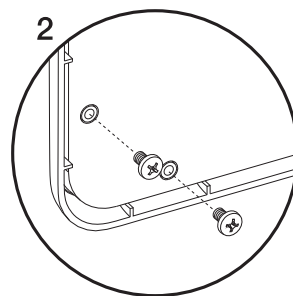

2. Attach each corner cap with (2) no. 6 x 1/4" screws.