


Quick Mount Kit For Van Ramps

This bolt pattern is **ONLY A SUGGESTED** pattern. We do not know where the fuel lines, brake lines, spare tire, etc. are located under your vehicle. The bolt positions for your ramp installation may need to be modified for your particular vehicle and space.

Handi-Ramp is NOT LIABLE for any damage done during installation.

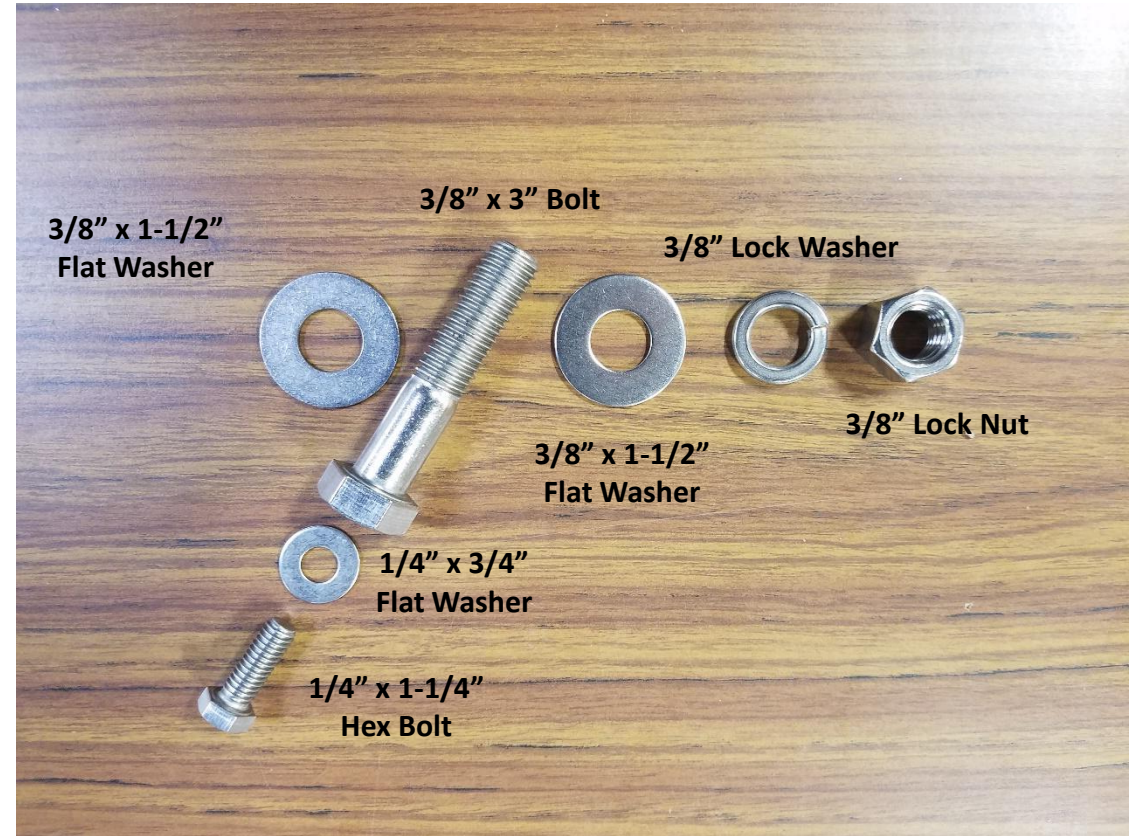

All mounting shown included in Quick Mount Kit

Use: 6 – 3/8" x 3" Bolts

Use: 12 – 3/8" Flat Washers

Use: 6 – 3/8" Lock Washers (Underside of Van)

Use: 6 – 3/8" Nuts (Underside Of Van)

