



NOTES:

- 6 USE SHADED HOLES TO MOUNT BOWLS AT INDICATED POSITIONS.
- 7. REFER TO SHEET 1 OF 2 NOTE 5, FOR INSTALLED FOUNTAIN DIMENSIONS.
- 8 INSERT 5/16"-18 PANEL NUT RETAINERS FROM OPPOSITE SIDE AT LOCATIONS INDICATED (SHOWN BY DARKENED HOLES). USE THE UPPER OUTERMOST HOLES ON THE LEFT AND LOWER OUTERMOST HOLES ON THE RIGHT.
- 9 TO INSERT OR REMOVE NUT RETAINERS: SNAP NUT RETAINERS INTO INDICATED LOCATIONS. IF REMOVAL IS REQUIRED, FIRST REMOVE SCREWS AND THEN SQUEEZE CLIPS ON NUT RETAINER TO POP OUT.
- 10 ALIGN HOLES IN CHILLER SUPPORT TRAY WITH HOLES IN FRAME AND FASTEN WITH #10 SHEETMETAL SCREWS (SEE SHEET 1).

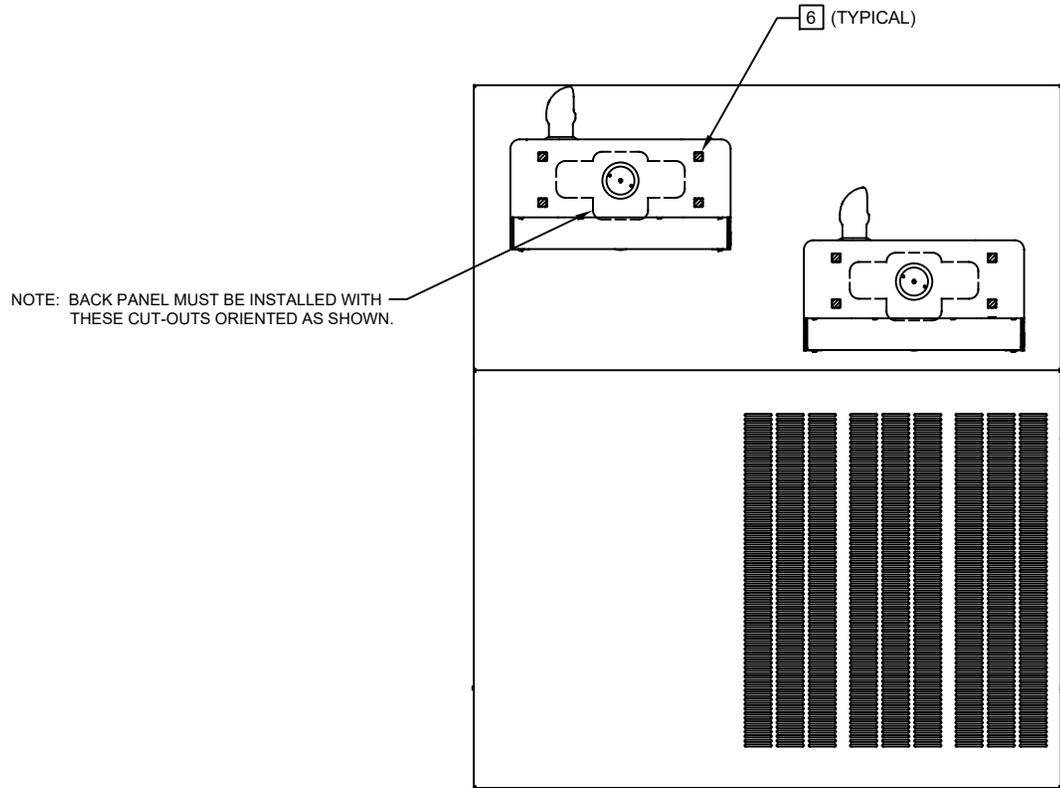

BOWL MOUNTING LOCATIONS

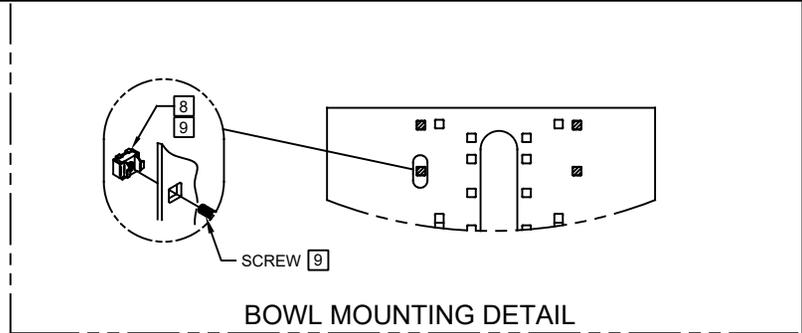

1455 KLEPPE LANE
SPARKS, NEVADA 89431
(775) 359-4712 FAX (775) 359-7424
E-MAIL: HAWS@HAWS.CO.COM
WEBSITE: WWW.HAWS.CO.COM

ECN NO. 5671	REVISED PER ECN: 5671	BY: DP	MODEL(S) H1117LN.8	PART NUMBER 0510001192.D
DRAWN: DP	DATE: 03/24/21	CHK'D: FV		REVISION 2
APPROVED: DP	DATE: 06/21/21	SCALE: N/A	DRAWING TYPE: INSTALLATION	SIZE: A SHEET 2 OF 2