


LBR3024, LBR3524, LBR4724, VBR3524, VBR4724 - INSTRUCTIONS

Organize your parts and hardware.

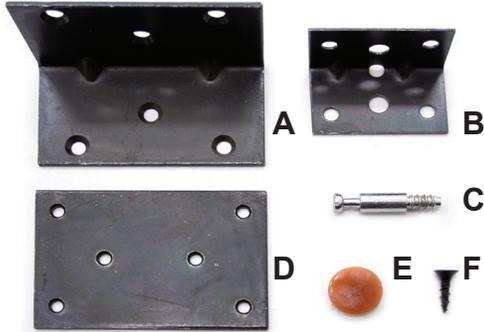

Hardware should include:

- A) 2 Large L-Brackets
- B) 2 Small L-Brackets
- C) 3 Cam Pins
- D) 4 Flat Brackets
- E) 3 Cam Covers
- F) 48 Screws



Wooden Components include:

- G) 1 Bridge Top
- H) 1 Modesty Panel



NOTE: 3 Cams (shown in Step 2) should already be placed in Modesty Panel.

Tools Required: Phillips Screwdriver

Step 1: Thread Cam Pins (C) into Small holes in Bridge Top (G) with screwdriver.



Step 2:

Check Cams to make sure that the arrow is pointing toward the hole in the side as shown.



Step 3: Insert Pins (C) on Top (G) into holes in Modesty Panel (H); rotate Cams clockwise to lock in place.



Step 4: Attach Small Brackets (B) as shown, using 6 Screws (F) each.



Step 5: Attach Large Brackets (A) as shown, using 6 Screws (F) each.



Step 6: Attach Flat Brackets (D) as shown, using 6 Screws (F) each.



IMPORTANT NOTE: Large Brackets (A) and Flat Brackets (D) are used to attach the Bridge to your Desk Shell and Credenza, creating a U-configuration. Make sure Brackets are securely attached to all components with Screws (F).

Step 7: Place Caps (E) over Cams.



This completes Bridge assembly. Bridge can not be used alone; it must be securely attached to a Desk Shell and Credenza. See IMPORTANT NOTE above.



IMPORTANT NOTICE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until completely assembled.
- Keep all hardware parts out of reach of children.